

AXE MASTER

OWNER'S MANUAL





IMPORTANT

- Please read the manual carefully and keep it in mind before using this machine.
- Put this manual within touch of your reference in anytime.


1. SPECIFICATION AND DIMENSIONS

1-1. DIMENSIONS

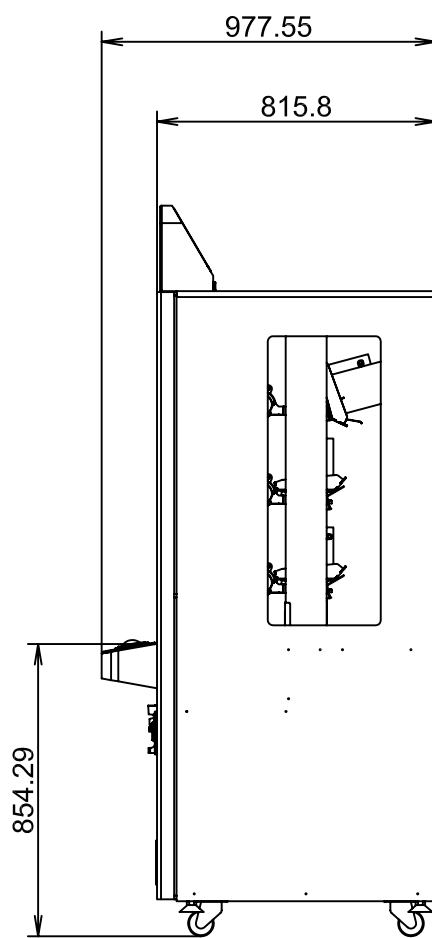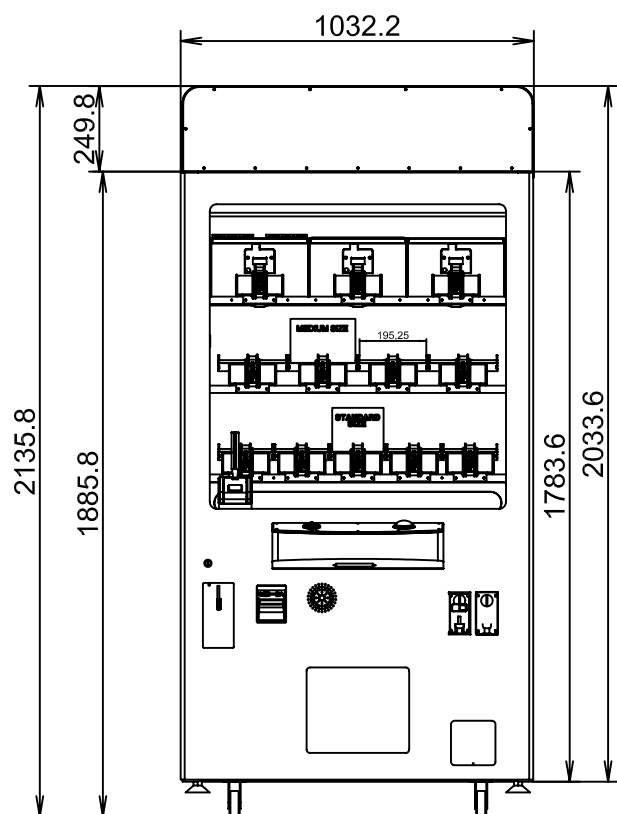


1-2. SPECIFICATION

NOMINATED VOLTAGE RANGE	AC 120V/220V
NOMINATED FREQUENCY RANGE	50Hz ~ 60Hz
AVERAGE POWER CONSUMPTION	335W
MAXIMUM POWER CONSUMPTION	400W
WEIGHT	292Kg(644Lb)

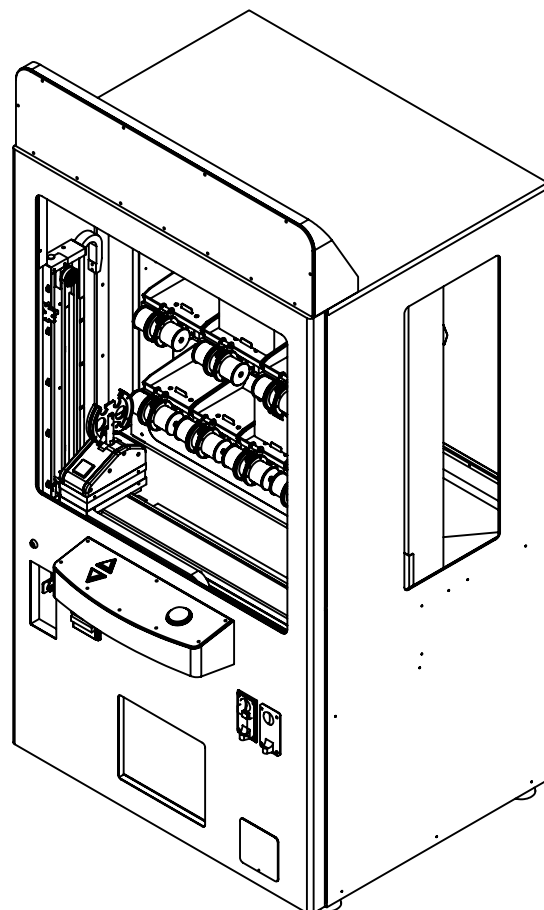


2. NAME OF PARTS & STICKER LOCATION


2-1. NAME OF PARTS

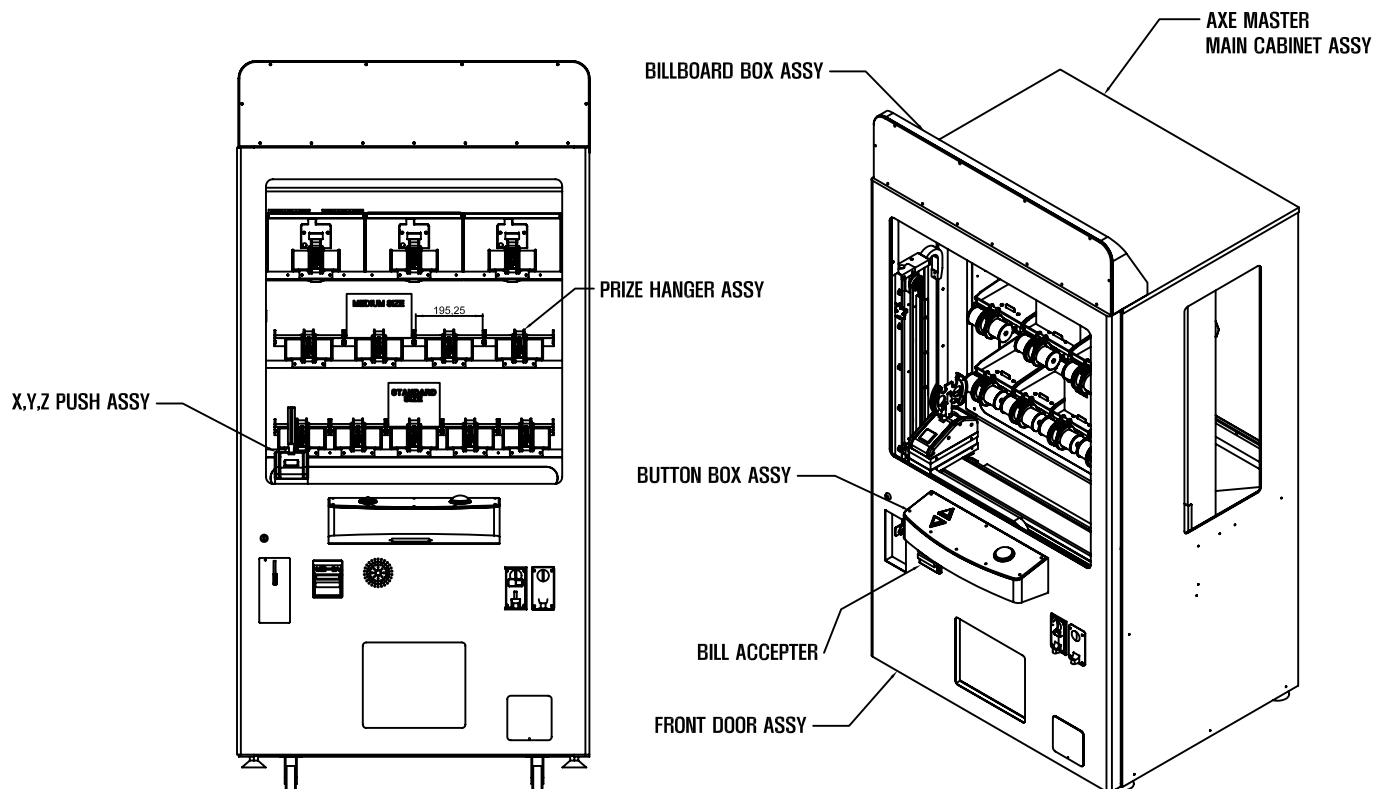


2-2. STICKER LOCATION

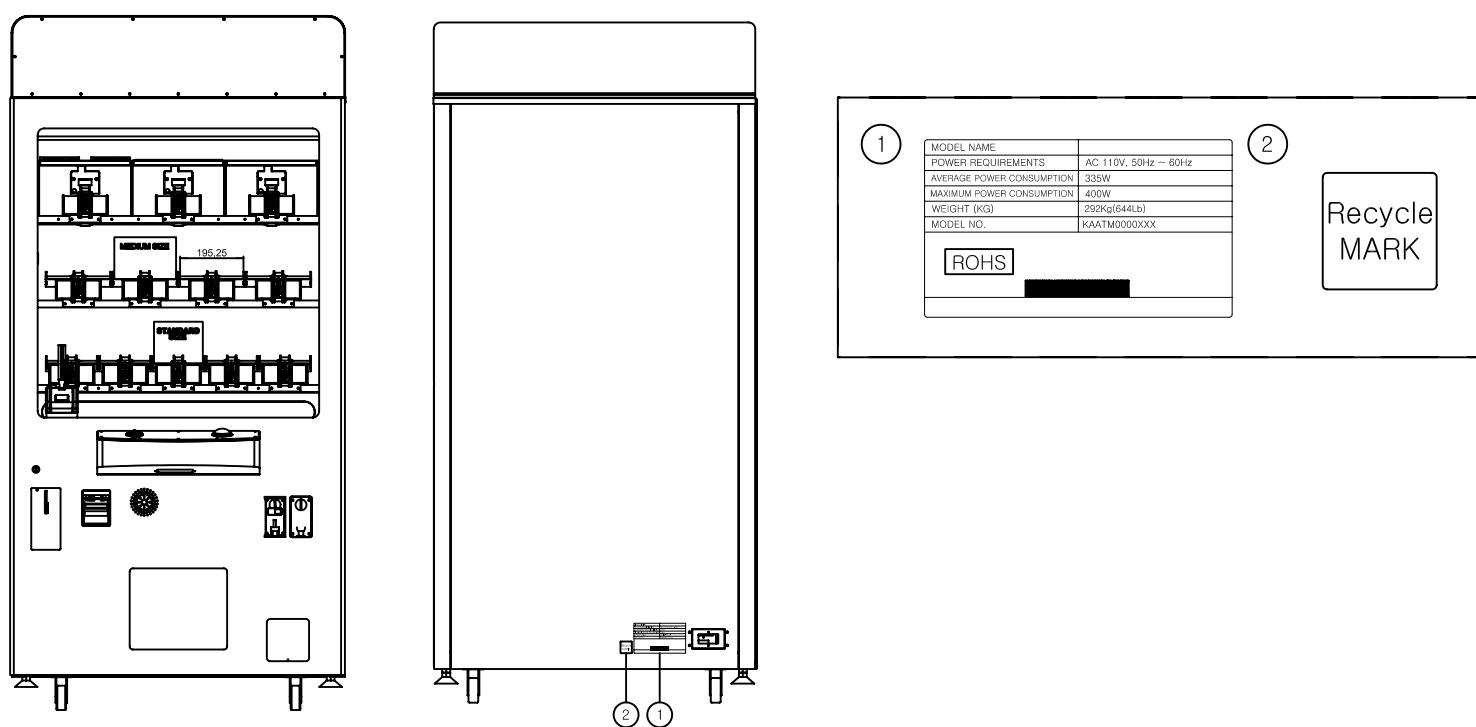

3. COMPONENTS

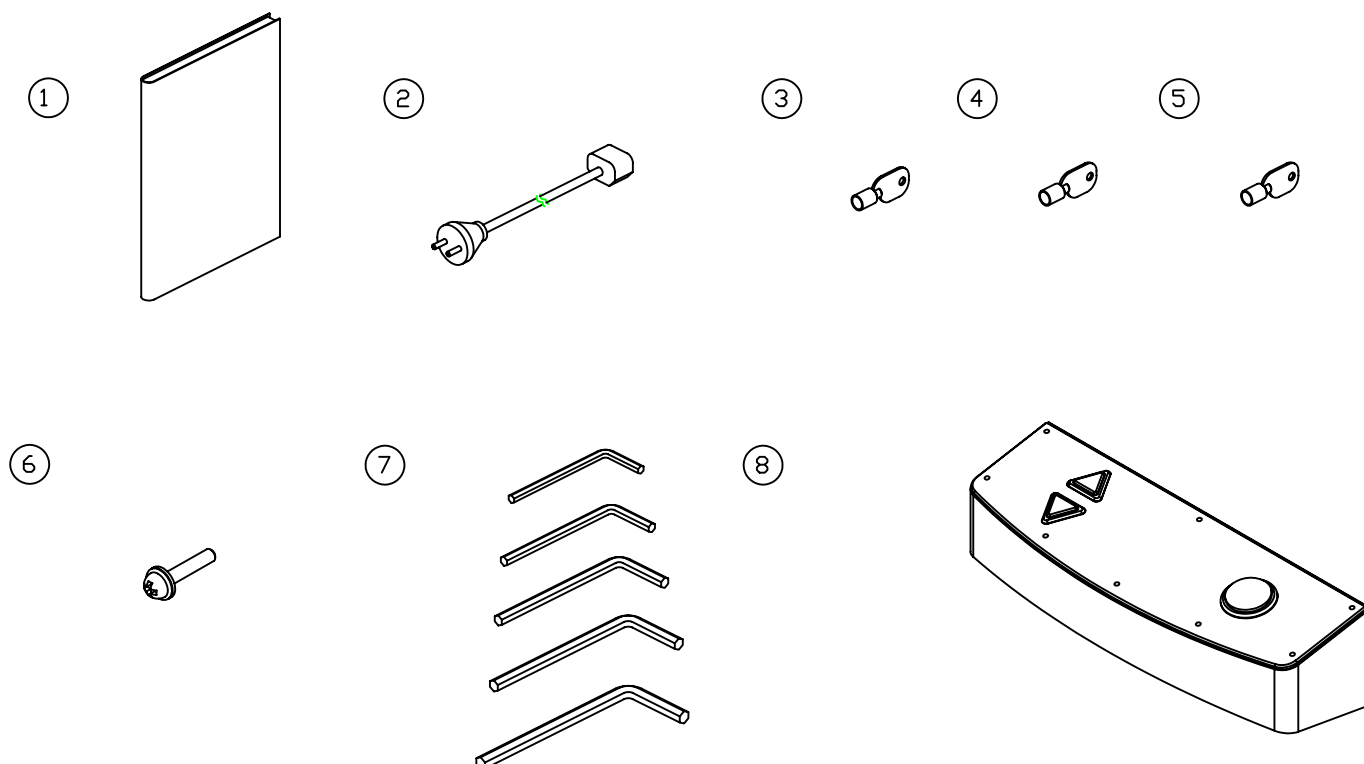


NO.	PART NAME	SPEC.	QUANTITY	CODE NO.
1	MANUAL	MANUAL	1	MKEM0000002
2	AC POWER CORD	125V-7A(0.75)UL	1	MELE0ACP001
		250V-10A(0.75)UL		MELE0ACP008
		250V-13A(0.75)UL (UK ONLY)		MELE0ACP005
3	FRONT DOOR KEY	7001	2	-
4	FRONT DOOR PUSH KEY	8001	2	-
5	CASH BOX KEY	6001	2	-
6	BOLT	M4x12L	9	-
6	WRENCH	1.5mm	1ea	MXXXOREN007
		2mm		MXXXOREN003
		2.5mm		MXXXOREN001
		3mm		MXXXOREN004
		4mm		MXXXOREN002
7	BUTTON BOX ASSY	-	1	MKEMOMEPO04

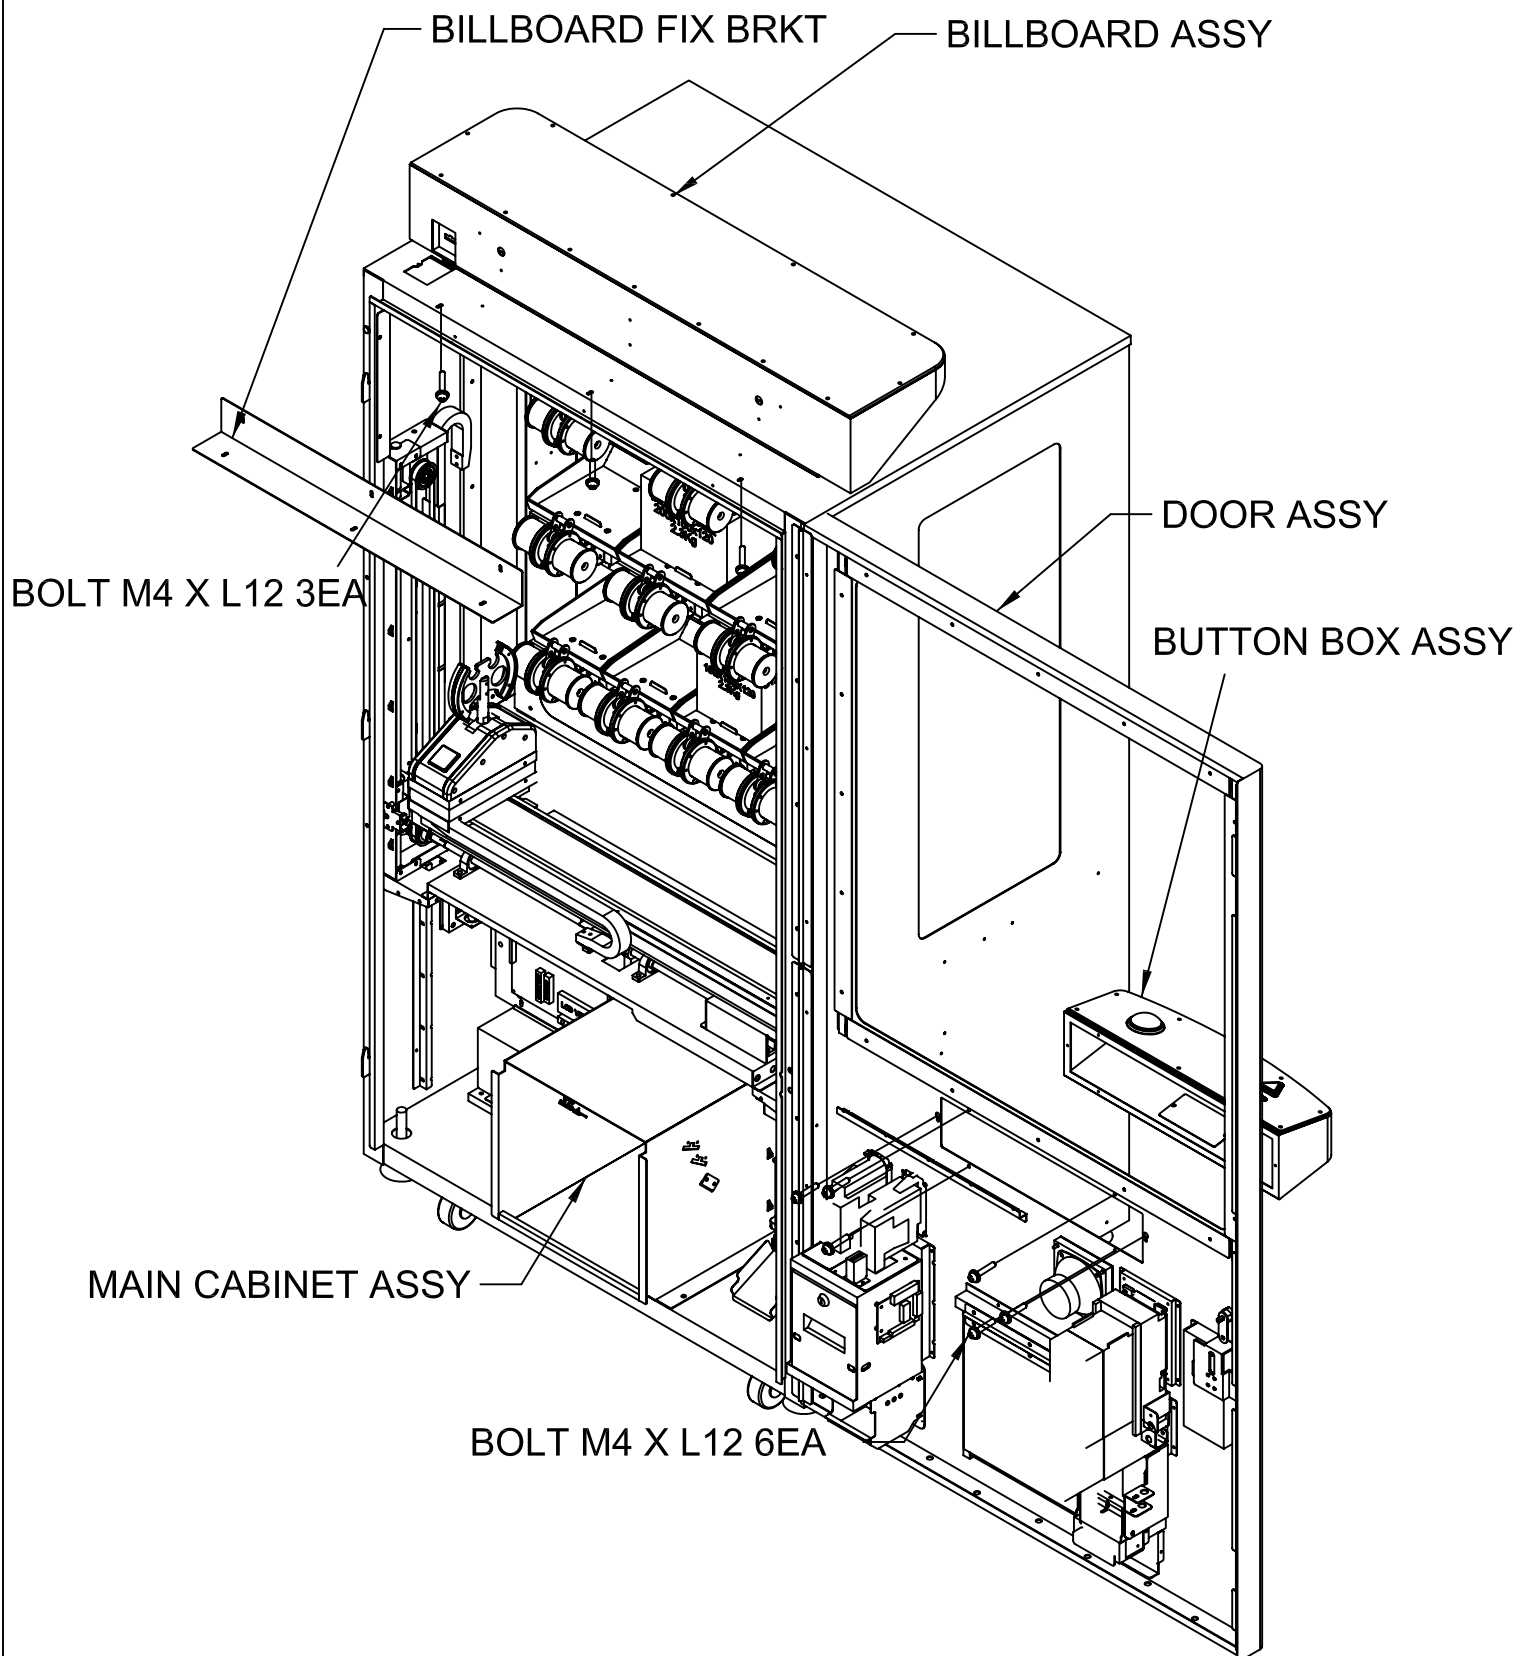


1. Connect the **BUTTON BOX ASSY** Harness as shown above.
2. Assemble the **BUTTON BOX ASSY** with enclosed bolts 6EA (M4 x 12L) to the **FRONT DOOR ASSY**.
3. Assemble the **BILLBOARD ASSY** with enclosed bolts 3EA (M4 x 12L) to the **MAIN CABINET ASSY**.

6.5 Error mode

 
PLAY FND



 
— Error with prize motor or open switch.



 
— Error with prize motor or close switch.



 
— Error with Push motor or Succes sensor.




— Error with Push motor or Fail sensor.

 


— Error with Push motor or Home sensor.

 

 
— Error with Y axis motor or down sensor.




— Error with Y axis motor or up sensor.

 

 
— Error with Y axis motor or encoder sensor.



 — Error with stepping motor or Left sensor.



 — Error with stepping motor or right sensor.



— Error with Calibration .



Copyright © KOMUSE CO., LTD. All Rights Reserved.

Sega Amusements U.S.A., Inc.

800 Arthur Avenue, Elk Grove Village, IL 60007-5215 U.S.A

Telephone: +1-847-364-9787

Toll free: +1-888-877-2669

Facsimile: +1-847-427-1065

<http://www.segaarcade.com>

Sega Amusements Europe Ltd.

42 Barwell Business Park, Leatherhead Road, Chessington, Surrey. KT9 2NY UNITED KINGDOM

Telephone: +44 (0) 208-391-8081

Facsimile: +44 (0) 208-391-8099

© SEGA

All manufacturers, cars, name, brands and associated imagery featured in this game are trademarks and/or copyrighted materials of their respective owners. All rights reserved.