

Sound Leisure Limited Jukeboxes



Distributed by:

Innovative Concepts in Entertainment, Inc.

 
10123 Main Street, Clarence, NY 14031

Service: 1 (716) 759 - 0360

Fax: 1 (716) 759 - 0884

E-MAIL: service@icegame.com

WEBSITE: www.icegame.com

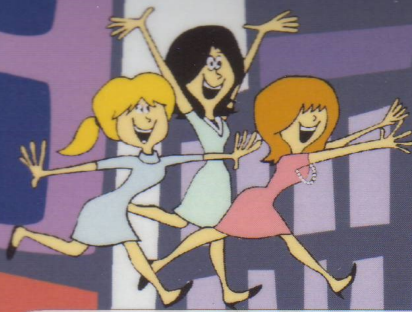

Dear Customer,

You are now the proud owner of one of Sound Leisure's hand-built Jukeboxes from Lordsvale.

Sound Leisure genuinely take great pride in their labours, and all their efforts are focussed on producing musical masterpieces to grace the finest locations.

Sound Leisure are Great Britain's sole licensed Jukebox manufacturer, with their cabinet shop, engineering and assembly plant, employing over 100 craftsmen all dedicated to producing high quality sound equipment.

Thank you for choosing a Sound Leisure Jukebox. I am sure all your family and friends will enjoy many years of happy musical entertainment from their machines.

Mike Ansell
Director - Lordsvale

LORDSVALE

Tel: +44 (0)1482 609509 Fax: +44 (0) 1482 609626
Unit 1C Therm Road, Hull England HU8 7BF




Apple Corps. Ltd.

**THE
BEATLES**



soundleisure
www.soundleisure.com

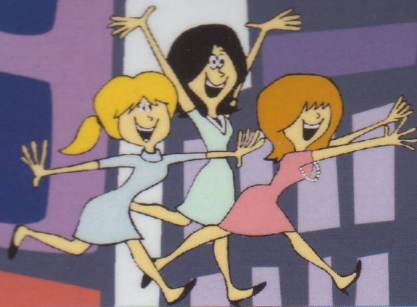

WARNING

HEALTH & SAFETY MESSAGE

Congratulations, you are now the owner of a hand built Sound Leisure Jukebox, supplied by Lordsvale.

Please read and remember the following points.

1. Sound Leisure Jukeboxes are manufactured as a commercial system for music venues worldwide. They must be maintained only by fully competent technicians. Failure to observe this will result in termination of guarantees and warranties.
2. The Jukebox operates on A.C. mains voltage. Every precaution has been taken to ensure internal dangerous voltages are protected and guarded, however, we cannot cover every eventuality. Please ensure that the front door is always locked and the key removed so inquisitive children do not have the opportunity to injure themselves through curiosity.
3. The laser disc mechanism is a hard working but delicate piece of equipment and must not be touched other than to load and replace the discs. Permanent damage may occur to the laser optical system if electrostatic discharges occur through handling by unqualified personnel.
4. If the machine is ever to be moved to a new location please ensure that the disc mechanism is secured by tightening the four wing-nuts below the shelf, and the disc player is secured with the transit rod, and that the operating switch inside the cabinet on the right-hand side is in the transit position. The title strip must also be held in position with the transit bar.

LORDSVALE

Tel: +44 (0)1482 609509 Fax: +44 (0) 1482 609626

Unit 1C Therm Road, Hull England HU8 7BF



Apple Corps. Ltd.

THE
BEATLES



 
soundleisure
www.soundleisure.com

SET UP INSTRUCTIONS-NOSTALGIA JUKEBOX.


IMPORTANT INSTRUCTIONS:

Before powering up the jukebox please follow the instructions below or you will damage your jukebox.


Step 1: Unscrew player mechanism resilient mount wing nuts so player sits freely on only feed back springs.

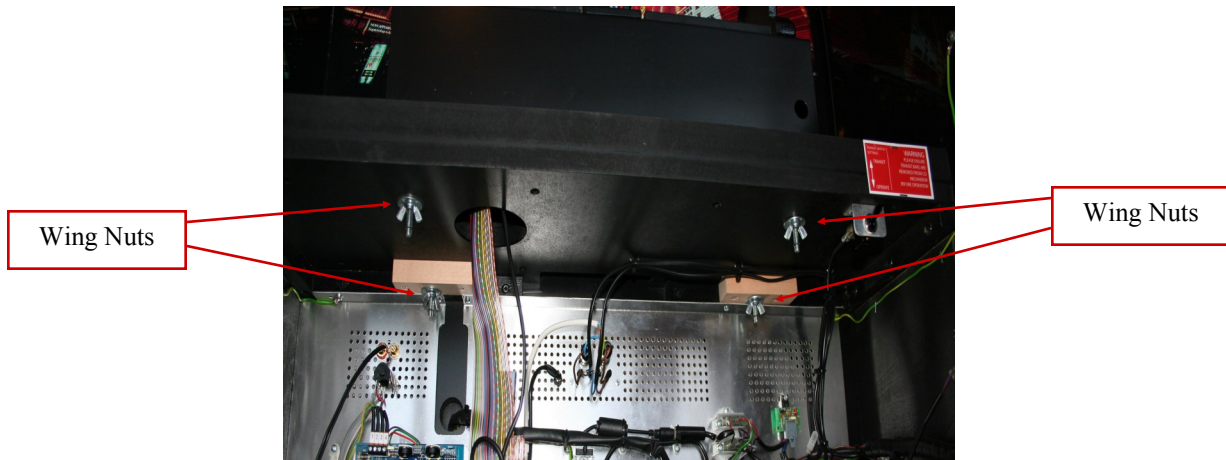


Step 2: Remove horizontal transit bar by removing end cap screws.

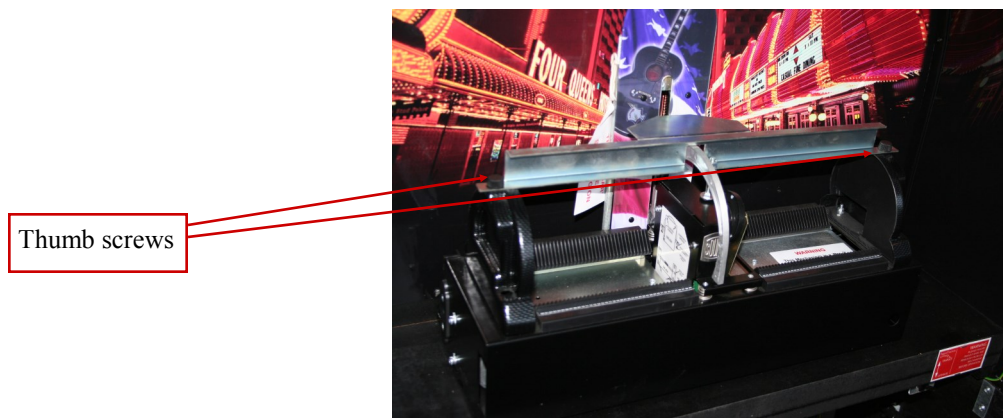


Step 3: Remove back vertical transit rod by twisting it counter-clockwise.

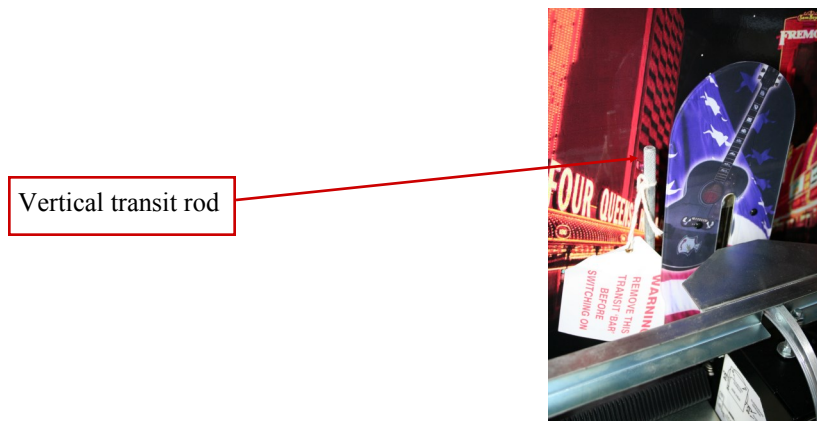

Step 4: Remove locking bar securing the title rack assembly by unscrewing the two end screws.

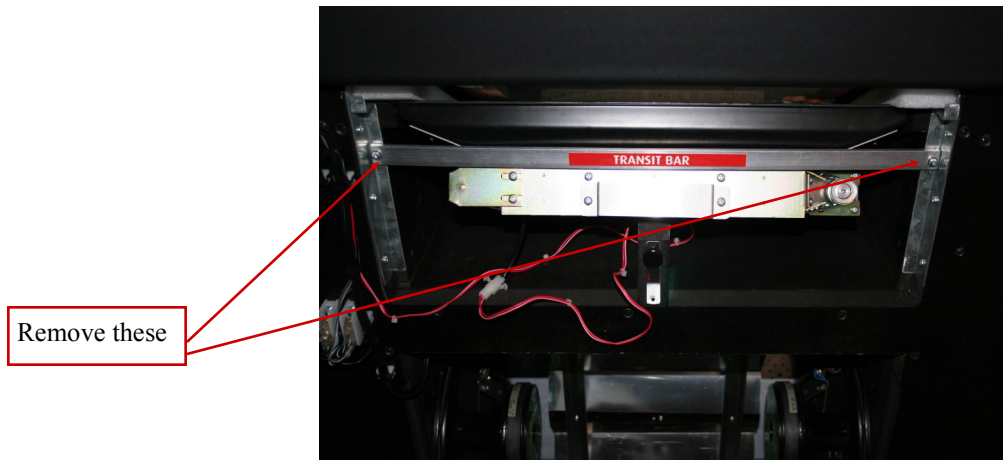

Step 5: Plug the jukebox into a grounded AC power outlet and turn the jukebox on.
Step 6: Open the jukebox by using the correct key located on left side of the jukebox.
Step 7: Flip transit/operate switch operate position.

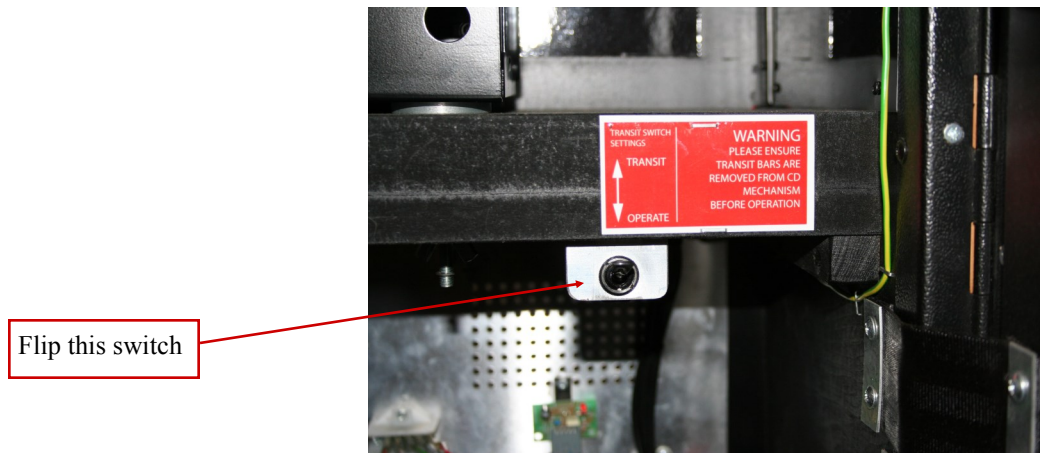


Installing Compact Discs

***** WARNING *****

Do not attempt to move the CD gripper tower by hand, touch or bend the gripper bow. These maneuvers will seriously damage the player mechanism. The player mechanism is designed to play only commercial CD's. CDROM recordable discs must not be installed onto this system. The manufacturers warranty will be void from damage caused by invalid oversized or undersized CDROM discs.

To load the jukebox with CD's please see above warning before proceeding. Stand in front of the jukebox and open the front door. Place the commercial CD's into the racks starting at 00 with the printed face to the right and the clear face to the left. Please ensure when loading discs that they are correctly aligned and located in the rack. Failure to do so will result in miss clamping when playing CD's. Please see the diagram below.

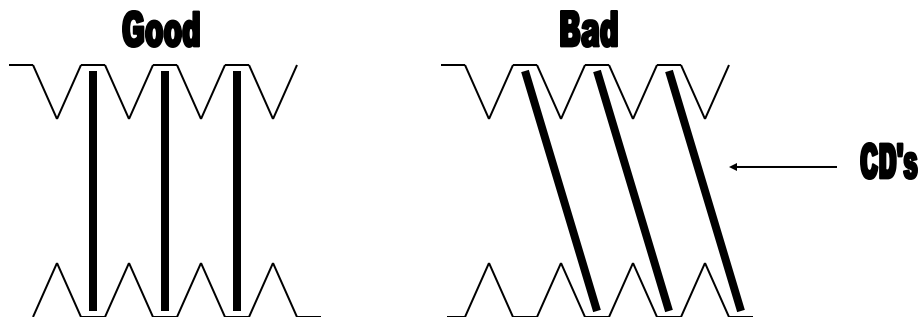

Compact Disc Care

The disc is read from the opposite side of the printed surface otherwise known as the data side. The compact disc is fairly resistant to minor scratches and small amounts of dirt, but it is best to be careful not to scratch the data surface and to keep it clean from dust, dirt, and fingerprints.

Disc Cleaning


If the data surface becomes dirty, always use the following cleaning instructions (commercial discs only!):

- 1) *Fingerprints*: slightly rub the surface with a soft cloth
- 2) *Dust or Dirt*: blow lightly on the disc and wipe the dirty area with a soft cloth or clean the dirty area with a damp cloth and then wipe dry.
- 3) *Grease or Oil*: clean with a soft cloth cleaner with ethyl alcohol, then wipe dry.

Conventional liquids and sprays used to clean vinyl records may damage the surface of the compact disc. The use of such cleaners are not recommended. In addition, do not expose the disc to direct sunlight, heat, or humidity for prolonged periods. Ensure both sides of the compact disc are damage free. It is important to note that damage to picture side as well as the read side of the disc can result in corrupt data.

Inserting title cards.

Open the jukebox door and locate the rear of title card mechanism box. It is located on the door itself. Find the cable down from the mechanism and disconnect it from the harness. At the center of the mechanism is a thumb screw. This holds the assembly to the jukebox's front door. Remove this thumb screw and slide the mechanism out. You will find it easier at this stage to place the mechanism on a table.

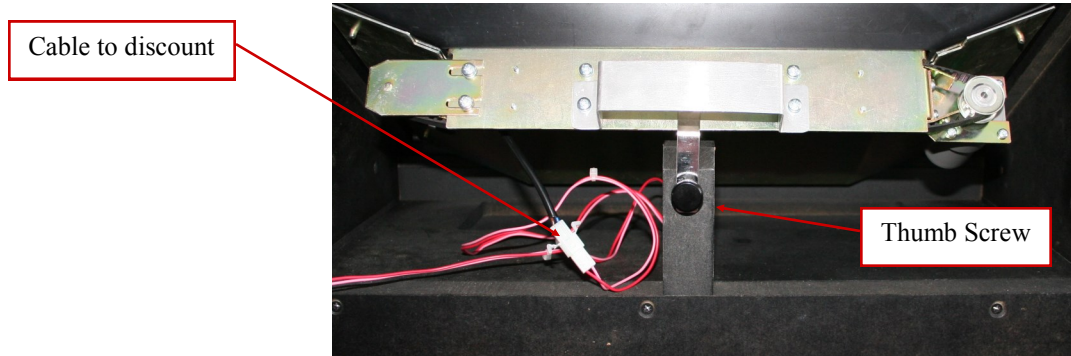

The printed labels have a perforation through the middle. Tear the label at the perforation and insert the top half of label in the desired selection number slot (3 digit), bending the cards so that they locate into the lugs. Then insert the bottom half of the label. To advance the cards, turn the motor by hand counter clockwise. The motor is located on the top, right of the mechanism. When the labels are inserted, slide the mechanism box back into place, then slide the brass bolts into place, and finally push the cable back into the clips.


Correspond the order of the title cards with the order of the CD's. For example slot 00 would=100, slot 01=101, 02 = 102, etc.




Installation Options

A note about installing external speakers:

The optimum load impedance is 4 ohms and should be regarded as a minimum value. The following diagrams depict various parallel and serial combinations of 8 ohm speakers and the resulting load impedance. Incorrect impedance will damage your jukebox and void all warranties.

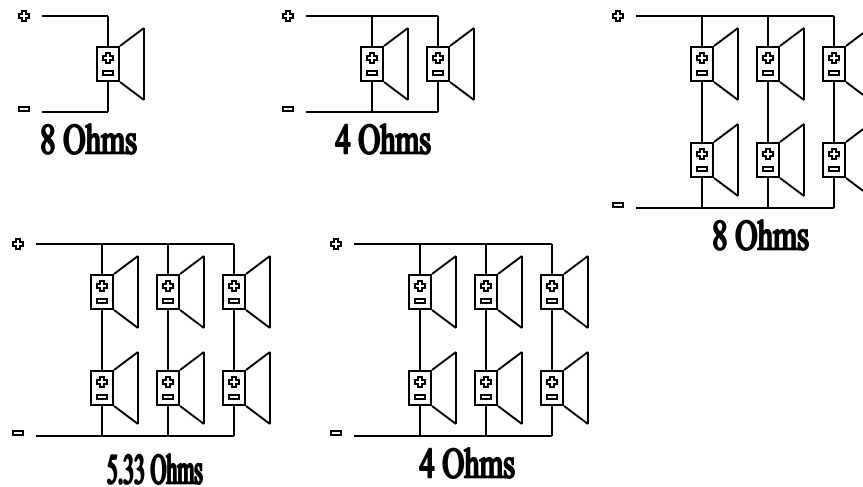


Located on the back of the jukebox are four speaker connectors. You must strip 1/4 inch of insulation off the speaker wire before inserting them into the speaker connector. Push the tab down to insert the wire. See diagram below for polarity and channel. There are also two RCA type connectors labeled auxiliary audio in. Connect your line level device here. For example a IPOD docking station, MP3 player, or DVD player.

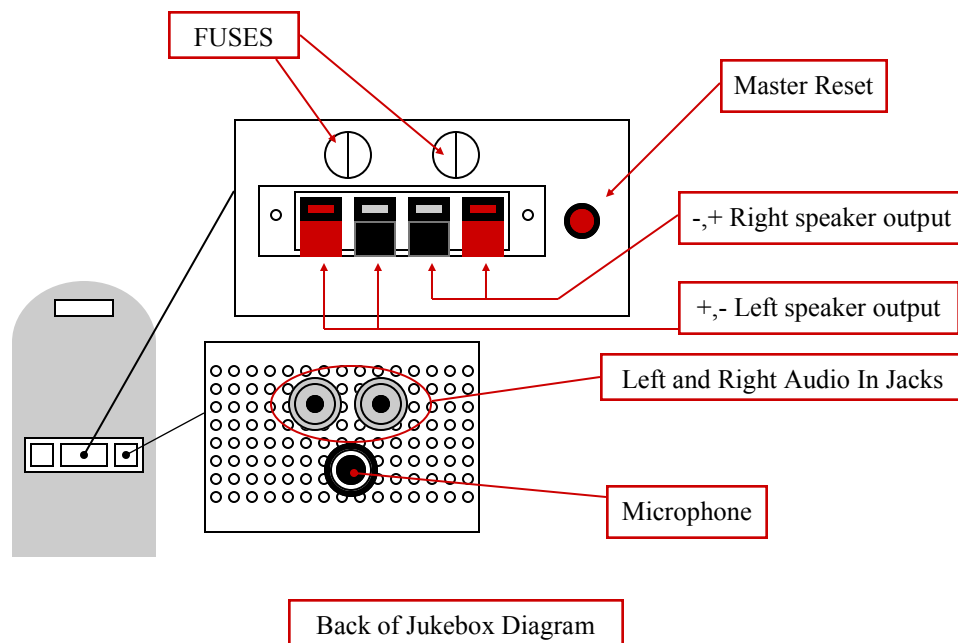 

Congratulations, your jukebox is now setup and ready to be used!

Jukebox Controls

There are two different ways to select music from the jukebox. You can use the keyboard on the jukebox or the remote control. There is a handy holder to place the remote control when not in use. It is located in the back of the jukebox.

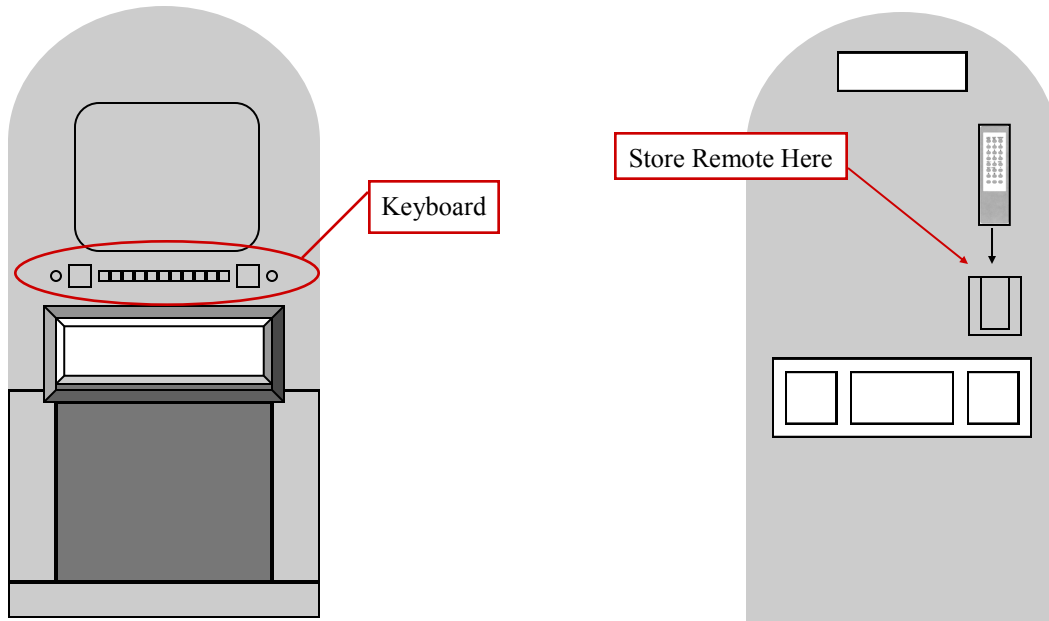

Using the Keyboard

To rotate the Title cards, press the two red push buttons. The left button will advance the title cards to the left and the right button will advance the title cards to the right. When you locate the title card of the CD you wish to play enter its three digit disk number. This is found next to the title card. Then enter the two digit track number found next to the song title to begin the selection. For track numbers less than 10 you will need to enter a 0 first. If you wish to play the entire album, instead of entering a track number enter 00. If you make a mistake entering your selection press the button labeled "C" to clear your selection. Your selection will begin after the track number is entered. There is no way from the front of the jukebox to adjust the volume level. This must be done by the remote control. See the selection "Using the remote control". The volume control must be adjusted when the first song is played. This must be done each time power is lost from the Jukebox. This is to protect the amplifier and speakers in case of any power surges.


You may encounter an error code which would be displayed on the front of the jukebox when you first power up or after a power loss. Located on the back of the jukebox is a master reset button next to the external speaker jacks. With the jukebox off hold the master reset button down and turn on the jukebox. Continue to hold the master reset button for 30 seconds. This will restore all defaults to the jukebox and clear any miss read errors from loss of power.

Using the Remote Control

When selecting with remote control, aim the remote at the small square on the LEFT side, half way down box and under the title section. This is where the remote sensor eye is located. Select the three digit disc number by using the 0-9 keys. Now enter the two digit track number using the same 0-9 keys you used for the disc number. If you wish to play the entire album, select 00. If you enter a wrong number and wish to clear it press the keyboard Cancel button. The volume will be very low for the first time a song is played upon power up. Use the VOL+ and VOL- buttons to adjust the level until the desired volume is reached. The jukebox will remember that volume only when left powered on. Removing the AC power or switching the AC power switch off will reset the volume level to it's lowest setting. This is to protect the amplifier from damage.

You can skip tracks by pressing EJECT TRACK button. This will stop the current track that is playing and proceed to the next selected track. If you wish to stop a whole disc that is play, press the EJECT DISC button. This will skip to the next selected disc.


A random play mode can be selected by activated by pressing the A button. The display will show a decimal point after the least significant number. To disable random play mode press the B button. The decimal point will disappear.

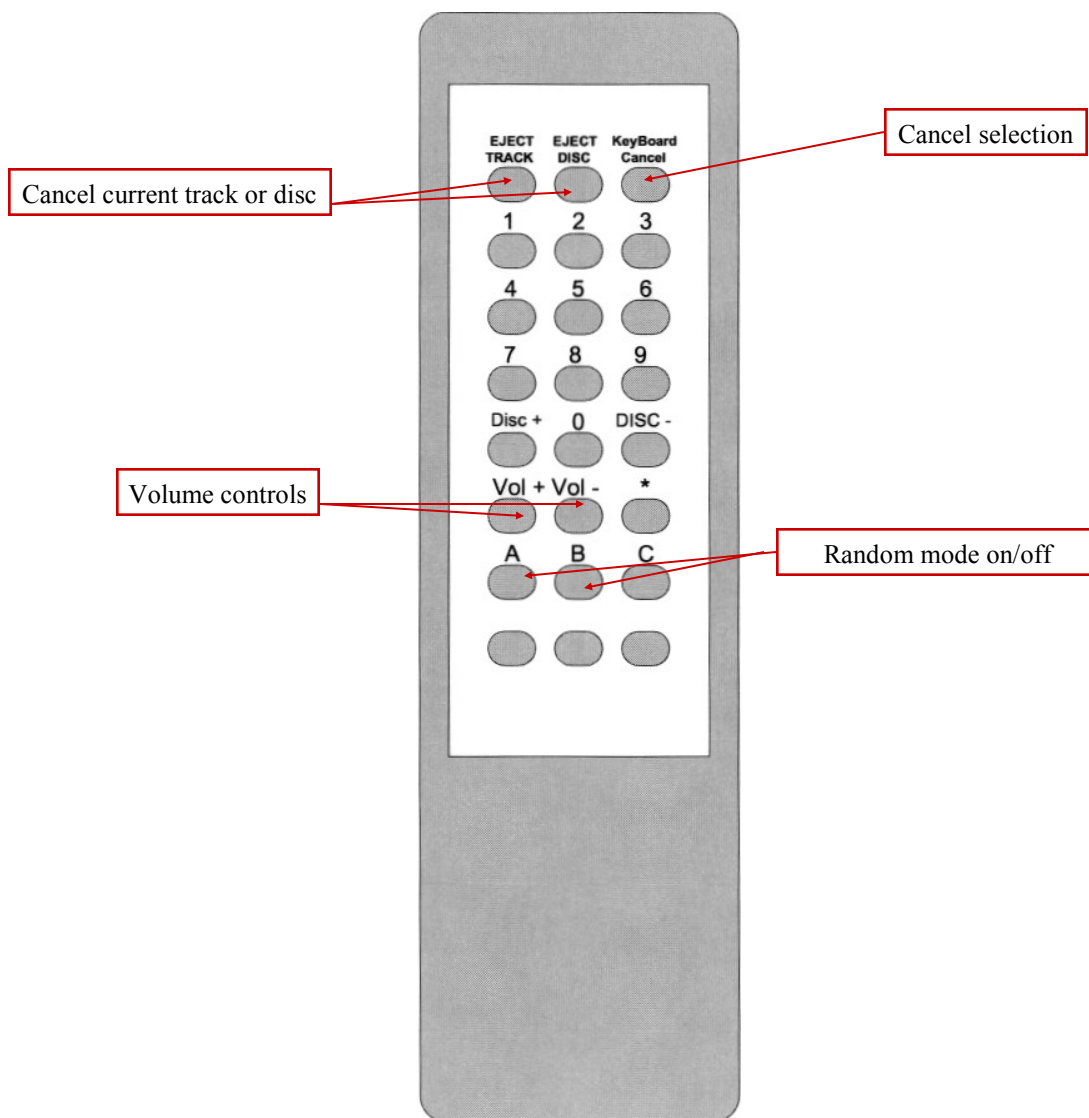

SERVICE DIAGRAMS

Pre-amplifier

REMOTE 1 = Music override
 SWITCH 2 = 0v. Earth
 INPUTS 3 = Autofade override

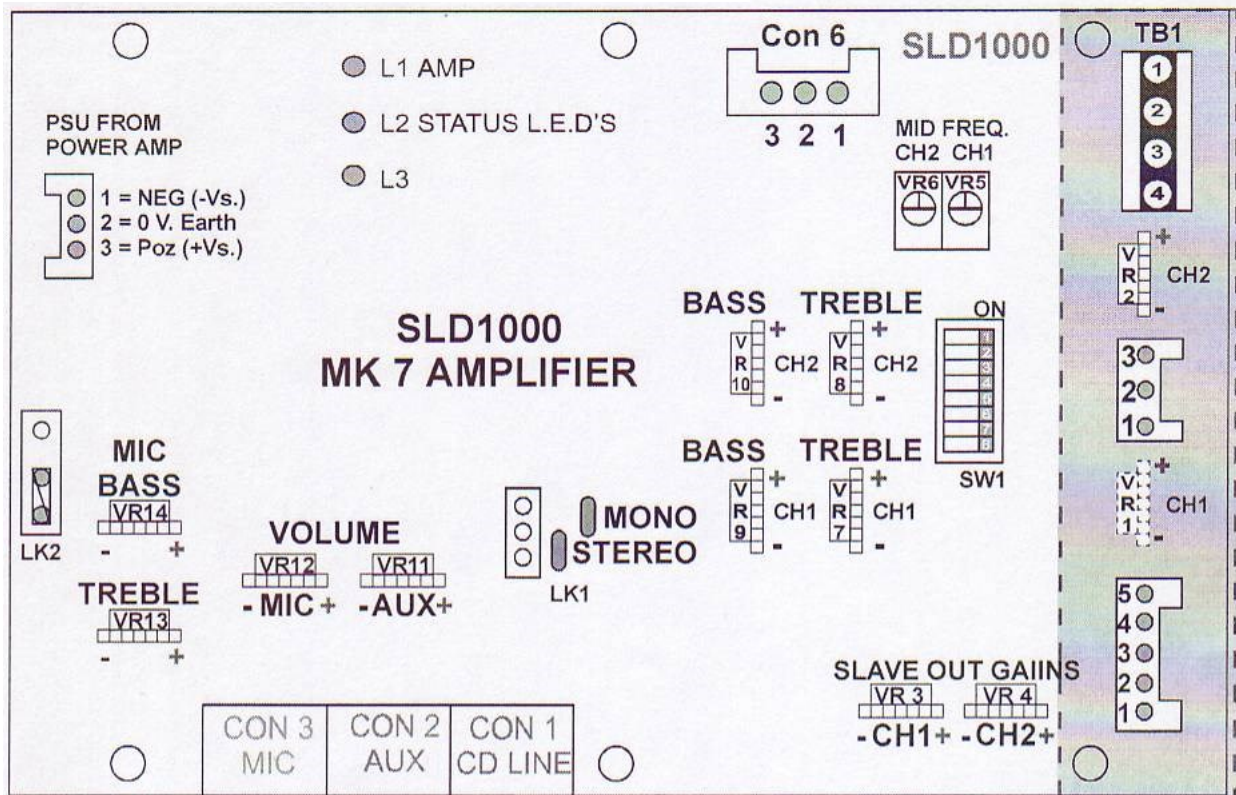

PIN LAYOUT
 CONS. 1,2,3.
 FRONT VIEW
 OF SOCKETS

