

Operation Manual


Jr. Jockey II



US

UNIVERSAL SPACE

AMUSEMENT EQUIPMENT CO.

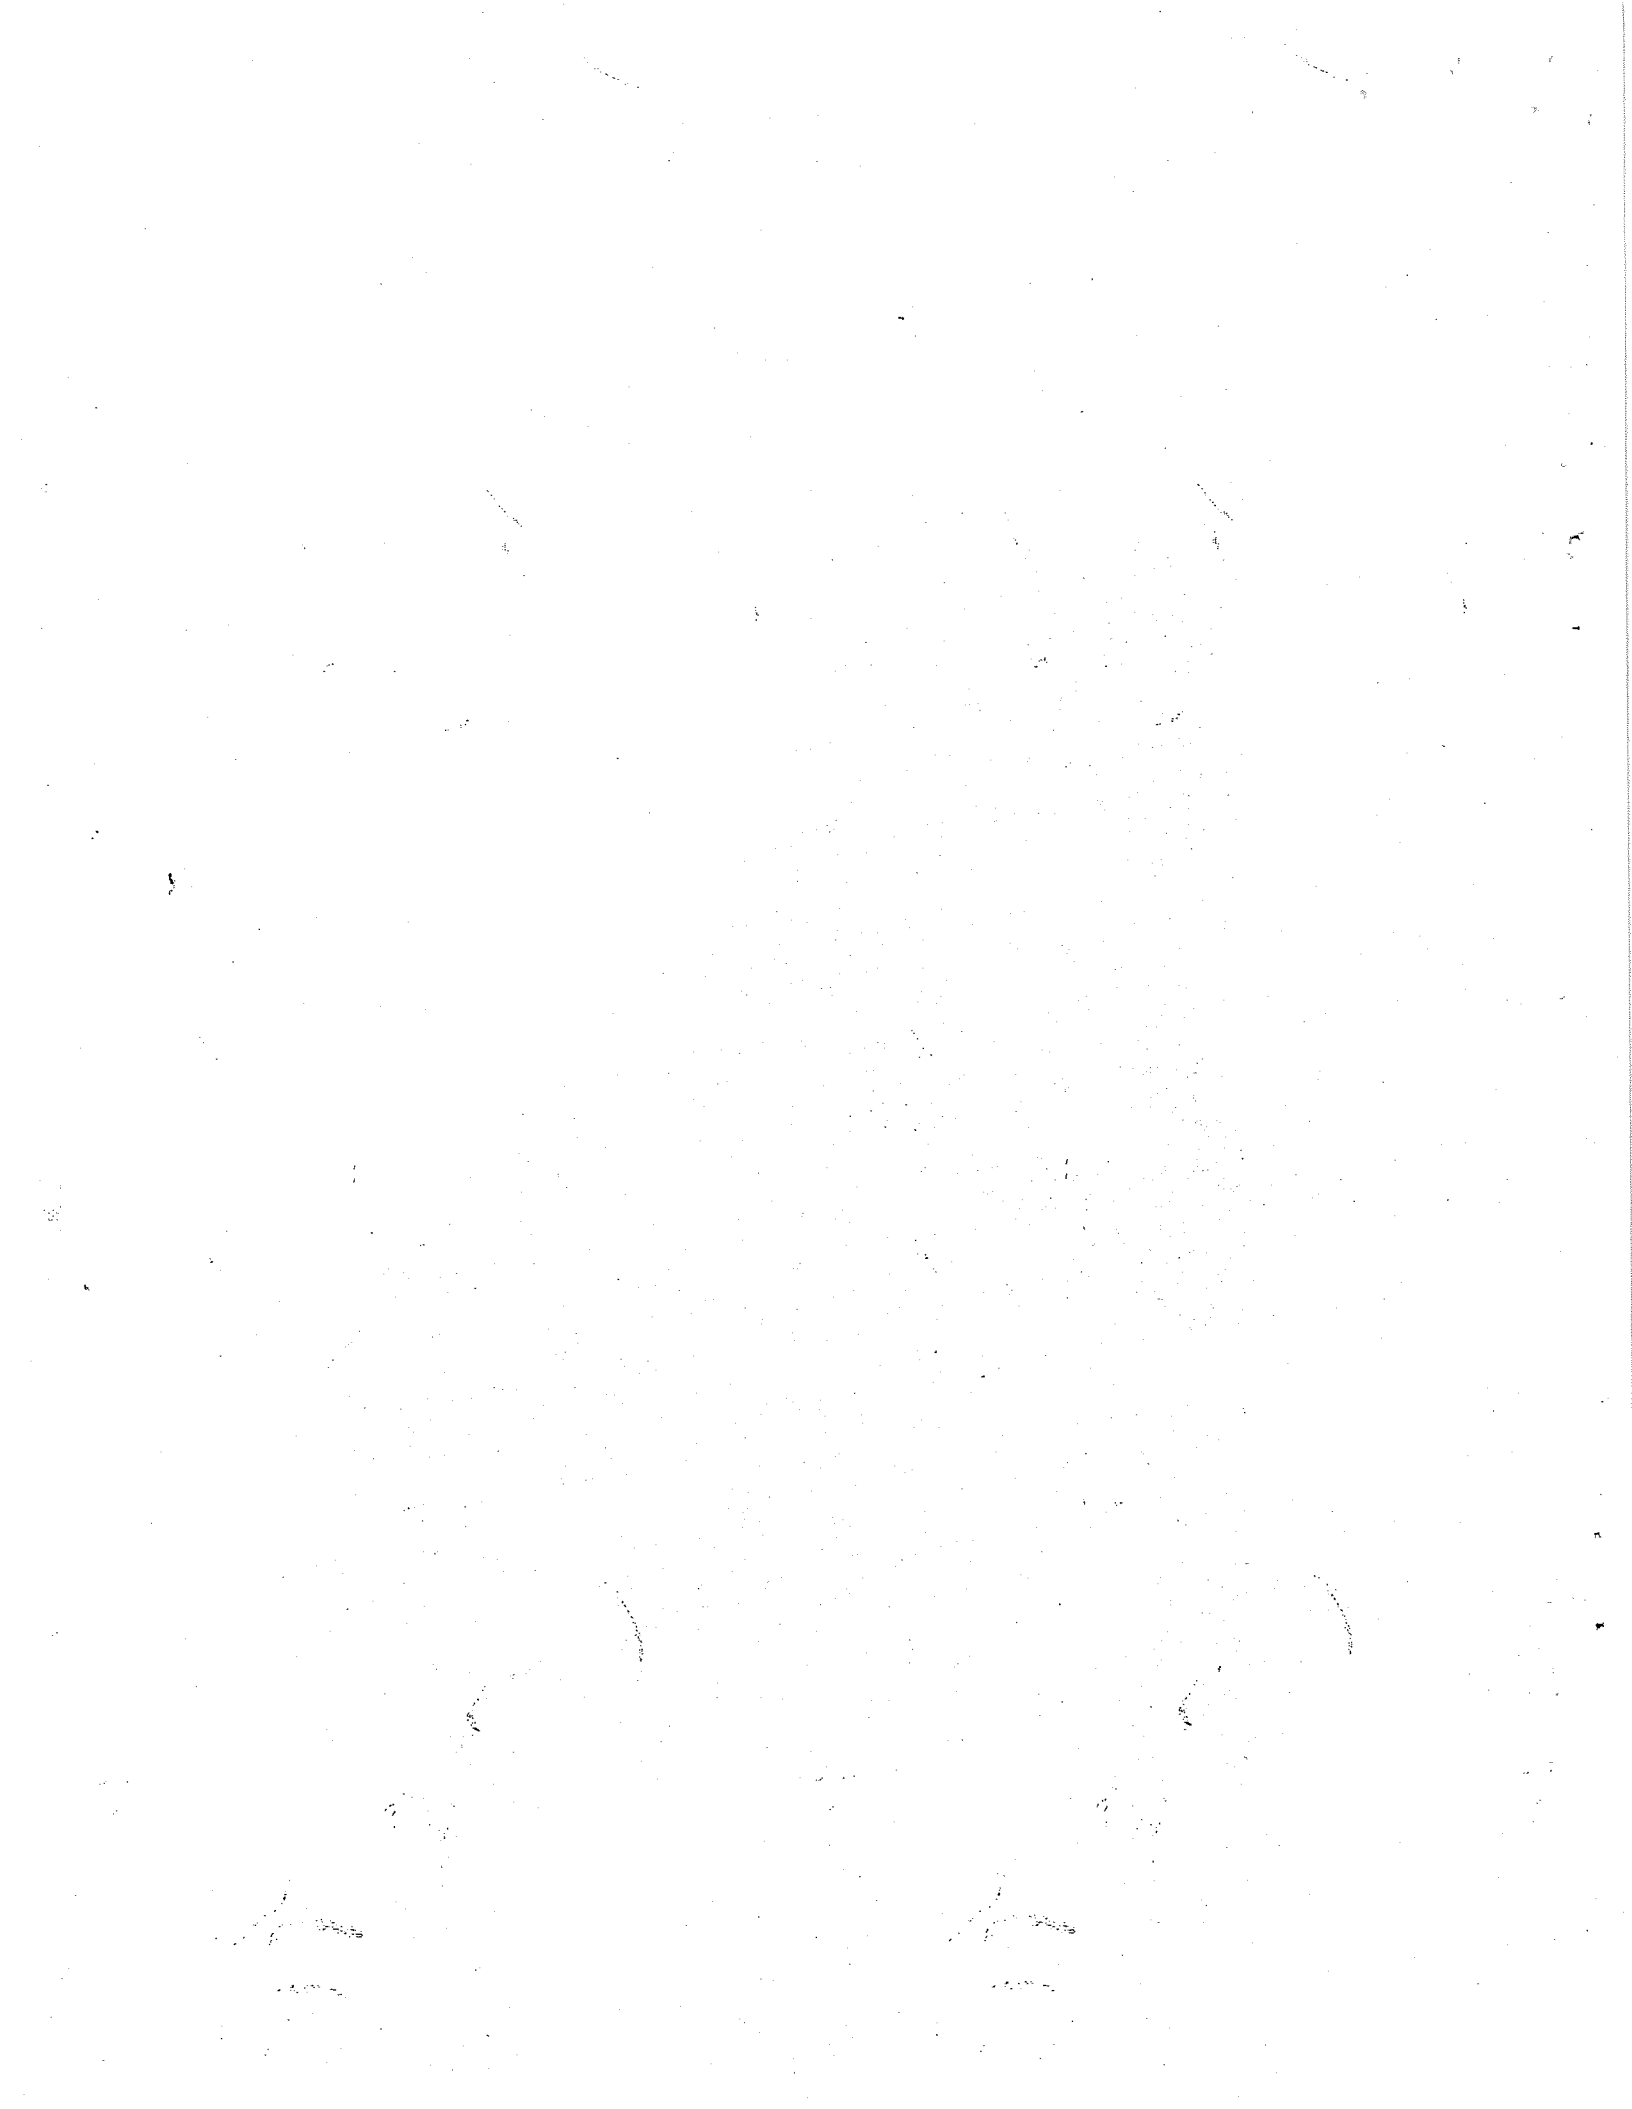

1 Specifications

- (1) Rated power supply: AC 110V±5% 60Hz or AC 220V±5% 50Hz;
(Note: For the actual voltage, please refer to the label on the machine.)
- (2) Power Consumption: Min power consumption 250W
Max power consumption 600W
- (3) Weight: About 220kg
- (4) Environment Condition: Temperature(indoor):-10°C~+40°C
:Humidity:≤90%
:Atmospheric pressure:86Pa~106Pa
- (5) Dimension: W2202×D1300×H2190 32" LCD monitor
















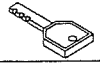

Note: Game parameters are subject change without notice.

2 Package Contents

Be sure to check that you have receive all packages indicated below.

(1) Body Assembly: 1 unit

(2) Accessories: (The actual list please refer the package.)

No.	Component	Specification	Qty	Illustration	Note
1	Power wire	10A 125V 2m	1		
2	Fuse	$\phi 5 \times 20$ 10A	1		125V
3	Keys	2222	1		For coin door
		171	4		For others
4	Operate Manual		1		
5	Bulb	12V 3W	2		
6	Hexagonal socket	CR-V 4mm	1		
7	Small button SW	JUMP(yellow)	1		
8	Button SW	STOP/START(red)	1		
9	No.30 Button		2		
10	Remote control		1		
11	Mesh wire	5m			
12	Keyboard	Windows	1		
13	Mouse		1		
14	Bill Acceptor				
15	Micro SW	BLM-S,3A 250V	2		
16	Horse tail		1		
17	Saddle pedal		1		

3. Installation

! WARNING

● For indoor use only!



3.1 Locations to avoid installing:

! WARNING

This machine is designed for indoor only. Never install this machine outdoor or at any of the following:


- Locations exposed to direct sunlight.
- Locations subjected to rain or water leakage.
- Damp, dusty or hot places.
- Do not place close to a heat source.

3.2 Attach fence, monitor and cabinet.

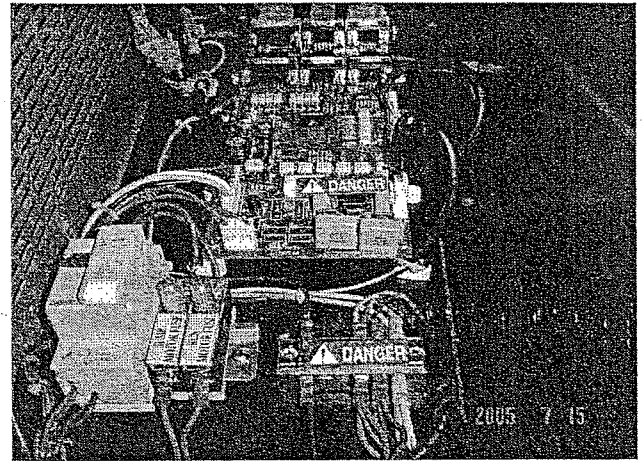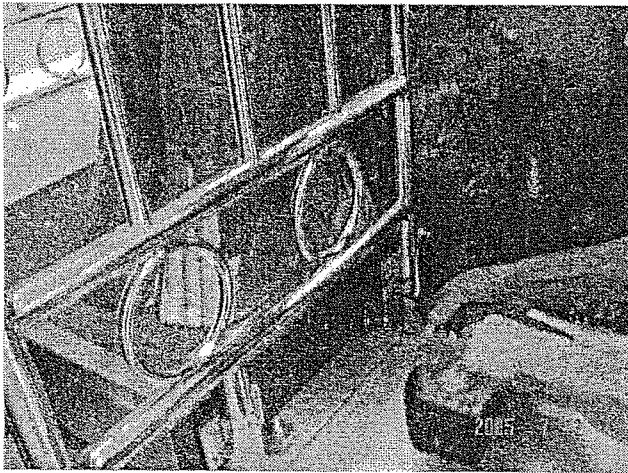

3.3 Play Zone


This machine requires space for playing the game, (play zone), and for maintenance, (maintenance zone), as shown below. Be sure to leave enough space when installing the machine.

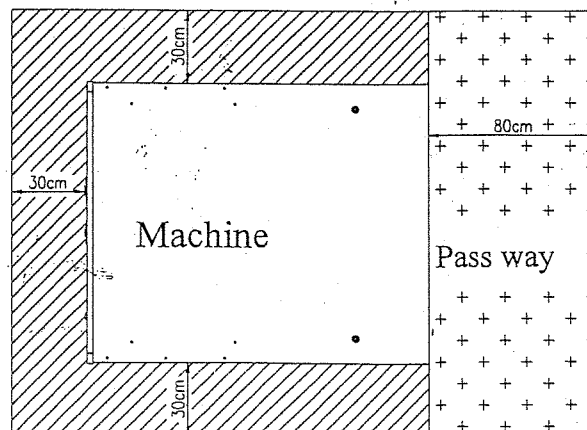

3.4 Game Leveling

Install this machine on a flat surface. Adjust levelers to lift casters off the ground and level the game.

Make sure that the machine is level with the floor. If the machine is not level, the game may not be play well.

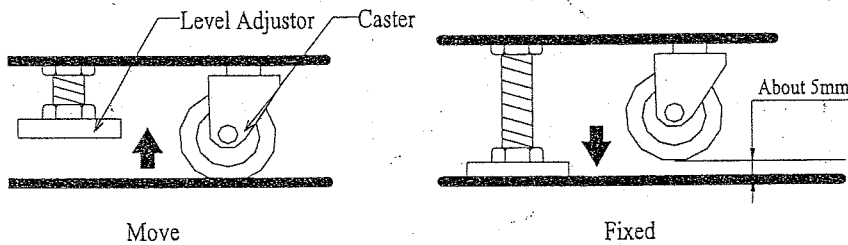

4. Movement and Transportation

4.1 Movement :


- Turn off the power switch before moving this machine.
- Unplug the power cable and put it in the main cabinet.
- Hold the machine in the specified position on the sides of the Main cabinet and lift the machine. While keeping it balanced, carry the machine.
- This machine must be carried by 4 or more persons.

4.2 Transport

⚠ WARNING


- Be careful not to damage the machine during transport.
- Do not shock the molded parts. These parts are fragile.
- Be careful not to drop the machine when bringing it down from a higher level.

- When transporting this machine, it must be divided it into three parts, the monitor with cabinet , the PC cabinet and the horse with the fender. You must pack them in bubble-coated wrapping separately, then put them into the the carton box separately.

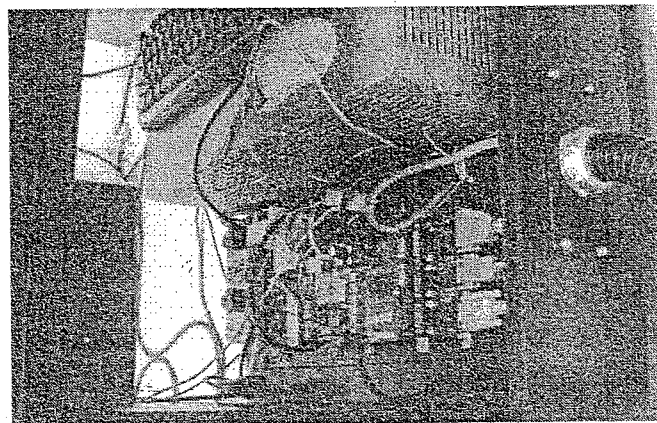

- ※ Note: Sand or other hard substances may scratch the surface of the machine.

- When transport this machine please put the fender on the step of the horse, then securing it with ropes. Put the fender as following:

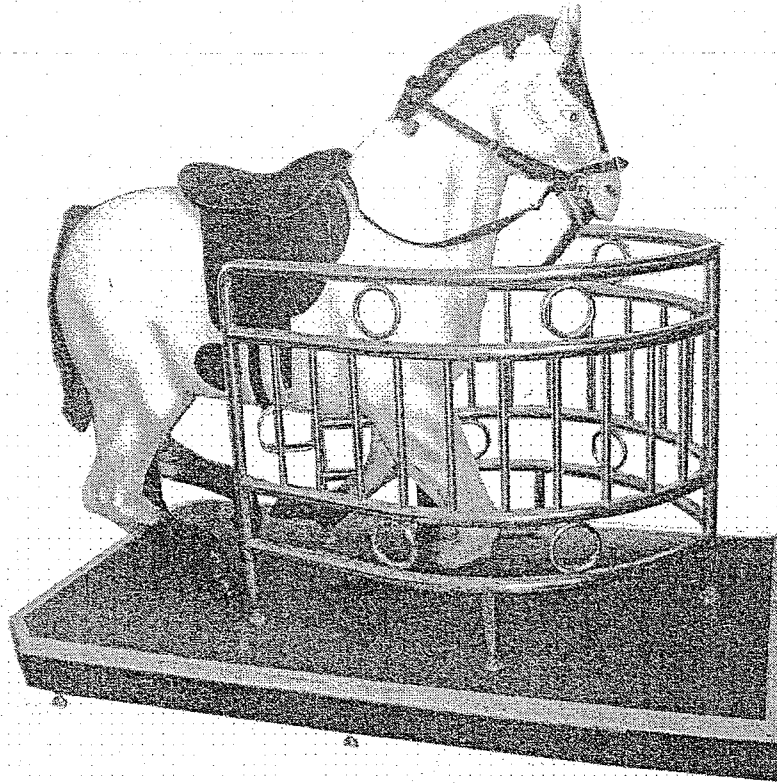

! NOTICE


- Be sure turn off the power switch and unplug the machine when moving it.
- Do not subject components to shock when lowering to the ground.
- To prevent damage to the machine, exercise caution when moving
- Before moving the monitor & PC cabinet, always retract the level adjusts fully.
- Do not apply impact to the machine when lowering the machine.

e.

5. Connecting the power cord

⚠ WARNING

※ Be sure to connect the ground wire before turn on the machine. Failure to connect the ground wire could result in electric shock if power occurs.

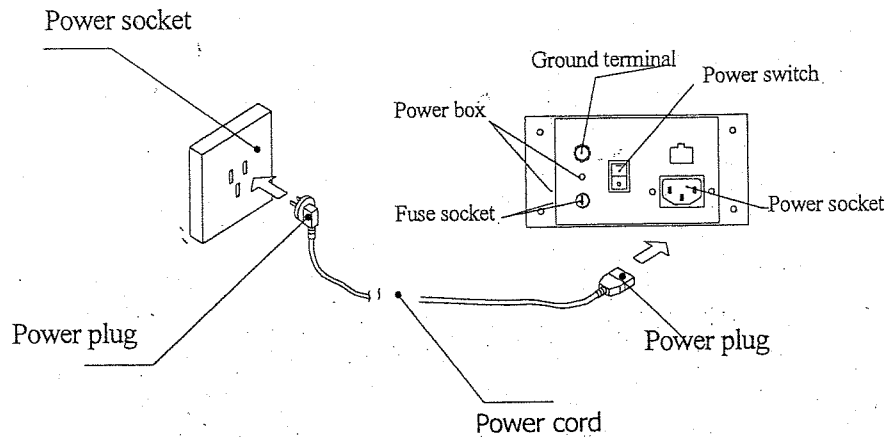

5.1 The Power Socket:

This power socket is fixed to the underside of the machine cabinet.

1. This machine's supply voltage is 110V±5% 60Hz, or 220V±5% 50Hz", for actual supply voltage, please refer to the label of the machine.
2. Fuse specifications
110V 60Hz use 110V 6Aφ5-20mm
220V 50Hz use 220V 3Aφ5-20mm.
3. Power switch: Main game power.
4. Ground terminal: Use to connect the ground cord.

⚠ WARNING

- Do not put heavy items on power cord.
- Do not touch the power plug with a wet hands.
- Do not pull or twist the cord.
- Do not place the cord near a heat source.
- Do not place the cord where the player can easily touch or kick it.
- Run this machine with the correct power configuration

6. Gameplay:

1. Insert coin(s), press start button to start game.
2. Hold the rein to control the direction. Press the button on the horse neck, the horse will jump to avoid the obstruction.
3. This game can adjust the difficulty according to your level.

7. Error Indication:

NO	Possibility	Treatment
1	The machine have no power	<ol style="list-style-type: none">1. Check the power plug are in good touch.2. The fuse has been burned out, replace a new one.
2	The motor can't work.	<ol style="list-style-type: none">1. Check the ground fault circuit interrupter that in the power box is in the off state, turn it on.2. The fues that on the power box have been burned out, replace a new one.
3	The button out of work	<ol style="list-style-type: none">1. Check the switch whether in good touch,.2. The button has been damaged, replace a new one.
4	No sounds while playing.	<ol style="list-style-type: none">1. Check the audio wire of the monitor is connected.2. Power off it, then restart it after 1 minute.

WARNING

- Remove power before servicing game
- Choose the appropriate replacement parts

8. Cleaning


Wipe off dirt gently with a soft cloth.

9. Overall construction




1. Monitor
2. Horse nose
3. Saddle
4. Horse belly
5. Fense
6. Step
7. Coin Mech

9-1. Horse nose Assy

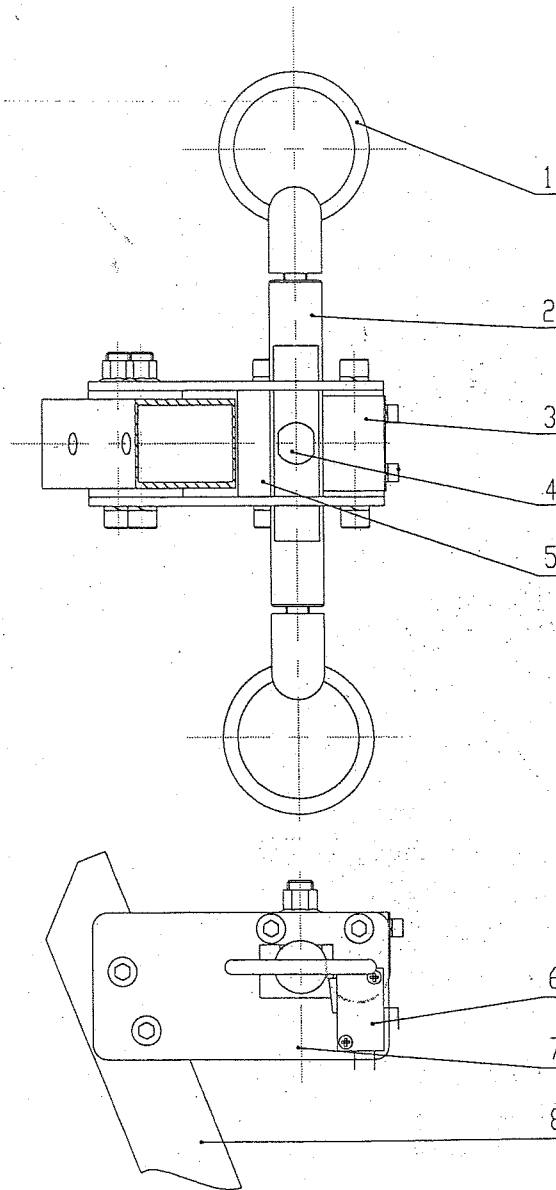


NO	Name	Qty	Specification	Note
9-1-1	Rein ring	2	Q235	
9-1-2	Nose shaft	1	Q235	
9-1-3	shrapnel	1		
9-1-4	Nose pole	1	Q235	
9-1-5	Nose connecting board	1	Q235	
9-1-6	Micro SW	2	Length 18mm	
9-1-7	Nose side board	2	Q235	
9-1-8	Nose embedded part	1	Q235	

9-2. Saddle Assy

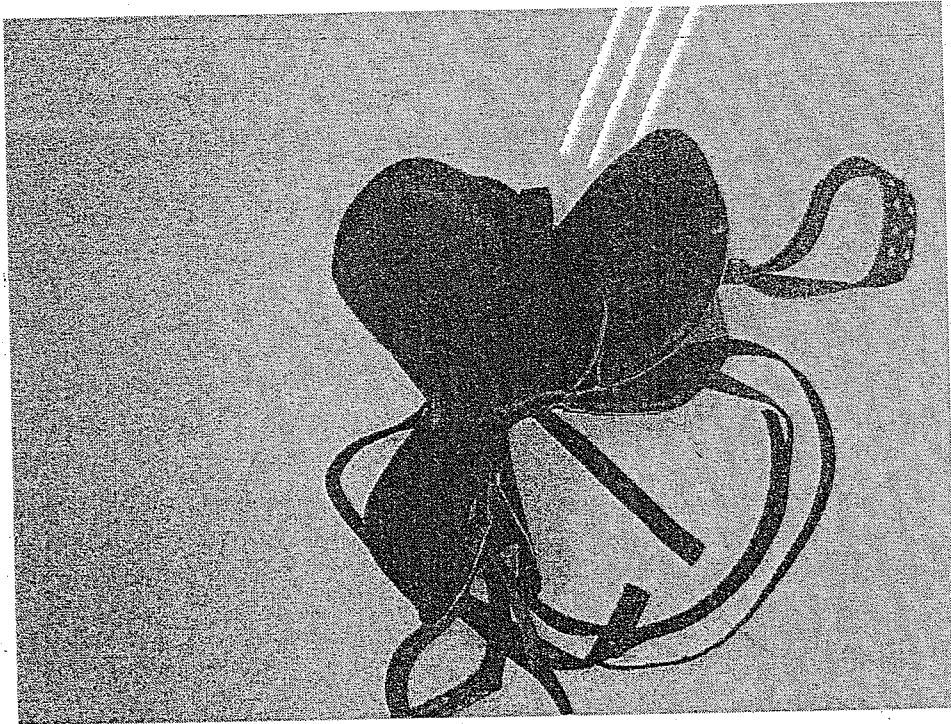

1. The exterior of the saddle is made of animal skin.
2. There is a fiberglass inside as bracket.
3. There is a high density sponge in the middle.
4. Connect the safety belt with stainless steel.

9-3. Horse Belly

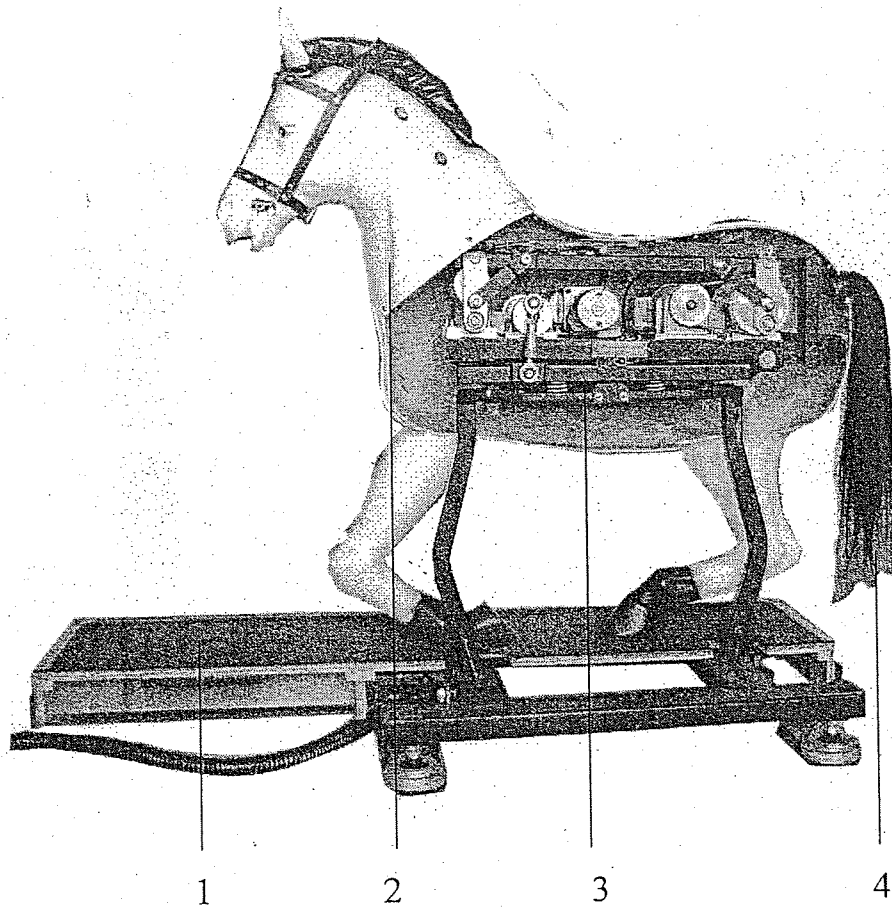


1. Footplate

2. Horse shell: high strength fibreglass

3. Horse belly mechanism

4. Horse tail


9-4. Horse belly mechanism

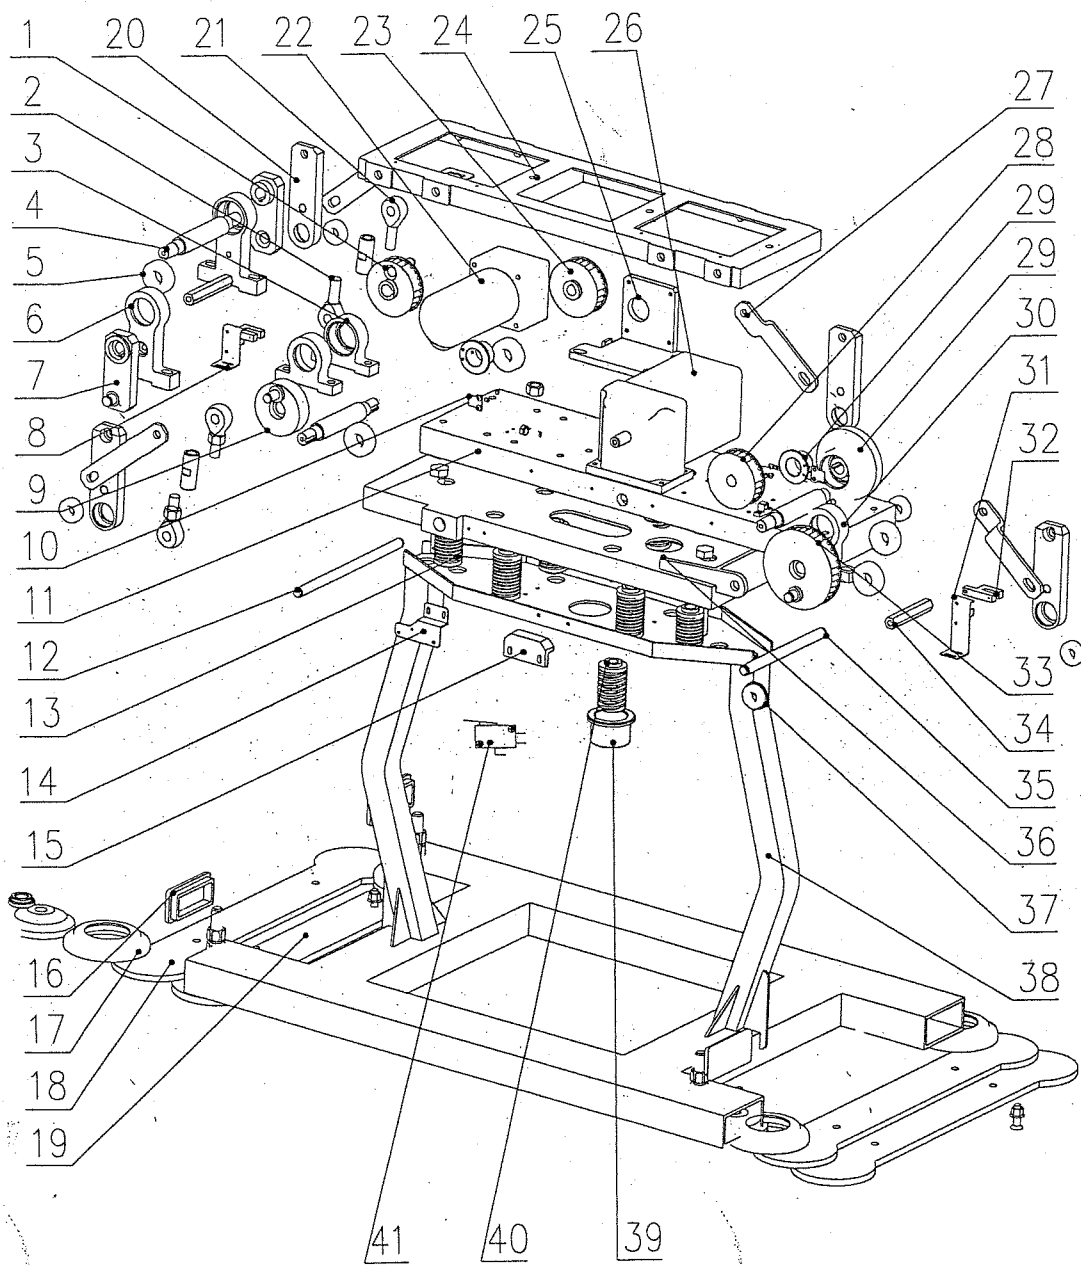

NO	Name	Qty	Specification	Note
9-4-1	Main arm B	1	45	
9-4-2	Support shaft	2	45	
9-4-3	Bearing bracket B	2		
9-4-4	Shaft A	3	45	
9-4-5	Bearing 6204Z	6	$\Phi 20 \times \Phi 47 \times 14$	
9-4-6	Bearing bracket C	2		
9-4-7	Arm B	4	Q235	
9-4-8	Sensor board B	1	Stainless steel	
9-4-9	Arm B	1	45	
9-4-10	Sensor baffle	2	Q235	
9-4-11	Mechanism base	1	Q235	
9-4-12	Shaft C	1	$\Phi 14$	
9-4-13	Cushion spring	7	65SiMn	
9-4-14	SW board	2	Q235	
9-4-15	Cushion block	2		
9-4-16	Feet cover	4		
9-4-17	Frame base	4		
9-4-18	Base metal	2	Q235	
9-4-19	Base rubber	2		
9-4-20	Arm A	4	Q235	
9-4-21	Left joint bearing	4	M14	
9-4-22	DC motor	1	1:100	90V-90W
9-4-23	Wheel B	1	45	
9-4-24	Upper base	1	Q235	
9-4-25	Motor base	1	Q235	
9-4-26	AC motor	1	1:25	0.2KW-4P
9-4-27	Connect pole	4	Q235	
9-4-28	Wheel A	1	45	
9-4-29	Arm A	1	45	
9-4-30	Bearing base A	2		
9-4-31	Sensor board A	1	Stainless steel	
9-4-32	Sensor	2	YENOX	
9-4-33	Main arm A	1	45	
9-4-34	Support pole	2		
9-4-35	Shaft B	1	$\Phi 15$	
9-4-36	Cushion base	1	Q235	
9-4-37	Bearing	2	$\Phi 15 \times \Phi 35 \times 11$	
9-4-38	Support	1	Q235	
9-4-39	Sub-cover	1	LY-12	
9-3-40	Spring guide sleeve	13		
9-3-41	Sensor	2		

9-4 Coin mech

1. Push the lever (as illustration) to clear any coin jams. If it doesn't work, please take apart the Coin Assy to take out the coins.

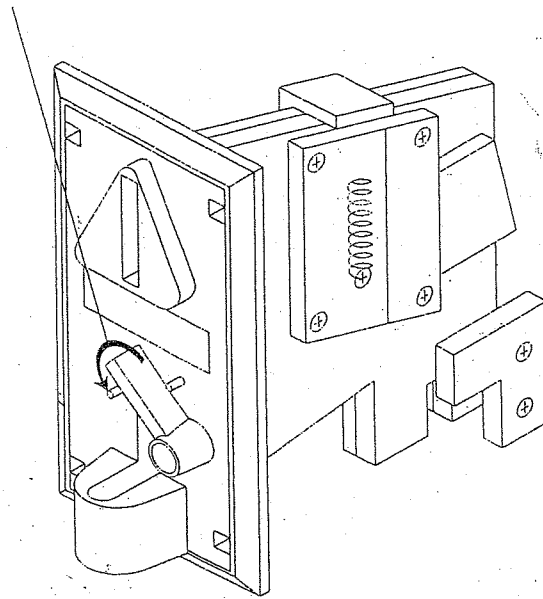


2. How to use an Electric Comparison Coin Assy:

- a. First take the plastic coins out of the Coin chute and change the coins you use.
- b. Avoid inserting unsuitable coins, please loosen the screws back of the coin mouth and depending on the diameter of the coins you use to adjust the stator back of the coin mouth.
- c. Adapting to the game bedplate, choose N.O(always open) or N.C(always close). Most of the games, except some games are marked, use N.O(always open).
- d. Adapting to the game bedplate, choose COIN TIMER SWITCH, Long-Short/Fast-Slow. 30ms is a short-fast signal, which is suitable for machines that need to quickly insert coins. 50ms is a mid-fast signal, which is suitable for general machines. 100ms is a long-fast signal, which is suitable for machines that no need to quickly insert coins.
- e. VR haft adjust sensitiveness of choosing coins. Adjust it clockwise(+), means accepting common error area is great. If inverse time(-), means accepting common error area is small, that is to say choose it strictly.
- f. Connection.

1. Gray wire
- Red wire-DC+12V
2. White wire-COIN signal
3. Black wire-GND
4. Gray wire

Code table

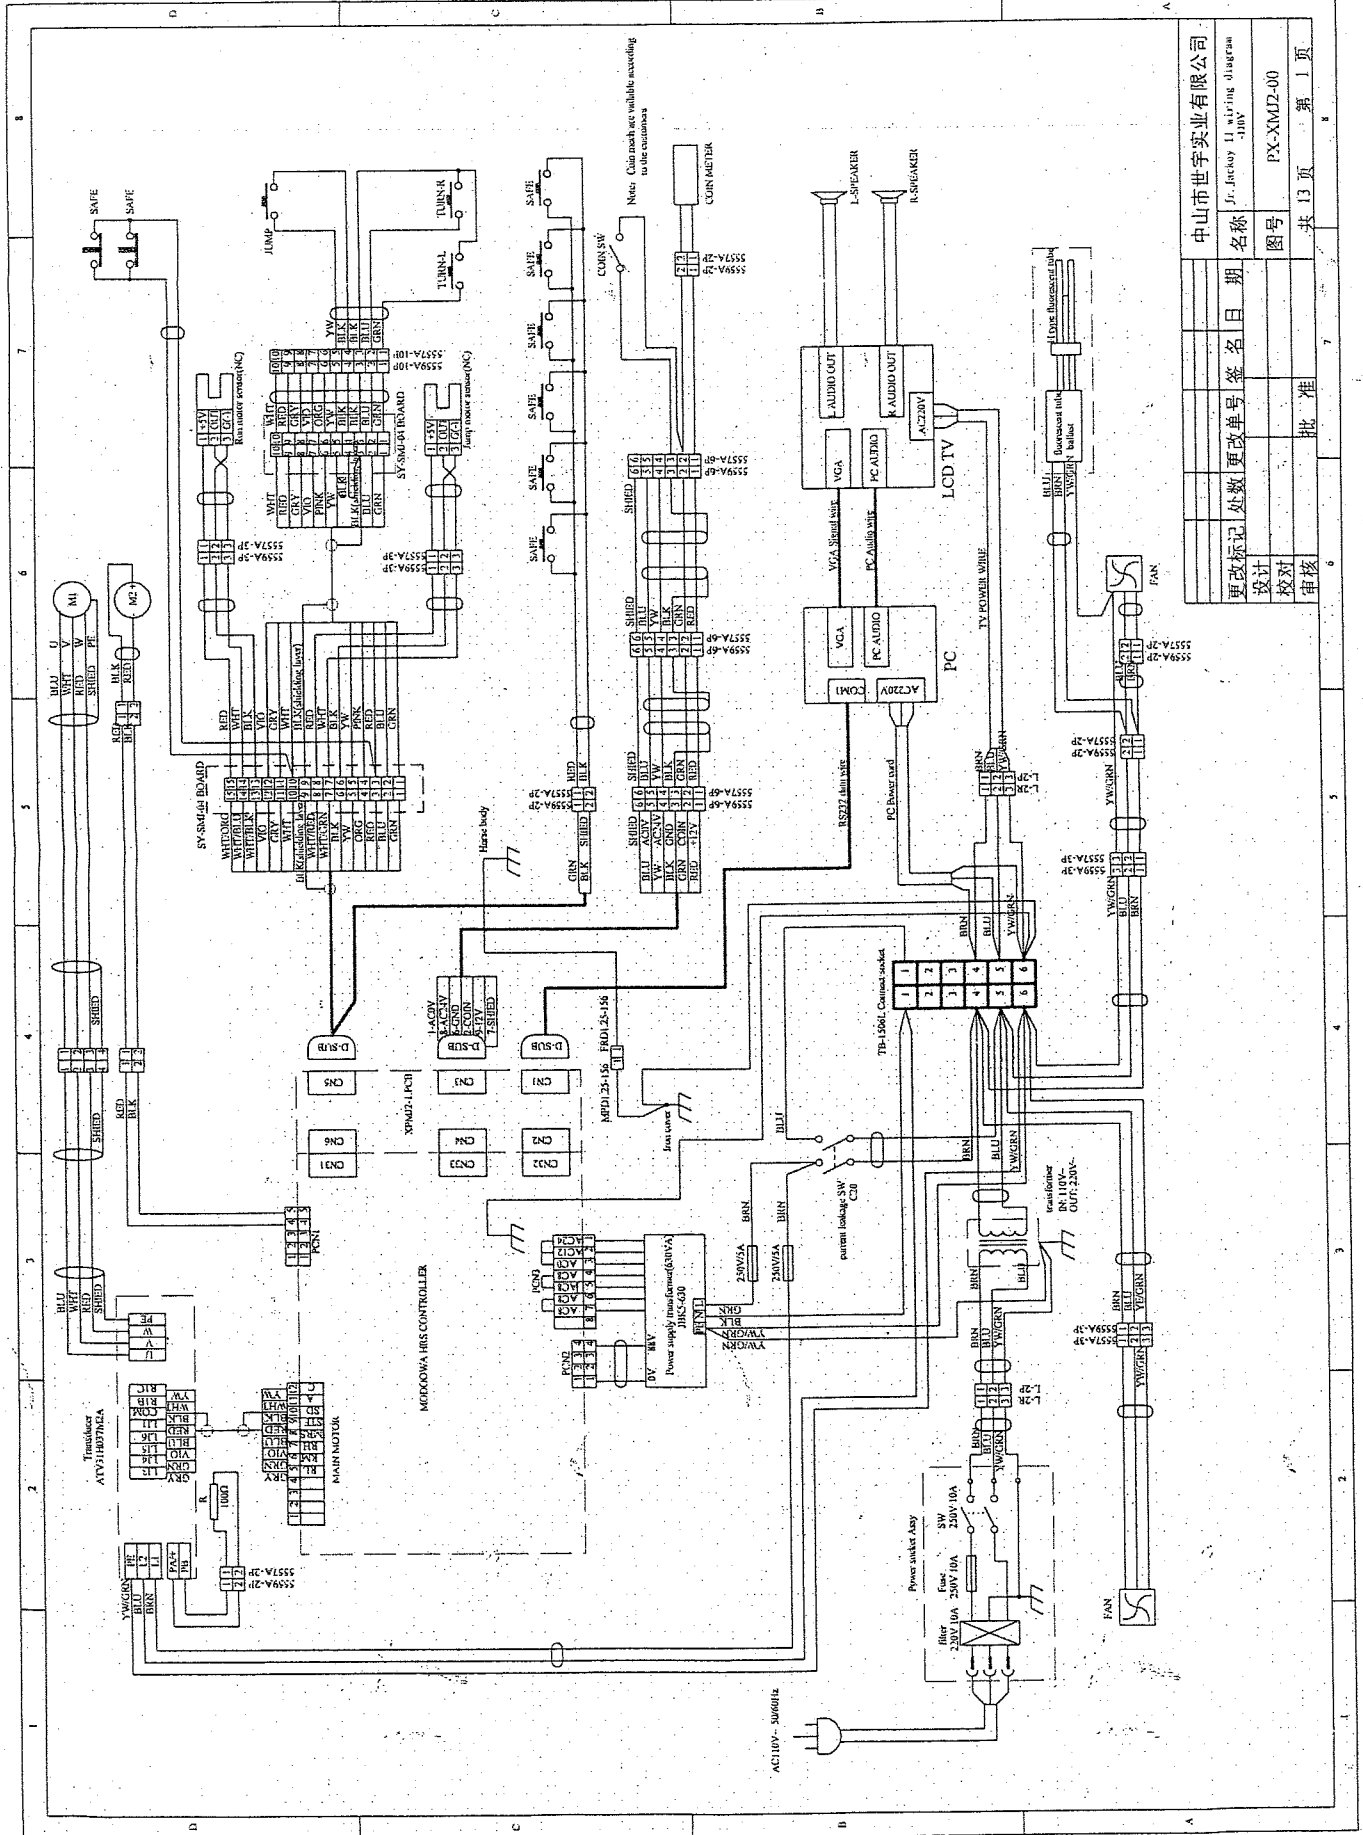


更改标记	外数	更改单号	签名	日期	名称
设计	校对	审核			中山市世宇实业有限公司
图号	PX-XMD2-00		第 13 页 共 13 页		

5557A-2P
 5557A-3P
 5557A-4P
 5557A-6P
 5557A-8P
 5557A-9P
 5557A-10P
 5557A-11P
 5557A-12P
 5557A-13P
 5557A-14P
 5557A-15P
 5557A-16P
 5557A-17P
 5557A-18P
 5557A-19P
 5557A-20P
 5557A-21P
 5557A-22P
 5557A-23P
 5557A-24P
 5557A-25P
 5557A-26P
 5557A-27P
 5557A-28P
 5557A-29P
 5557A-30P
 5557A-31P
 5557A-32P
 5557A-33P
 5557A-34P
 5557A-35P
 5557A-36P
 5557A-37P
 5557A-38P
 5557A-39P
 5557A-40P
 5557A-41P
 5557A-42P
 5557A-43P
 5557A-44P
 5557A-45P
 5557A-46P
 5557A-47P
 5557A-48P
 5557A-49P
 5557A-50P
 5557A-51P
 5557A-52P
 5557A-53P
 5557A-54P
 5557A-55P
 5557A-56P
 5557A-57P
 5557A-58P
 5557A-59P
 5557A-60P
 5557A-61P
 5557A-62P
 5557A-63P
 5557A-64P
 5557A-65P
 5557A-66P
 5557A-67P
 5557A-68P
 5557A-69P
 5557A-70P
 5557A-71P
 5557A-72P
 5557A-73P
 5557A-74P
 5557A-75P
 5557A-76P
 5557A-77P
 5557A-78P
 5557A-79P
 5557A-80P
 5557A-81P
 5557A-82P
 5557A-83P
 5557A-84P
 5557A-85P
 5557A-86P
 5557A-87P
 5557A-88P
 5557A-89P
 5557A-90P
 5557A-91P
 5557A-92P
 5557A-93P
 5557A-94P
 5557A-95P
 5557A-96P
 5557A-97P
 5557A-98P
 5557A-99P
 5557A-100P

Computer configuration


Main board: Intel 845PE


CPU: Intel Celeron 2.0G

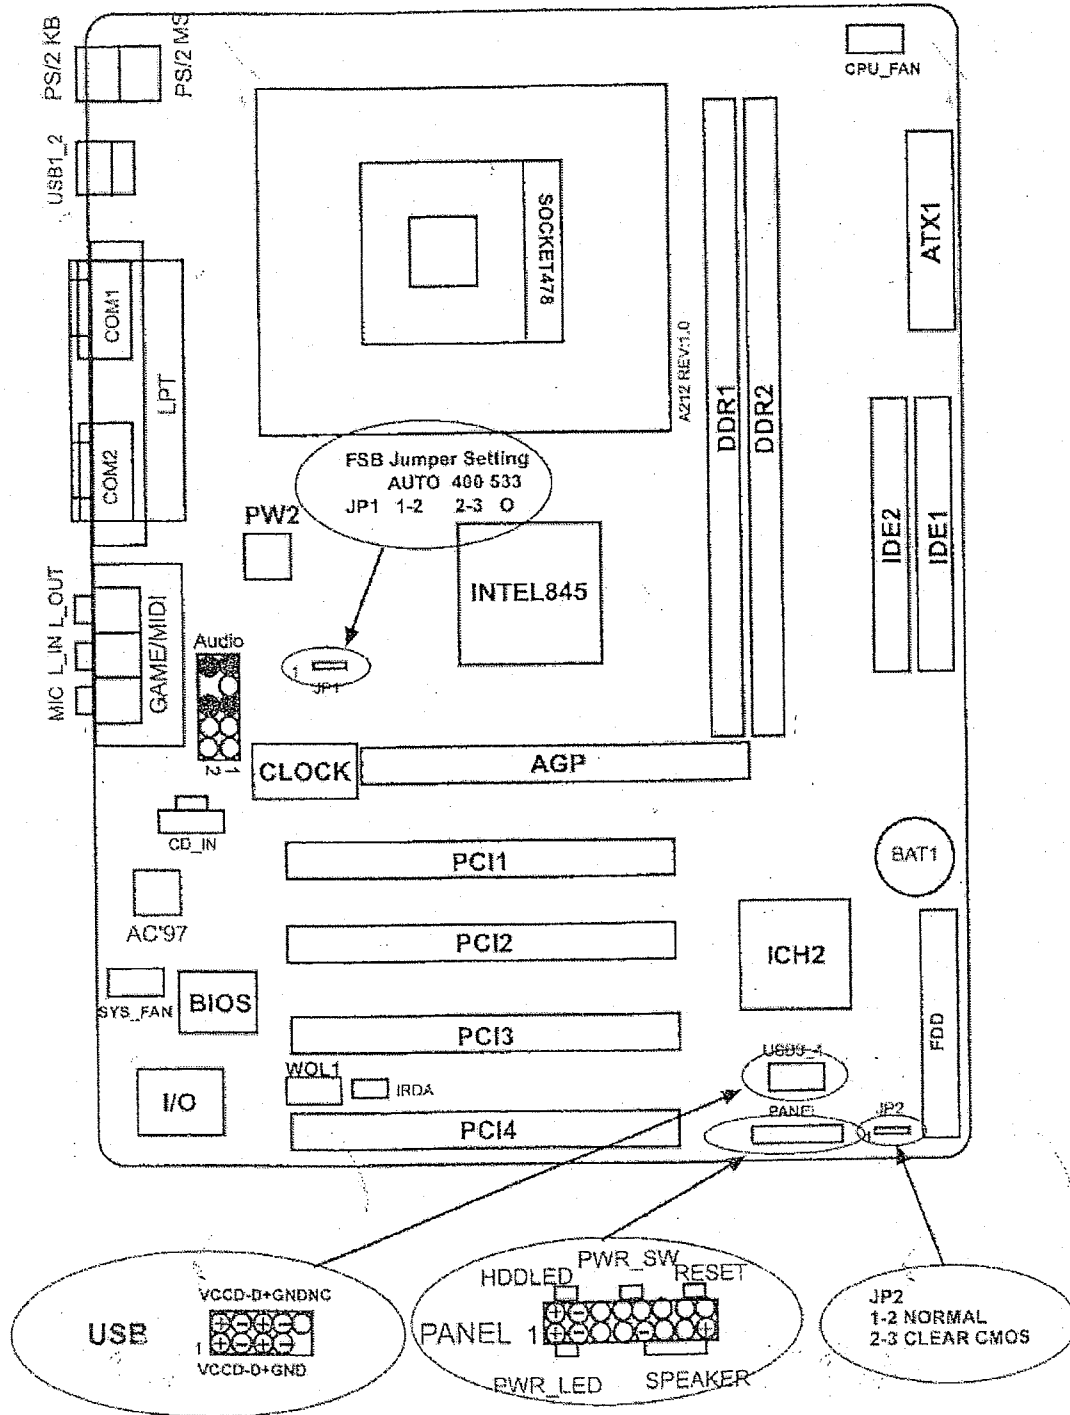

Hard disk: Maxtor 40G

Video card: Geforqmx440/64MB

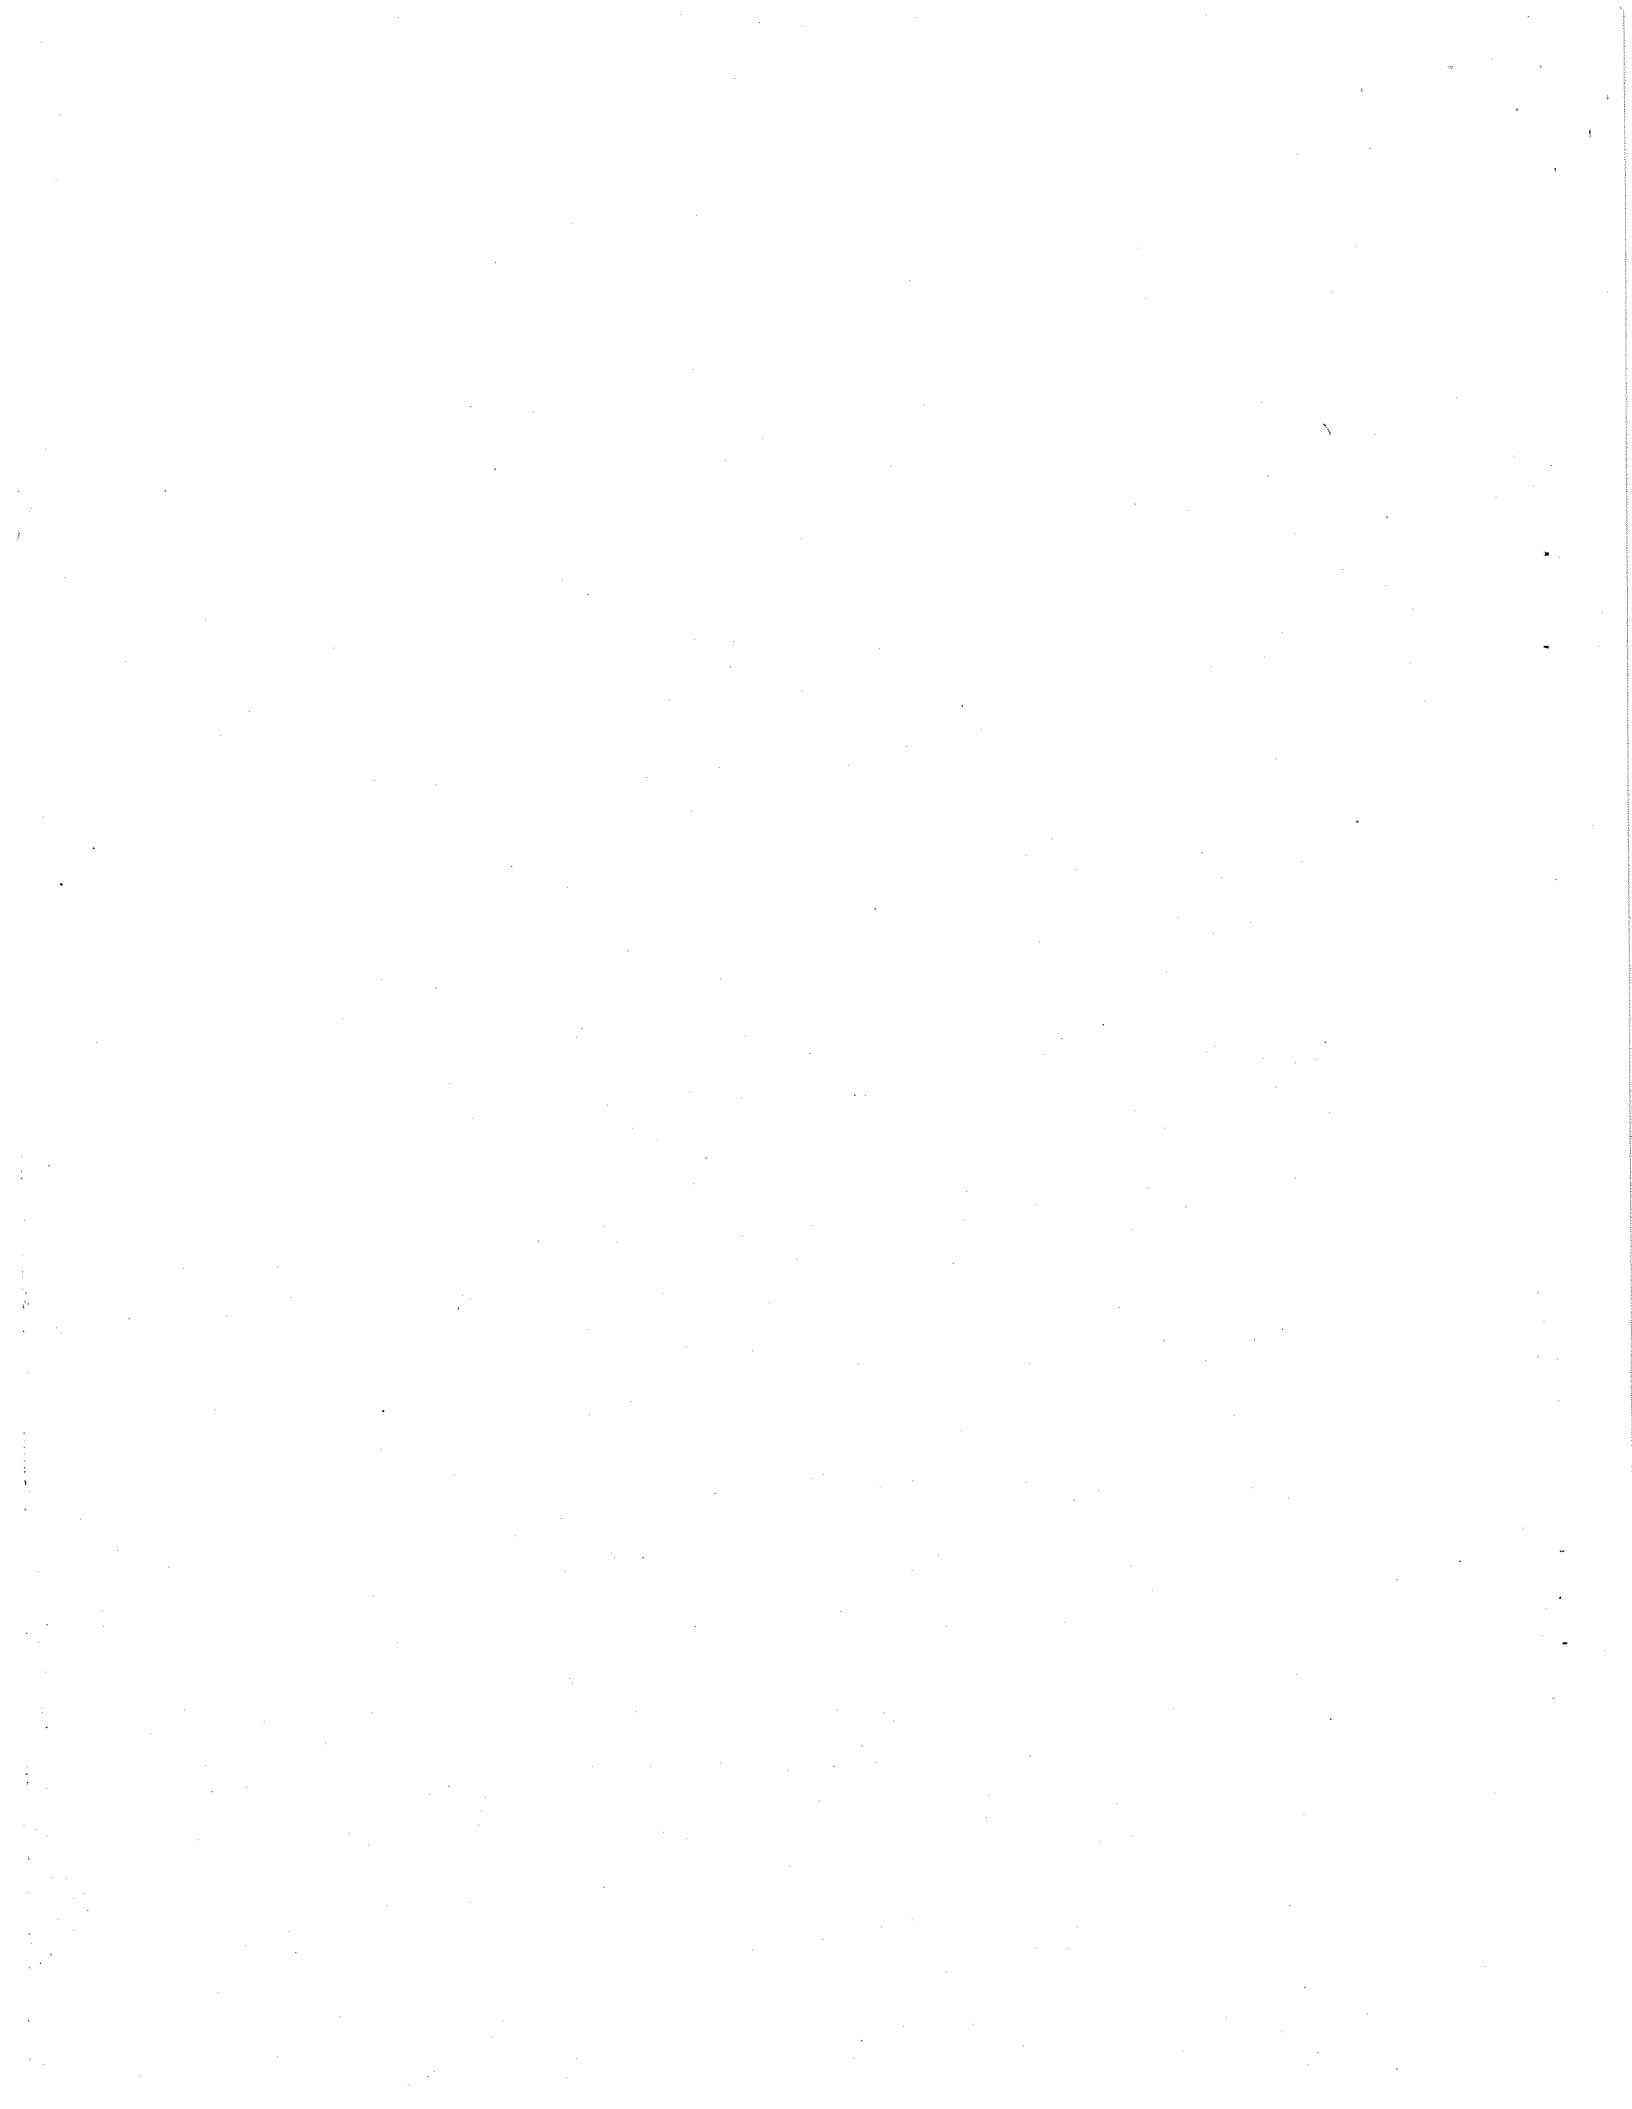

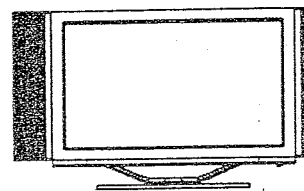

LCD32B65


USER'S MANUAL

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
PREPARATION	3
OPERATING INSTRUCTIONS	5
Use of the remote control	5
To use the menus	6
Main menu	6
CONNECT PERIPHERAL EQUIPMENT	10
Front Panel Control Knobs	10
Preparation	10
Video recorder	11
Camera, camcorder, Video Game set	12
DVD player	12
Digital Set TOP box	13
PC	13
Tips	14
PRODUCT SPECIFICATION	15
BEFORE CALLING SERVICE	17
Glossary	18

Thank you very much for choosing the TCL LCD TV.

We recommend that you take a few minutes to read carefully through this manual before installing and switching on the TV. Please keep this manual in a safe place for your future reference.

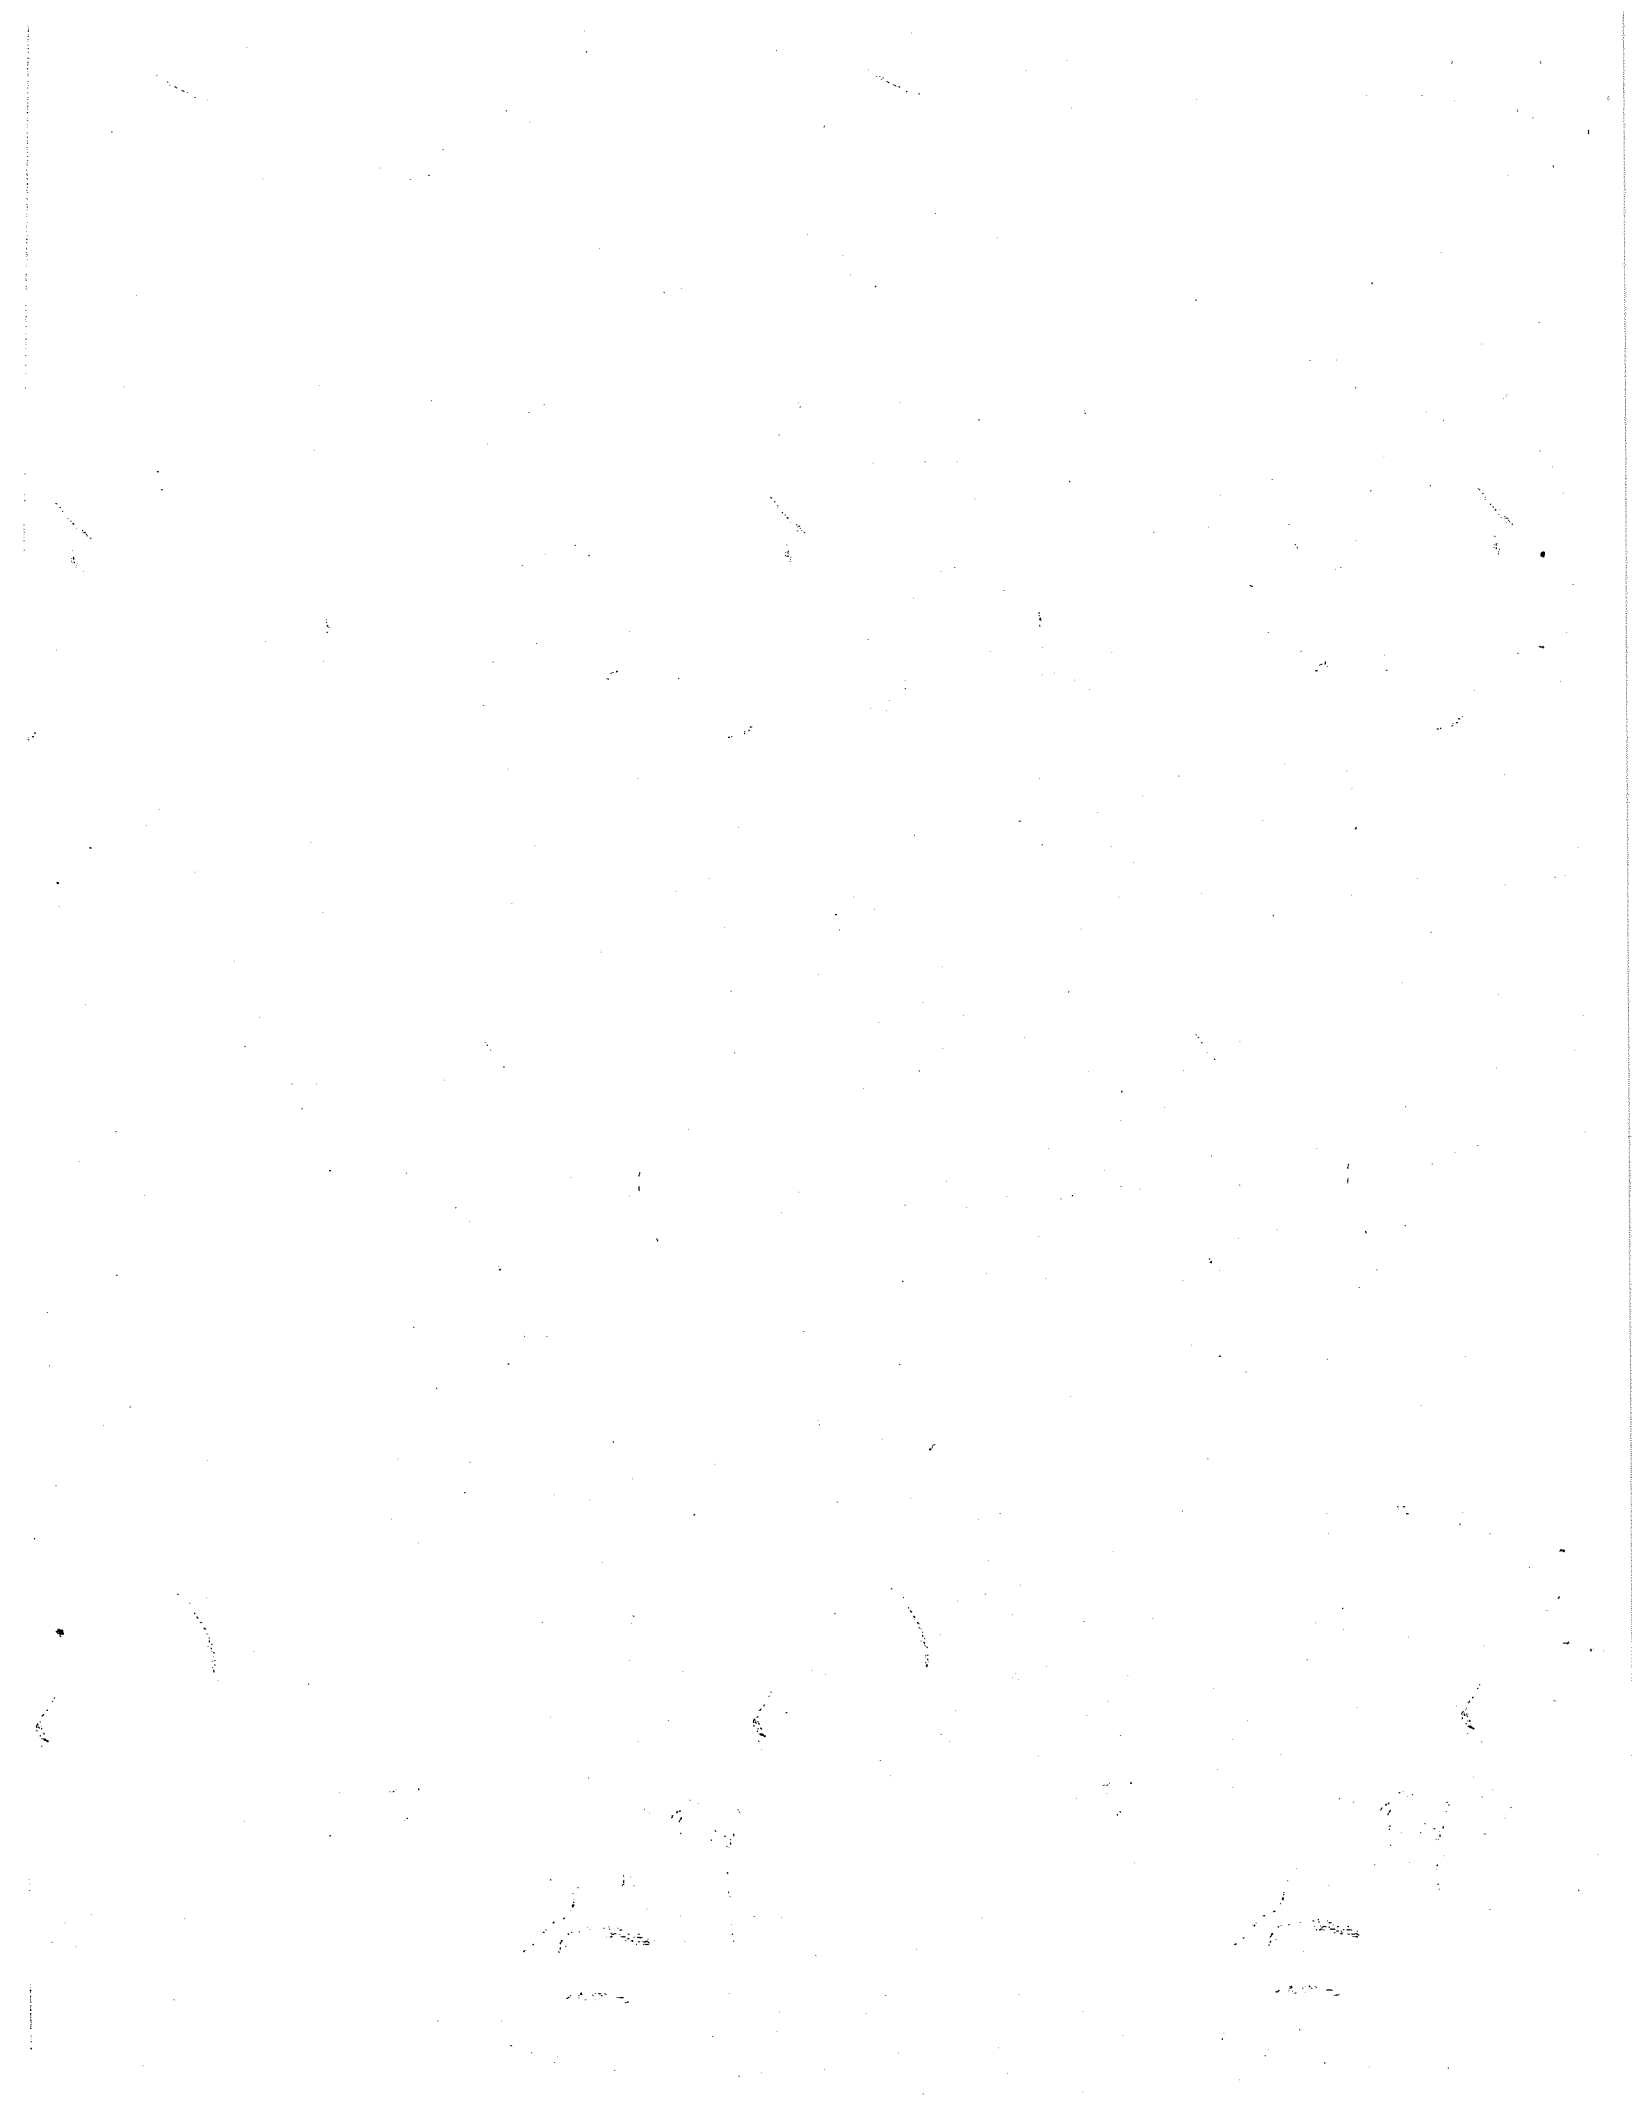


IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. The TV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. This product may contain lead or mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
17. **Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or

- D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
- E. The appliance has been dropped, or the enclosure damaged.
18. **Tilt/Stability** – All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinets design.
- Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet, which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
19. **Power Lines** – An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mats and supporting structure grounding of the lead-in wire to an antenna-discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure below.

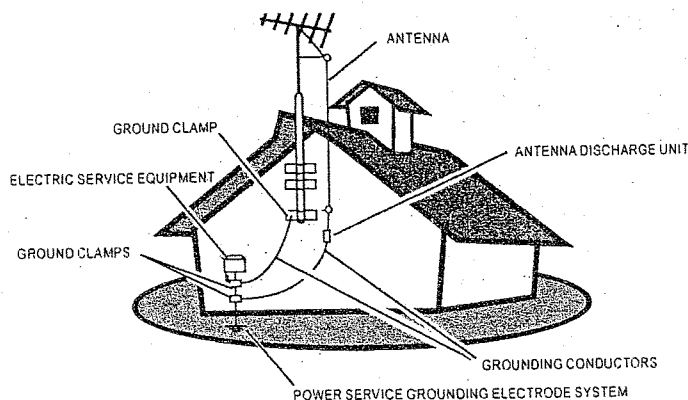

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE


Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Please, make sure to connect the power plug to the wall outlet socket after connecting the TV to the adapter!

21. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

PREPARATION

1. Place the TV on a solid surface.

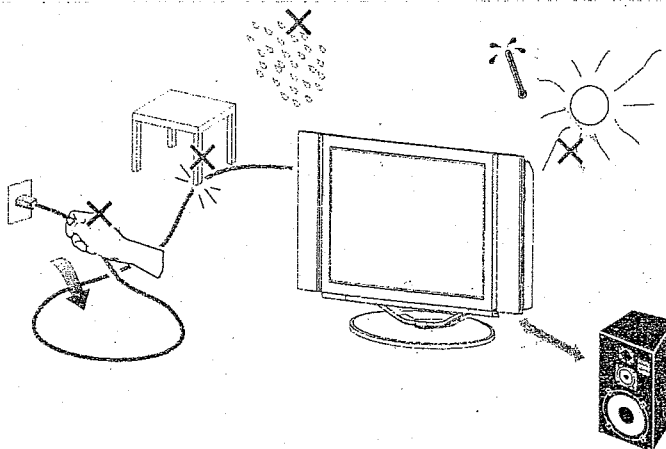


Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.

To prevent any unsafe situations, no naked flame sources; such as lighted candles, should be placed on or in the vicinity.


Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.

2. Insert the aerial plug firmly into the aerial socket **ANT IN 75Ω** at the back of the TV.

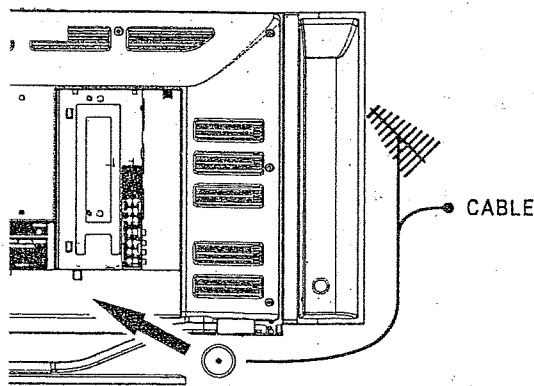

3. Remote control:

Remove the cover of the battery compartment. Insert the 2 batteries supplied (Type AAA 1.5V).

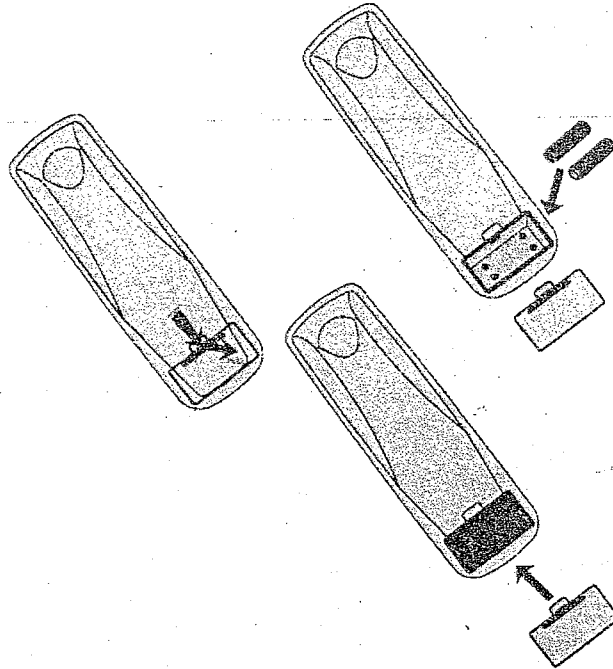

4. Power:

Insert the power cord in the wall socket having an AC power supply.

5. Turn the TV on:

Press the power button at the top of the TV to turn it on.

If the TV is in power off, the indicator in front of the TV illuminates amber.


6. How to assemble speakers:

Step 1: Ues^②(in accessory box) lock to TV noumenon^③.

Step 2: lock speaker as^①.

Step 3 : connect speaker to TV.

Please refer to the graph .

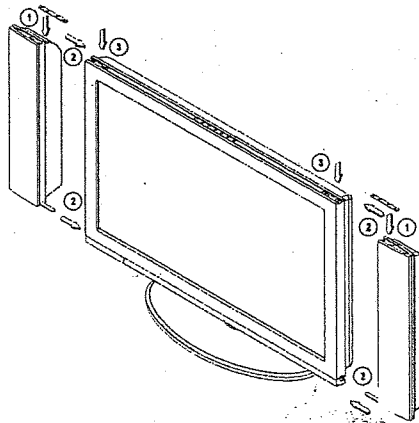

OPERATING INSTRUCTIONS

USE OF THE REMOTE CONTROL

POWER

Press to turn on/off the TV. The TV is never completely powered off unless it is physically unplugged.

CH

Press \wedge or \vee (or \blacktriangle or \blacktriangledown button) to browse through the TV channels which are not erased.

0-9/100 Digit buttons

To select a TV channel.

VOL

Press + or - (or \blacktriangleleft or \blacktriangleright button) to adjust the volume.

NICAM


To select Mono /Stereo/Sound A /Sound B/Sound AB from TV RF input.

SLEEP

With this key you can set a time period after which the TV should switch itself to standby. Press the key repeatedly to select the number of minutes. The counter runs from 30, 60, 90, 120 minutes. The timer begins to count down from the number of minutes selected after the display has disappeared.

PIP

Select PIP on/off.

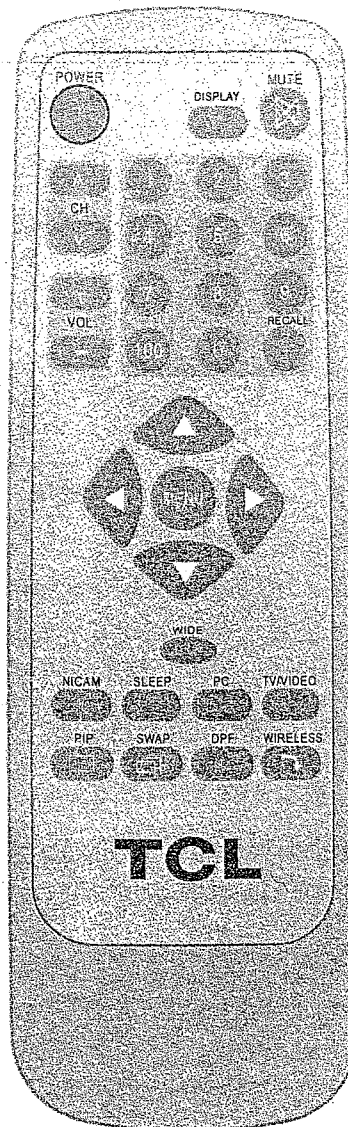

MUTE

Temporarily interrupt the sound or restore it.

DISPLAY

- (1) Display Channel number when use RF input.
- (2) Display input source when use other input except TV RF input.

RECALL

To display the previously selected TV channel.

TV/VIDEO

Select your input source: press repeatedly to select TV, AV1, AV2, S-VIDEO or COMPONENT mode, according to where you connected your external source.

- AV1/AV2 for a VCR connected to the AV connectors of the TV.
- S-VIDEO for a S-Video VCR connected to the S-VIDEO connector of the TV.
- COMPONENT for a DVD/DTV Set Top Box or another component video device connected to Y, Pb, Pr and to the AV AUDIO inputs L and R.

MENU Press repeatedly to display OSD menu.

DPF

Not support.

WIDE

Includes 3 modes: Press repeatedly to select 4:3 /16:9 / 16:9 non-Linear.

SWAP

Not support.

WIRELESS

Not support.

PC


select your input source to PC.

TO USE THE MENUS


1. Press the **MENU** button repeatedly to display each menu
2. Use the cursor up/down to select a menu item or adjust the setting of Menu item.
3. Use the cursor left/right to enter a submenu or enable the function.
4. Press the **MENU** button to exit the menu.

MAIN MENU


Press the **MENU** button into the main OSD (On Screen Display). Adjust item include **VIDEO ADJUST**, **AUDIO ADJUST**, **PIP**, **SLEEP TIMER**, **SET UP**, **PC ADJUST**.

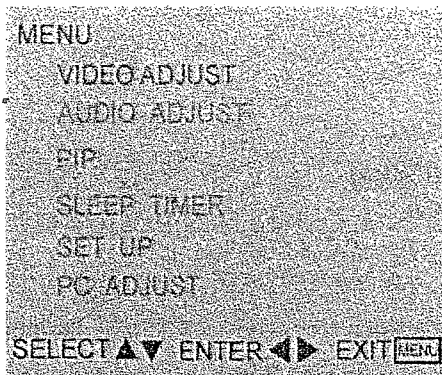

Video Adjust

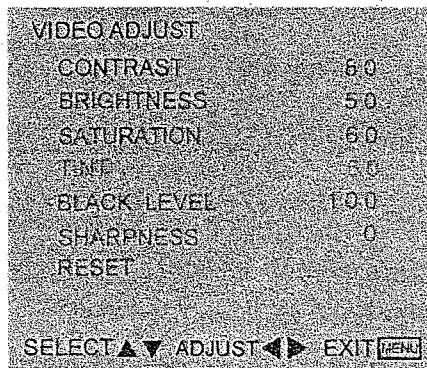


1. **Contrast**, **Brightness** and **Saturation** are adjusted from 0 to 100.
2. **Black Level** is adjusted from 0 to 100.
3. **Sharpness** is adjusted from -5 to +5.
You can adjust picture contrast, brightness, saturation, tint, black level and sharpness to the levels you prefer.
4. **Reset** is set up to default value.

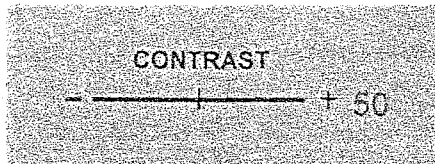


When adjust any item sub-OSD will show up like this.

Audio Adjust

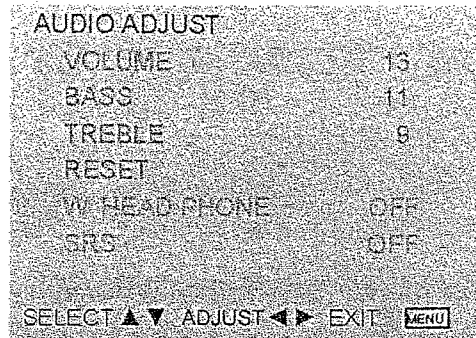


1. **Volume** is adjusted from 0 to 100.
 2. **Bass** and **Treble** are adjusted from 0 to 100.
- You can adjust picture Volume, Bass and Treble to the levels you prefer.

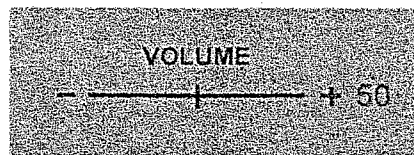

When adjust any item sub-OSD will show up like this.

PIP


1. PIP function is turn on /off small picture
2. Position is move for small picture
3. Source is choose from TV /AV1/AV2/S VIDEO
4. Audio select is choose from MAIN/SUB

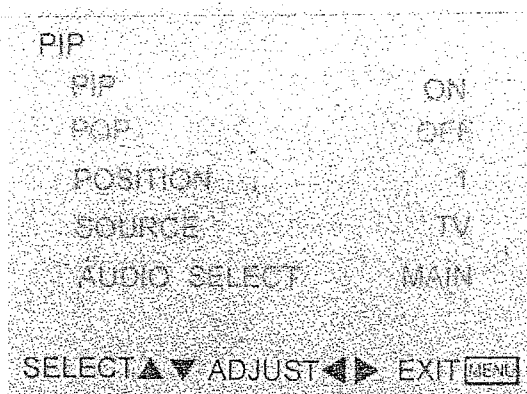

Sleep Timer is for set a time period after which the TV should switch itself to standby. The counter runs from 30 > 60 > 90 > 120 minutes. The timer begins to count down from the number of minutes selected after the display has disappeared.

Note: To view the remaining time, press the **SLEEP** button once. To cancel the sleep time, repeatedly press the **SLEEP** button until --- APPEARS. If you turn the TV off after setting the sleep time, the setting will be erased. Set it again.

Set up

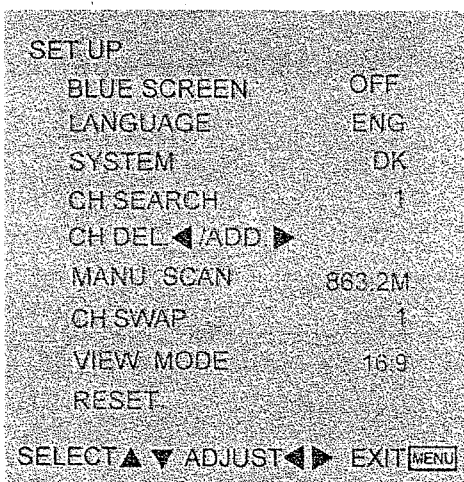


1. **Blue screen** for when no video input screen will be blue or blank. If it's ON, the screen will be in blue. If it's OFF, the screen will be blank. Preset is ON.
2. **Language** for different language OSD MENU includes Simplified Chinese/ English. Preset is Simplified Chinese.
3. **SYSTEM** is select the TV broadcasted system.
4. **CH SEARCH** for search all TV program and storing in memory.


5. **CH DEL.** ◀/ADD. ▶ If " DEL" the channel will be masked.
6. **MANU SCAN** for search TV Program channel by channel.
After scan a new program, press MENU key, it will be automatically saved in the last channel.
7. **CH SWAP** save the location of current channel and destination channel for each other
8. **View Mode** : Includes 3 modes: Press repeatedly to select
4:3 /16:9 / non-Linear.
9. **Reset** is set up to default value of **BLUE SCREEN** and **LANGUAGE** .

PC Adjust

1. **Auto tune** is the function auto-sizing for VGA input.
2. **Contrast, Brightness, Focus, Clock, H Position, V Position and Color** are the functions for PC adjustment.

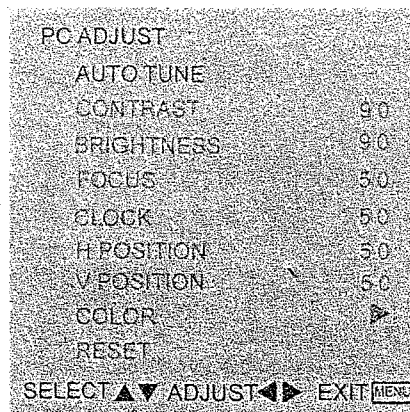


Color for you can adjust the color temperature you prefer.

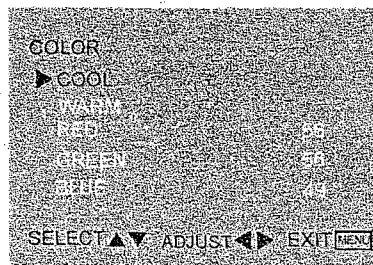

TV and AV color temperature adjust:


User can select 3 kinds of color mode on TV or AV to get more suitable picture which they wished, 3 kinds of mode are cool/warm/standard.

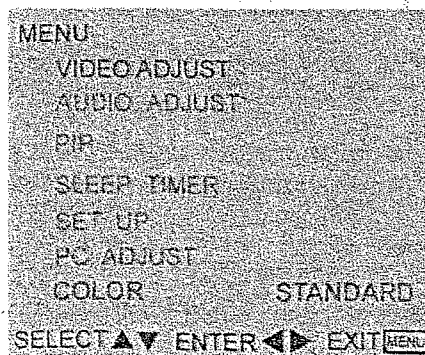


Connect Peripheral Equipment

FRONT PANEL CONTROL KNOBS



-  : Press to turn on or off the TV.
- MENU Key** : Press to show the OSD menu and exit OSD menu at the TV.
- CH Key** : Press to perform select function and channel.
- VOL Key** : Press to confirm your function selection and adjustment.
- Source Key** : Press to select your input source.

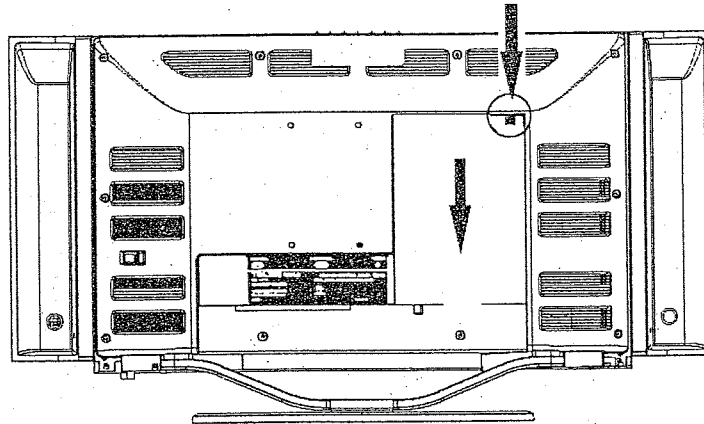

There is a wide range of video and audio equipment that can be connected to your TV. The following connection diagrams show you how to connect them.

PREPARATION


Remove the back plate at the back of the TV as shown on the illustration opposite.

Lay the LCD TV with the screen down on a table, as it will be easier to connect your peripheral equipment. Please take your precautions not to damage the screen.

VIDEO RECORDER

How to connect

1. Connect the supplied antenna cable ① to the **RF IN** port of your VCR.

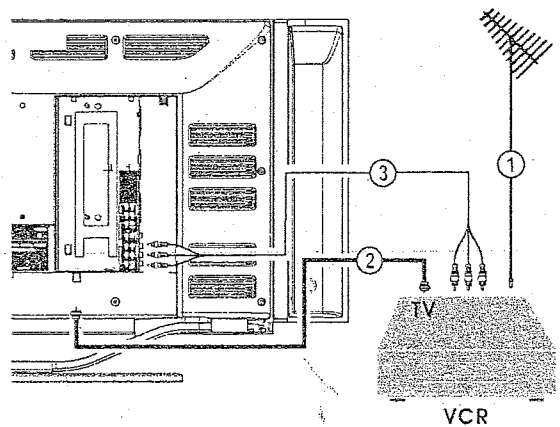

2. Connect another RF cable ② from the output **RF** of your VCR to the input of your TV. Better quality when playing from your **VCR** can be obtained if you also connect the AV (only for stereo equipment) cables ③

If your VCR has an S-VHS video jack:

For improved picture quality, connect a **S-Video** cable with the S-VIDEO input on the TV instead of connecting the VCR to the **VIDEO** port.

S-Video does not provide audio, audio cables must still be connected to provide sound.

Watching VCR


1. If you use connection ②, please select TV channel auto search on OSD, until get the program you need.
2. If you use connection ③, please select **AV1.AV2**
3. Insert videotape in the VCR and press the **PLAY** button.

CAMCORDER, VIDEO GAME SET ...

DIGITAL CAMERA

How to connect

1. Use AV ②③ to
Connect your digital
camera, camcorder,
videogame set

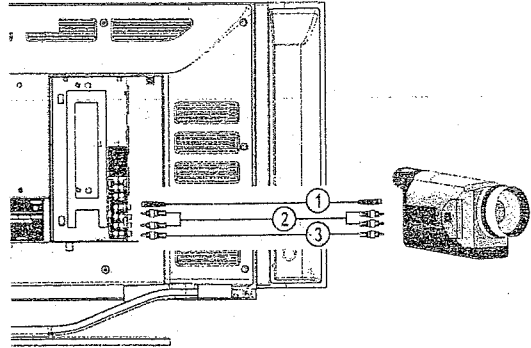

2. For stereo equipment also connect **AUDIO R** ②.
S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cable with the S-VIDEO input ① and **AUDIO** input ②.


How to use

1. Select **AV1**, **AV2** or **S-VIDEO** input .
2. Turn on the external AV equipment.

DVD PLAYER

How to connect

1. Connect the three
separate component
video cables ① to the
DVD player's **Y**, **Pb**
and **Pr** ports and to the
Y, **Pb** and **Pr** ports on
the TV.

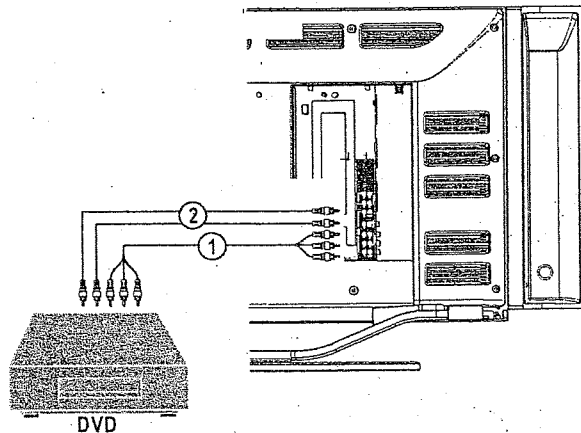


2. Connect the audio cables ② to the DVD player's **AUDIO L** and **R** ports
and to the **AUDIO L** and **R** ports on the TV.

How to use

1. Select **COMPONENT**.
2. Turn on the DVD set.

DIGITAL SET TOP BOX

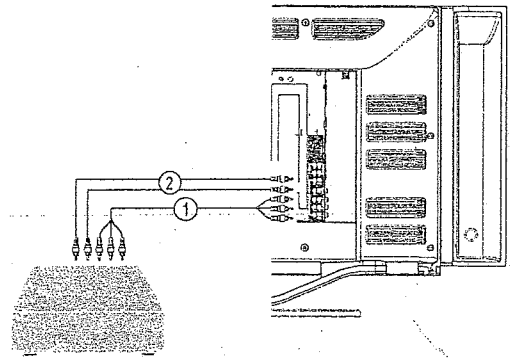

Set up box

How to connect


1. Connect the three separate component video cables ① to the DTV player's **Y, Pb** and **Pr** ports and to the **Y, Pb** and **Pr** ports on the TV.
2. Connect the audio cables ② to the DTV player's **AUDIO L** and **R** ports and to the **AUDIO L** and **R** ports on the TV.

How to use

1. Select **COMPONENT**.
2. Turn on the DTV Set Top Box set.

Warning: In case you notice scrolling images, wrong colors or no color, no picture or even combinations of these, on your screen, check if the connections are done in the right way. Check if the cable colors match with the Input connector colors.

PC

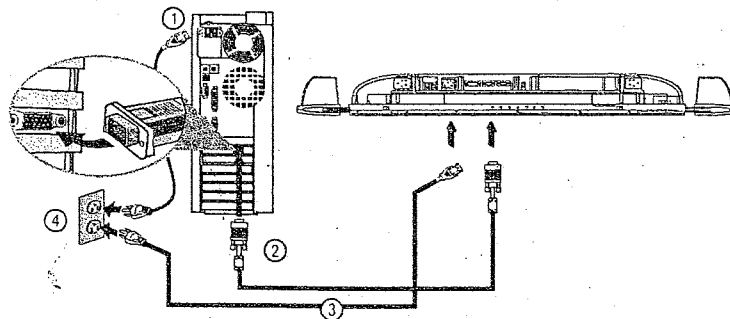

How to connect PC input

- ① please use D-sub signal cable in Accessories plug in D-sub port which is in TV monitor's bottom side of back as Graph.
- ② please use Audio Cable in Accessories plug in PC audio connector port which is in TV monitor's bottom side of back as Graph.

TIPS

Care of the screen

Do not rub or strike the screen with anything hard as this may scratch, mar, or damage the screen permanently.

Unplug the screen before cleaning the screen. Dust the TV by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

Mobile telephone warning

To avoid disturbances in picture and sound, malfunctioning of your TV or even damage to the TV, keep away your mobile telephone from the TV.

End of life directives

We are paying a lot of attention to produce environmentally friendly in green focal areas. Your new receiver contains materials which can be recycled and reused.

At the end of its life specialized companies can dismantle the discarded receiver to concentrate the reusable materials and to minimize the amount of materials to be disposed of.

Please ensure you dispose of your old receiver according to local regulations.

Product Specification

Feature	32" screen WXGA (1366 x 768) Resolution High Brightness (550 cd/m ²) High Contrast Ratio (800:1) Wide Viewing Angle (170°H / 170°V) PC Input Support SDTV/HDTV signal (480i/p,576i/p,720p&1080i)
----------------	---

Items	Specification		
LCD Panel	Screen Size	32" TFT-LCD Panel	
	Aspect Ratio	16:9	
	Resolution	1366 x 768 (WXGA)	
	Display Area (opening) H x V	697.68mm x 392.26mm	
	Pixel Pitch	0.51mm x 0.51mm	
	Display colors	16.7 million	
	Contrast Ratio	800:1	
	Brightness	550cd / m ²	
	Viewing Angle	170° (Horizontal)/ 170° (Vertical)	
	Response Time	12ms	
	Lamp Type/Life	60000 hr	
Color Temperature	Cool / Warm		
TV Function	TV Standard	PAL B/G ,D/K , I , NTSC M	
	Sound systems	NICAM ,A2 ,BTSC	
Video Inputs	AV1	RCA x 1	Audio L/R x 1
	AV2	RCA x 1	Audio L/R x 1 (Share)
		S-Video x 1	
	Component	YPbPr x 1	Audio L/R x 1
Color system	PAL/SECAM/NTSC		

PC Input	Signal Input	Analog: D-Sub 15 pin (detachable cable)
	PnP compatibility	DDC 2B
	Input frequency	Analog: FH: 31.5kHz to 50kHz FV: 60Hz to 75Hz
	Recommended	Analog: 1360x 768 (60Hz)
	Input Audio	Headphone Mini-jack for stereo (3.5ø)
Audio Output	Audio Output: L / R	Speaker: Two 10 watt speakers
		Headphone Mini-jack for stereo (3.5ø)
		Line Output (RCA L/R)
OSD language	Simplified Chinese / English (Default Language: Simplified Chinese)	
Table Stand	Included	
Wall Mount	VESA 100*100*175 mm	
Power	Power Supply	AC100V~240V, 50/60Hz
	Power Consumption	<180W
Panel Tilt	Forwards/Backwards/Rotation	- 5° / + 20° / ± 35°
Environment	operating temp	+ 0°C ~ + 40°C
	storage temp	- 25°C ~ + 60°C
	operating humidity	10% ~ 85%
Dimension	W x H x D. (with stand and speaker)	1030 x 572.5 x 260(mm)
Weight (net)	Kg (w/o Accessories)	22.5 Kg
Accessories	Remote Controller, Batteries (AAAx2), AC Power Cord, D-sub Signal Cable, Audio Cable, TV Service Guide for User, TV Guaranty Card, User's Manual, Setup Guide	

Before Calling Service

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to follow
"Ghost " or double image	*This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	*Check that the TV's AC power cord is plugged into the mains socket. *Unplug the TV, wait for 60 seconds. Then re-insert plug into the mains socket and turn on the TV again.
No picture	*Check antenna connections at the rear of the TV to see if it is properly connected to the TV. *possible broadcast station trouble. Try another channel. *Adjust the contrast and brightness settings. *Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	*Increase the VOLUME. *Check that the TV is not muted; press the button on the remote control.
Good sound but poor color	*Adjust the contrast, color and brightness settings.
Poor picture	*Sometimes, poor picture quality occurs when having activated an S-VHS camera or camcorder connected and having connected another peripheral at the same time. In this case switch off one of the other peripherals
Snowy picture and noise	*Check the antenna connection
Horizontal dotted line	*This may be caused by electrical interference (e.g. hairdryer, nearby neon lights, etc.) *Turn off the equipment.
Television not responding to remote control	*Check whether the batteries are working. Replace if necessary *Clean the remote control sensor lens on the TV. *You can still use the buttons at the front of your TV. *Select the TV mode to be sure your remote control is in the TV mode.

GLOSSARY

Audio / Video Inputs

Located on the rear and the front of the receiver these connectors (RCA phono type plug) are used for the input of audio and video signals. Designed for use with VCRs (or other accessories) in order to receive higher picture resolution and offer sound connection options.

S-Video Input

Allows direct connection of high-resolution video sources, such as a Super VHS videocassette recorder, Laser Disc player, etc. Provides improved picture resolution, sharpness, and clarity.

HDTV input

Allow user connect Height definition input , such as DVD player , HDTV TV of component input , provide better performance and sharpness.

Video outputs

Provide audio output , to use external speaker for Higher voice quality.

Menu

An on-screen listing of feature controls shown on the TV screen that are made available for user adjustments.

Multichannel Television sound (MTS)

The broadcast standard that allows for stereo sound to be transmitted with the TV picture.

RF

Radio Frequency or modulated signal design used as the carrier for television broadcasts.

Second Audio Program (SAP)

Another or additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed program).

Sleep Timer

Function with which you can set a time period after which the TV should turn itself off.