




OWNERS MANUAL

Main Board Diagram

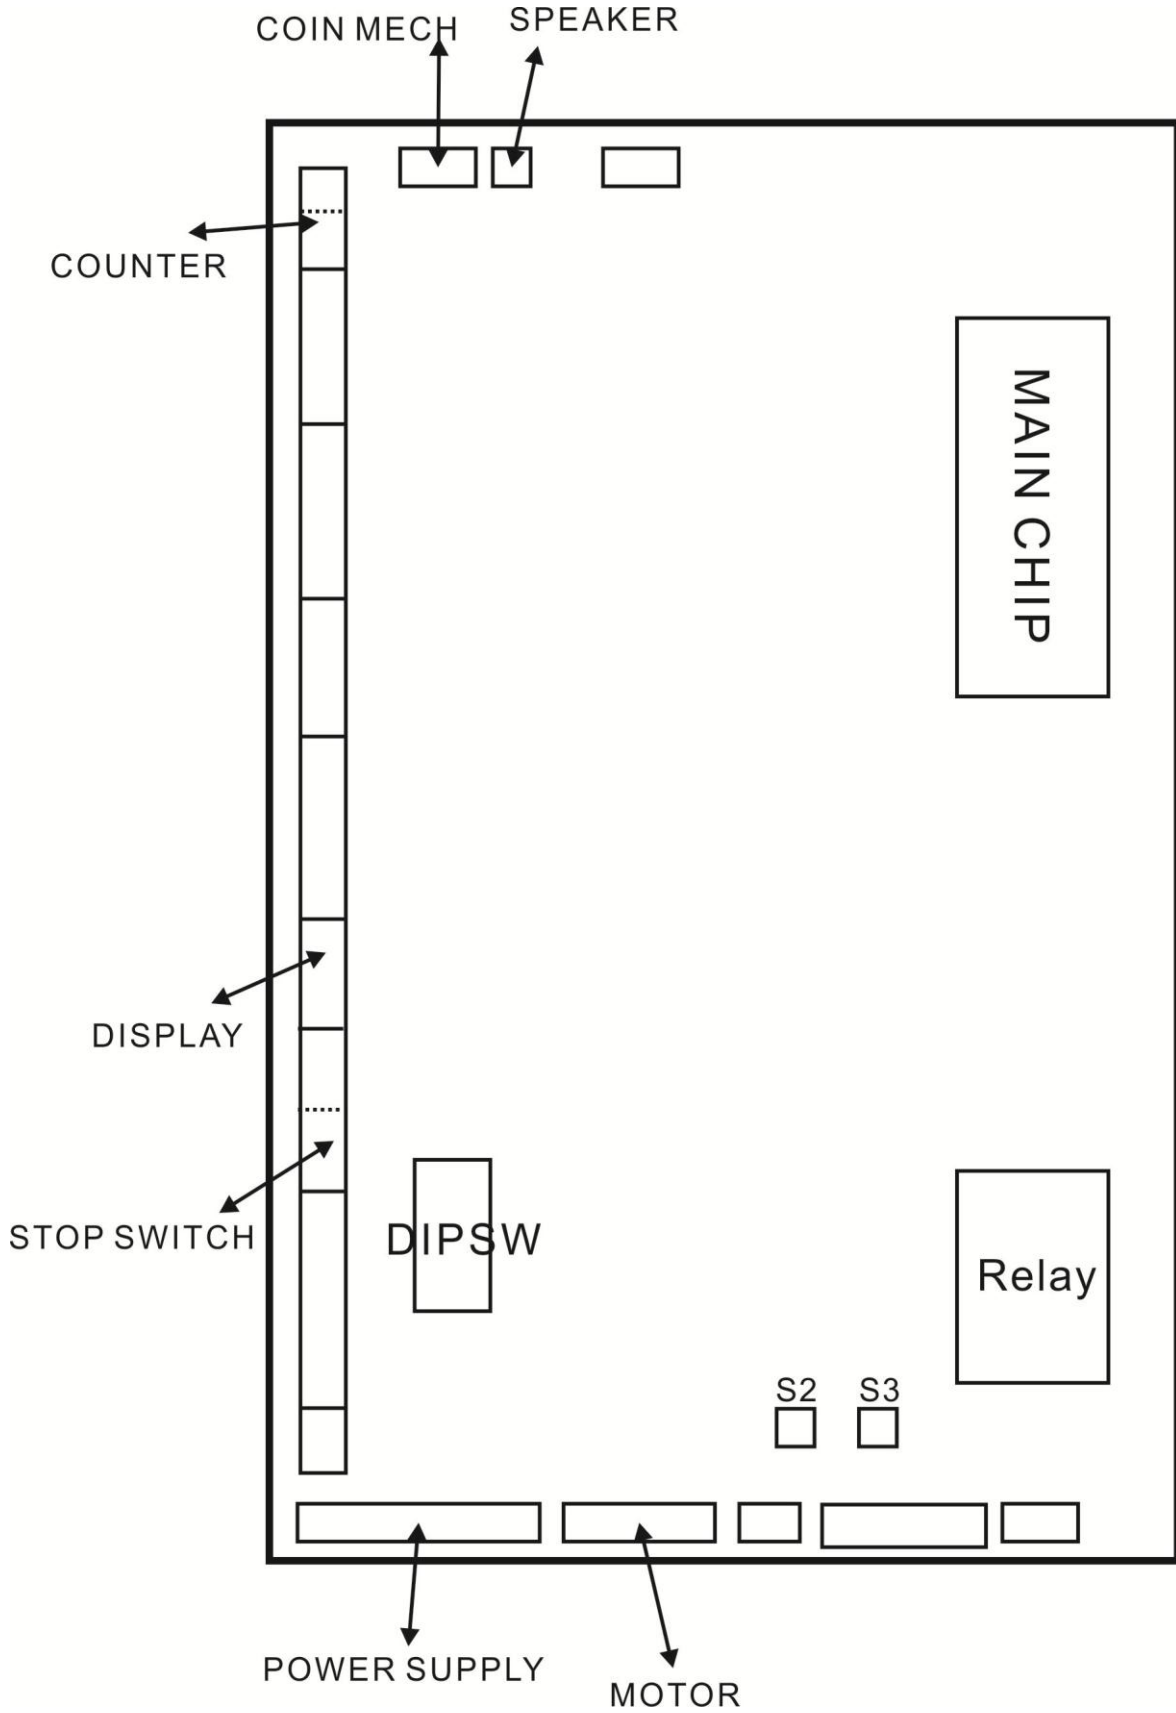

SETTING

1. PRESS "S3" BUTTON AND TURN ON THE MACHINE.
 2. ENTER THE SETTING MODE.
 3. "S2" BUTTON TO CHANGE THE VALUE. "S3" BUTTON TO SWITCH DIFFERENT SETTING.
 4. SE1=PRIZE VALUE
SE2=COIN VALUE(1 COIN=X CREDIT)
SE3=TIMING TO GIVE OUT AN EGG PER PLAY.
- AFTER SE3 WILL ENTER DISPLAY TEST MODE. "S2" TO CHANGE THE TEST DIGIT.

ERROR CODE

1. 03=MEMEORY ERROR
2. 30=COIN ERROR
3. 27=PRIZE MICROSWITCH ERROR, MOTOR ERROR, RUN OUT OF PRIZE

Monkey Bizz Wiring Diagram

JP5	Motor	JP1	Power Supply	JP2	Stop Switch	JP15	Display
12V	Black					5V	Brown
-	Red	12V	Red				Red
				+	Red		Orange
		GND	Black	GND	Black		Yellow
						GND	Green
		5V	Yellow				

JP9	Counter	JP8	Coin Mech	SP	
12V	Red	5V	Orange	+	Black
In	Orange	+	Brown	-	Red
Out	Brown	-	Black		