

NIGHT HUNTER



IMPORTANT



Be Sure
to Read this
Manual
Before Use

UNIS[®]
UNIVERSAL SPACE

www.universal-space.com

Operation Manual

WE ARE HERE TO ASSIST
For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

CONTENT

IMPORTANT SAFETY INSTRUCTIONS.....	3
1. SPECIFICATIONS.....	5
2. CONTENTS OF THE ACCESSORY KIT.....	7
3. PART NAME.....	8
4. SET UP & INSTALLATION.....	9
5. HOW TO PLAY.....	14
6. GAME OPTION.....	16
7. TROUBLE SHOOTINGS.....	18
8. MAINTENANCE & INSPECTION.....	20
9. OVERALL CONSTRUCTION.....	21
10. WIRING DIAGRAM.....	51

Thank you for purchasing **Night Hunter**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

 **This product is an indoor game machine. Do not install outdoors.**

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz; AC220V 50/60Hz

Min. Power consumption: 480W

Max. Power consumption: 1450W

Dimension: W53.8×D86.3×H 84.3 in

W1365 ×D2191 ×H2141 mm



Weight: Approximately 1433 lb

Part No: N111

Model No: C-502




NOTICE: After turning off the game, please wait at least 1 minute before restarting again.

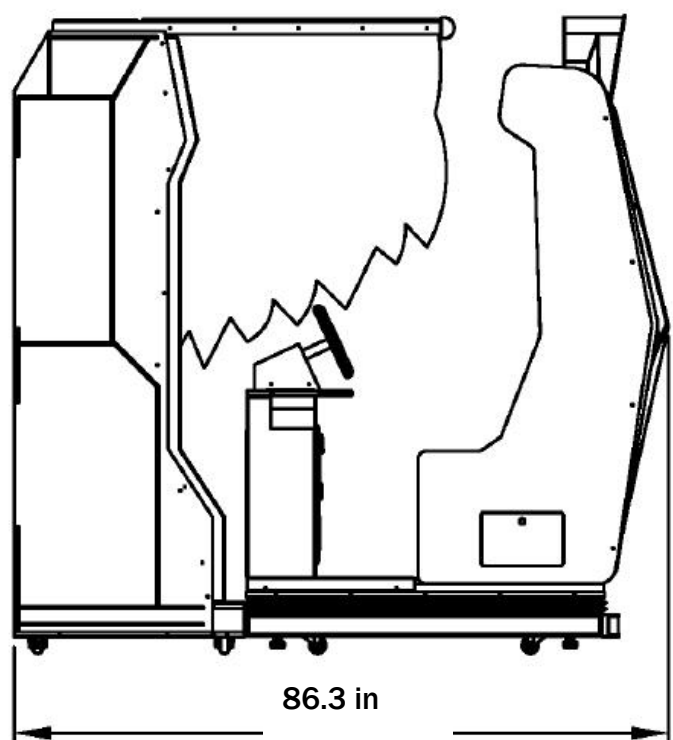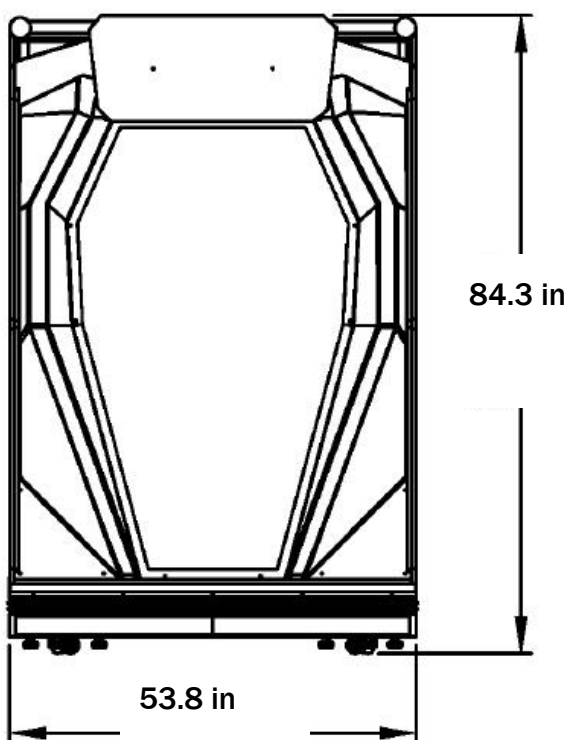

Note: Game specifications are subject to change without notice.


This machine will be divided into two parts during transportation.

Display part: W53.7×D30.4×H82.1in

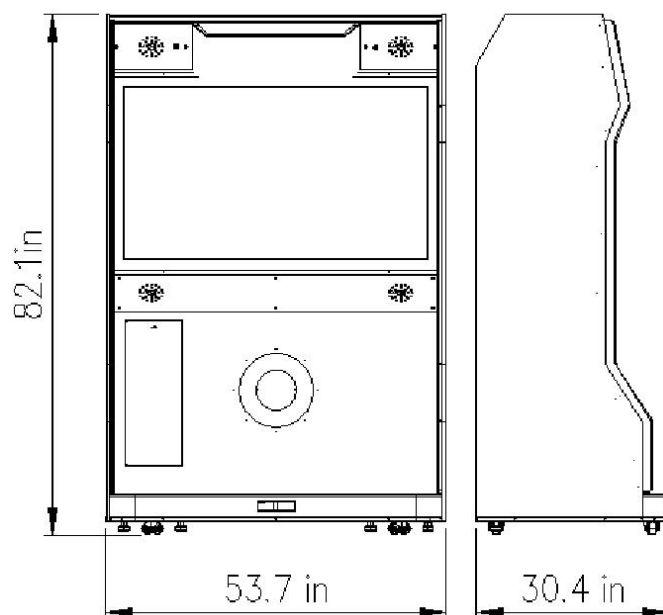

Seat & control panel part:

W53.7×D55.7×H84.3 in

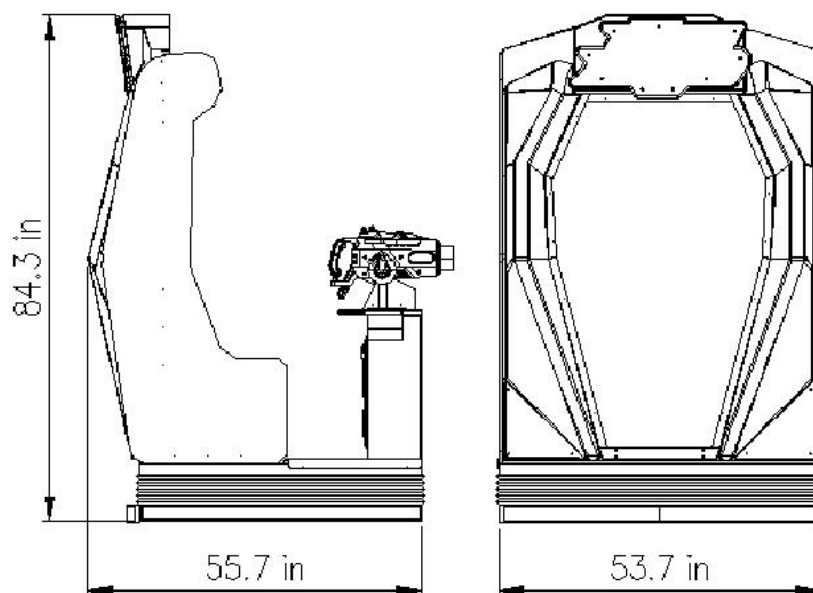

Note: Game specifications are subject to change without notice.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:

1. Following accessories

No.	Part No.	Code	Name	Spec.	Qty	Picture
1	N111-401-000	25300171002	Key	171	2	
2	N111-402-000	25300172002	Key	171B	2	
3	N111-804-000	23301018023	Power cord	SJT 3x14AWG 1.8M UL	2	
4	N111-801-000	41440000240A	Manual	English	1	
5	N111-805-000	40607000012	Allen wrench	CR-V5mm	1	

NOTE: Part models are subject to change without notice.

3. PART NAME

Key Components



4. SET UP & INSTALLATION

! NOTICE


We do not recommend using power tools as they may cause damage.

! **This product is an indoor game machine. Do not install outdoors.**

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid
- Place the unit on a dry level surface
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

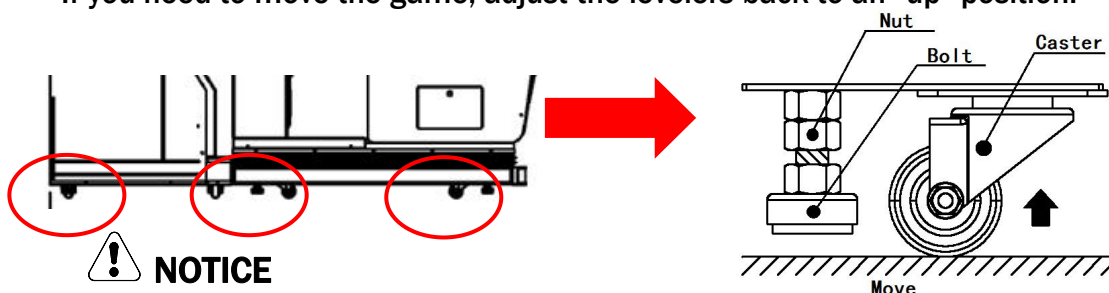


! NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in. Repeat the same for all levelers.

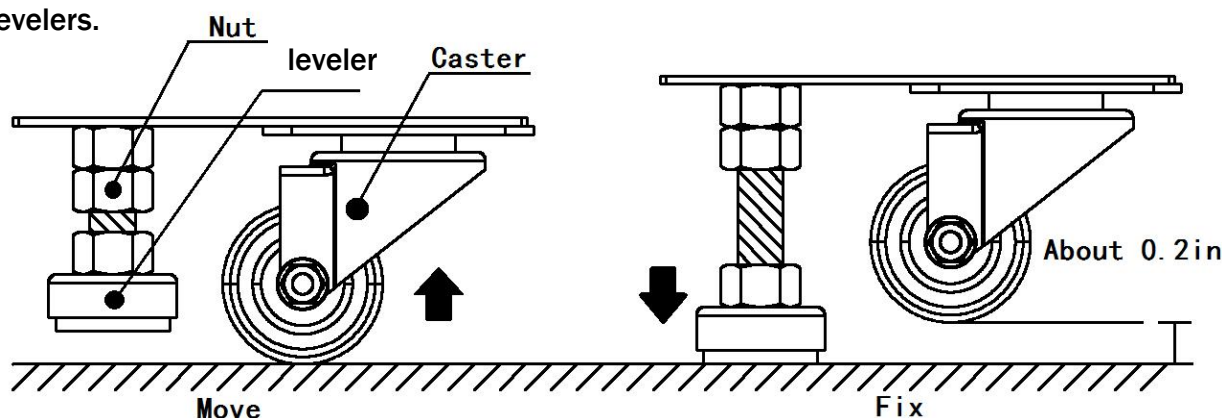

! NOTICE

Make sure the machine is level.

4.3 Installation

Before processing with assembly assure you have the following tools.


No	Name	Picture
1	Phillips screwdriver	

4.3.1 Top cloth assembly

Step 1 Open package and take 3 pieces of cloths out. Note: Please do not use knife to open the package.



Step 2 Take 2 long brackets out. Remove one square metal plate and one strip metal plate screws from each bracket.

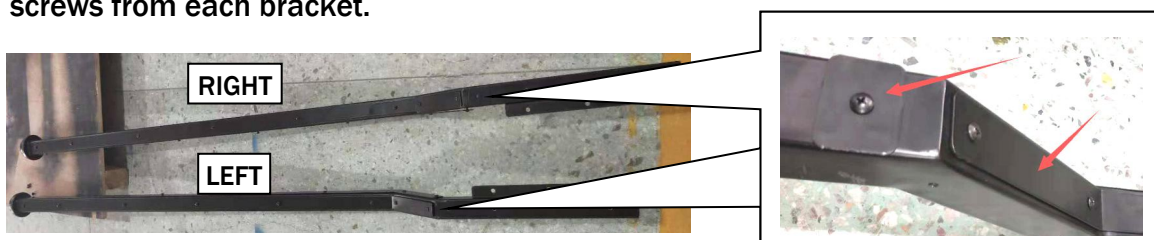

Step 3 Align the holes of the black cloth with the holes of one long bracket.



Step 4 Install the square and strip metal plate back to the original place. Same instruction to the other bracket. The top installation is done.



Step 5 Locate another side plate on the long bracket and remove it. Align the holes of the cloth with the holes of one long bracket.



Step 6 Install the side plate back to the original place. Same instruction on the other side. Side cloth installation is done.




Step 7 Utilize a wrench to remove 3 hexagon screws on each side on top of the monitor cabinet. Put the top assembly as picture shown below and install the screws back.



4.3.2 Cabinet installation

No	Part no	Code no	Name	Picture	QTY
1	Q112-135-000	20104010002	Cross recessed hexagon screw kit		14

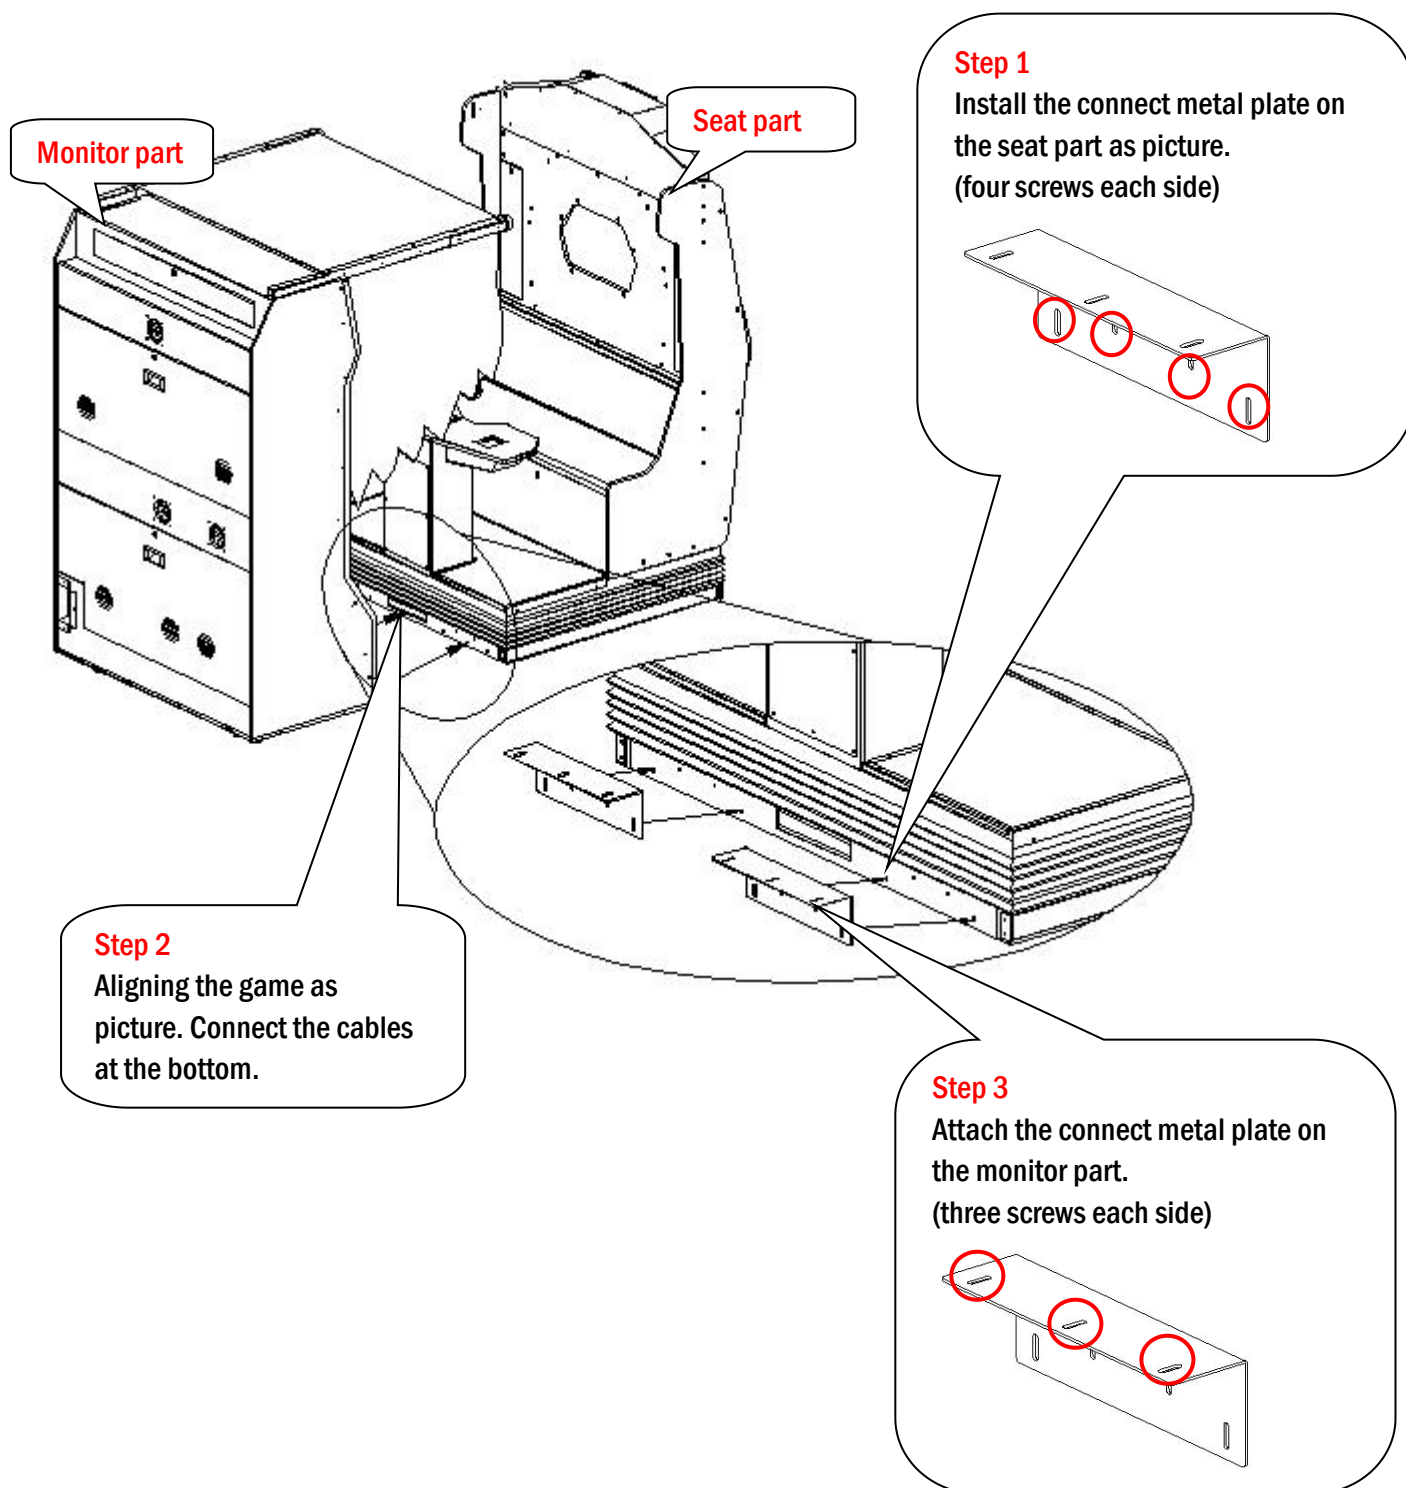


4.4 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Service area: 20 in

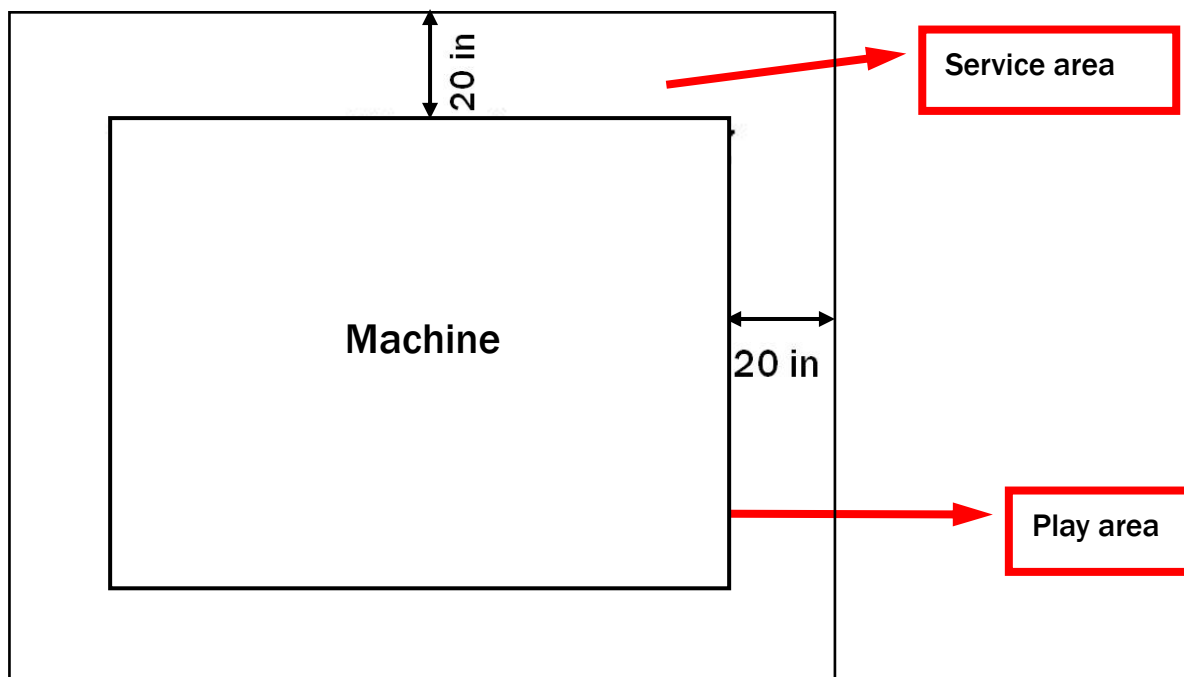

5. HOW TO PLAY

5.1 Insert coins to start the game.

5.2 Swing the handle on each side of the gun to switch between silver bullet and holy water bullet.



Silver bullet for blue eye monsters




Holy water bullet for red eye monsters


Note: If you use the silver bullet to shoot the red eye monster, or use the holy water bullet to shoot the blue eye monster, the damage for the monsters will be reduced 2/3.

5.3 Collect energy for the ultimate skill

Take down the monster to collect the energy and press the button of the handle to use the ultimate skill (double speed and attack, 100% damage for all monsters)

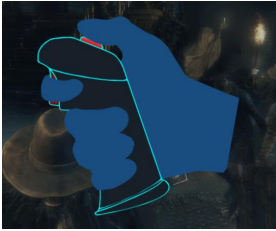


5.4 Use the wheel to dodge or turn the wheel quickly as prompt on the monitor.

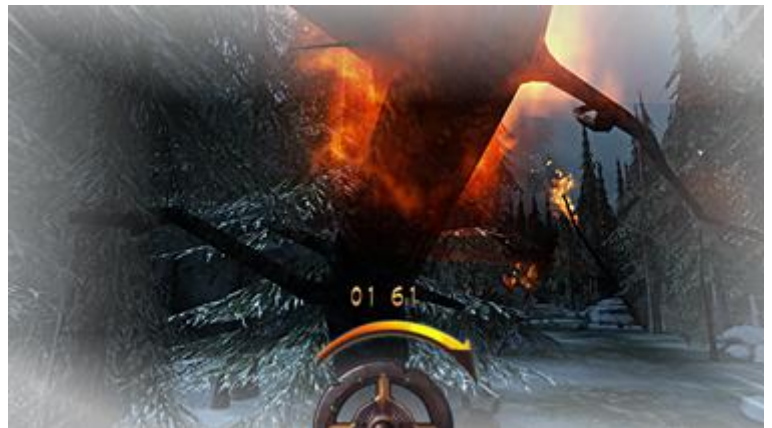

6. GAME OPTION

6.1 Adjustment button instruction

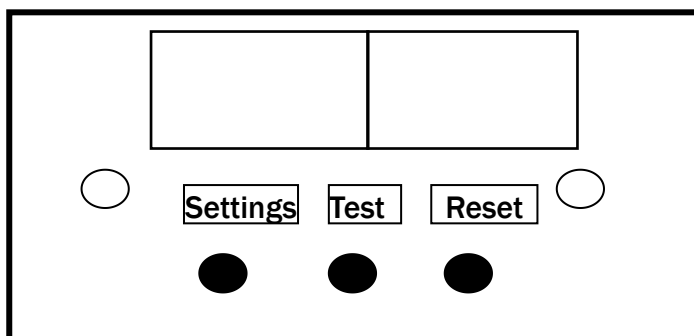

Open the coin door and there is a meter panel. Press Settings button to enter into the setting menu.

6.2 Setting menu

6.2.1 Main menu

Basic Setting
Calibrating Gun
Input Test
Output Test
Game Reset
Date/Time Setting
Bookkeeping
Daily Record
Back to Game

6.2.3 Calibrating Gun

1P Calibrating Gun
2P Calibrating Gun
Back

6.2.2 Basic Setting

Free Play	OFF/ON
Volume	0-10
Difficulty	1/2/3
Coins Per Game	1-50
Demo Music	OFF/ON
Back	OFF/ON

6.2.4 Input Test

Coin Button	OFF/ON
Select Button	OFF/ON
Test Button	OFF/ON
Confirm Button	OFF/ON
1P Emergency Stop Button	OFF/ON
2P Emergency Stop Button	OFF/ON
Steering Wheel	Turn L, L side on , R side off. Turn R, R side on, L side off
1P Index Finger Key	OFF/ON
2P Index Finger Key	OFF/ON
1P Thumb Key	OFF/ON
2P Thumb Key	OFF/ON
1P Change The Gun Key	OFF/ON
2P Change The Gun Key	OFF/ON
Back	

6.2.4 Output Test

Blow	OFF/ON
Pneumatic Platform 1	OFF/ON
Pneumatic Platform 2	OFF/ON
Pneumatic Platform 3	OFF/ON
Pneumatic Platform 4	OFF/ON

6.2.5 Game Reset

Factory Restore	YES/NO
Reset Basic Settings	YES/NO
Reset Customized Settings	YES/NO
Clear All Records	YES/NO
Clear Owed Tickets	YES/NO
Clear Unused Coin	YES/NO
Back	

6.2.6 Date/Time Setting

Year	2010-2100
Month	1-12
Day	1-31
Hour(24)	0-23
Minute	0-59
Second	0-59
Go Back & Save	
Back	

6.2.7 Bookkeeping

Player	Coins	Runtime
1	0	0.00
Back		

6.2.8 Daily Record

Date	Weekday	RunTime	Coins	Tickets	Payout
2014-06-06	1 Fri	00:01	0	0	0.00
Prev. Page Next Page Clear Back					

7. TROUBLESHOOTING

7.1 Common Problem


Please confirm that all connectors fit tightly.

Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Check connector.
	Frame assembly fault	Contact with UNIS Service.
Power off	Circuit protector make power SW in off state.	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
No sound	Low volume	Raise the volume.
	Connector loose.	Check connector.
	Speaker fault.	Check speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.
	PC crash.	Restart or system recovery.
	Driver problem	Restart the audio driver.
Display black screen	Check connectors.	Plug in connector tightly
	Display fault.	Utilize another source such as a PC to verify if the display is operational.
	RAM is loose.	Remove and reinsert RAM.
Display blue screen	PC power cord is loose	Check PC power cord whether is loose.
	VGA signal cable is loose.	Check VGA cable
	PC video card is loose.	Reseat video card.
	“0X000000A” code appears. Conflict between computer drive and software.	Contact service

Note: After replacing component from pc (except for RAM), and replacing monitor, the game should be recovered again with the recovery stick attached to the machine.

7.2 System Recovery Operation **(NOTE: Do not disconnect power during this process.)**

1. Turn off the game. Remove recovery stick from the machine. (Note: This process may take up to 60 minutes) Insert the recovery stick into the port at the back of the computer.
2. Restart PC to enter the system recovery screen as shown.

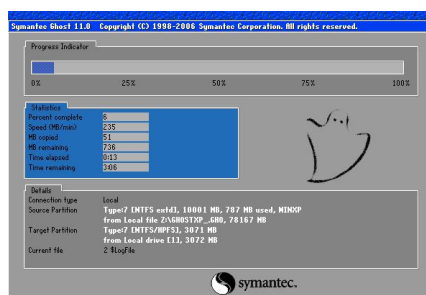

3. The game will automatically start recovery.
4. Once system recovery is partially finished (as shown below), and the ICON appears, remove the recovery stick from the computer. The game will continue the install process.

OK to remove the recovery stick.



5. Assure that the recovery stick has been properly secured for future use.



WARNING: The recovery stick should only be used to fix software errors. Using it for other purposes may cause unexpected results and damages.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful of the following points and pay attention to ensure that the player can enjoy the game safely.


Non-compliance with the following points or inappropriate handling running counter to the cautionary matters herein stated can cause personal injury or damage to the machine

 NOTICE

We do not recommend using power tools as they may cause damage.


9. OVERALL CONSTRUCTION

9.1 General Assembly

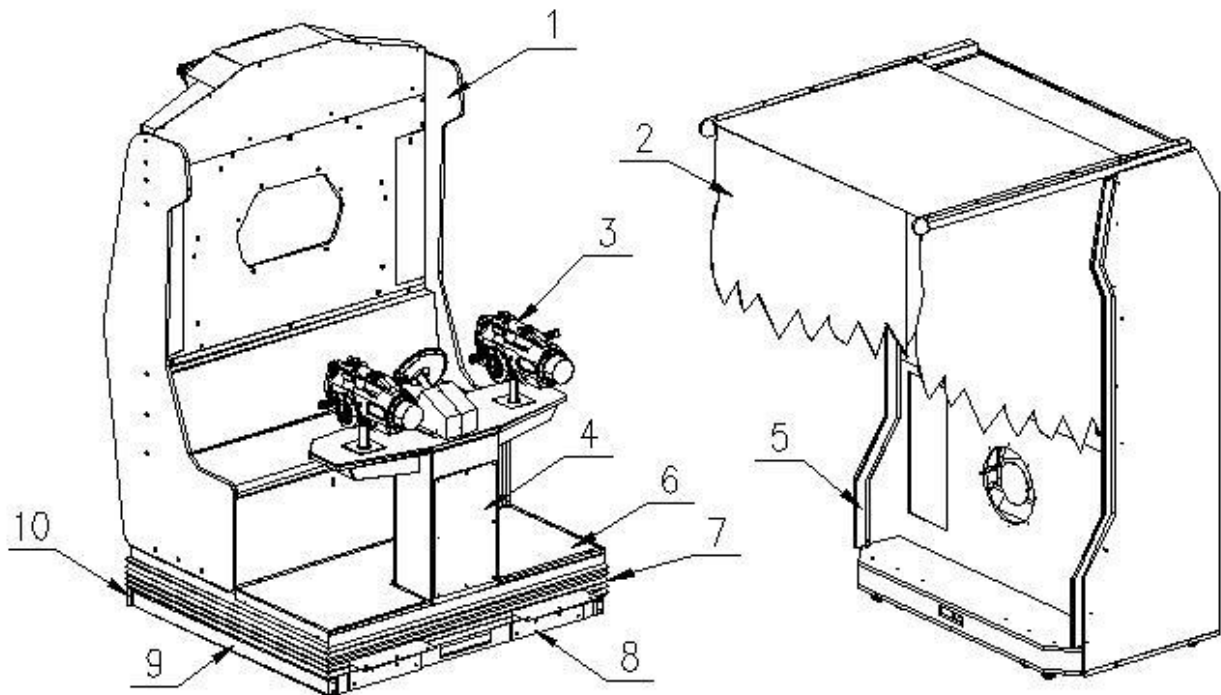


No.	Part No	Code	Name	QTY
1	N111-001-000	29941714A004	Seat assembly	1
2	N111-002-000	29941714A001	Cloth assembly	1
3	N111-003-000	29941714011	Gun assembly	2
4	N111-004-000	29941714013	Control panel assembly	1
5	N111-005-000	29941714A002	Monitor wood case assembly	1
6	N111-006-000	29941714005	Base assembly(top)	1
7	N111-291-000	20641714050	Skirt	1
8	N111-007-000	29941714006	Base assembly(bottom)	1
9	N111-008-000	29941714007	Side light assembly(bottom)	2
10	N111-009-000	29941714008	Back light assembly(bottom)	1

9.2 Cloth Assembly

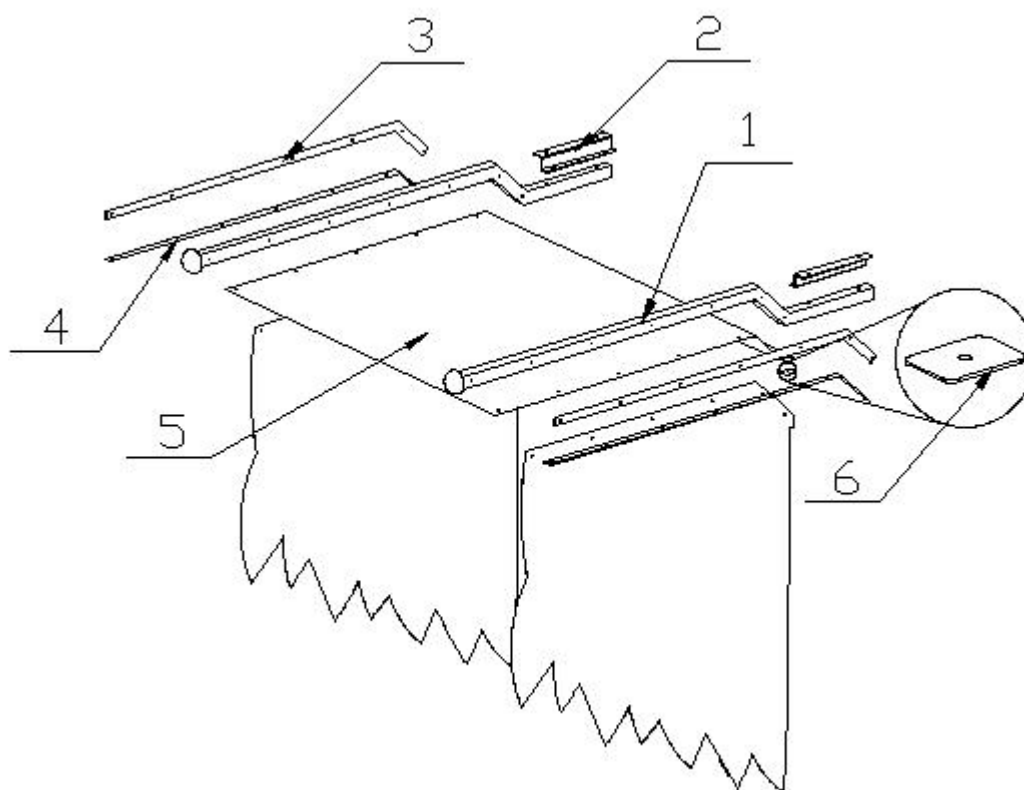


No.	Part No	Code	Name	QTY
1	N111-101-002	20241714001B	Cloth bracket	2
2	N111-104-000	20241714003	Cloth bracket fix plate	2
3	N111-106-002	20241714005B	Side pressing plate	2
4	N111-294-000	20241714131A	Down pressing bar 01	2
5	N111-103-003	20641714048C	Black cloth	1
6	N111-295-000	20241714132	Down pressing bar 02	2


9.3 Monitor Wood Case Assembly

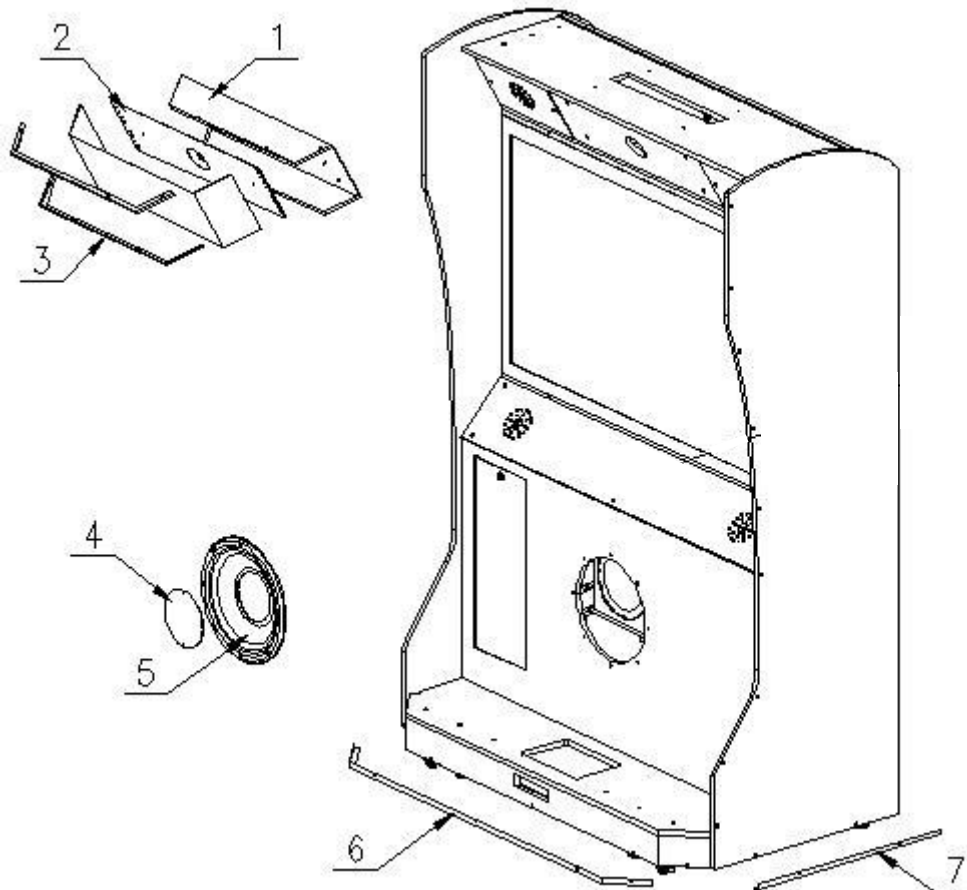


No.	Part No	Code	Name	QTY
1	N111-121-000	20241714011	Top marquee shell	1
2	N111-134-000	20641714002	Light plastic	1
	N111-146-000	26000012000	Shake proof screw A	1
3	N111-122-000	20241714012	Fix bar	1
4	N111-149-000	20241703027	Bass speaker net	1
5	N111-148-000	20641034007	Speaker plastic	1
6	N111-137-000	20241714019	Front molding	1
7	N111-135-000	20241714017	Side molding	2

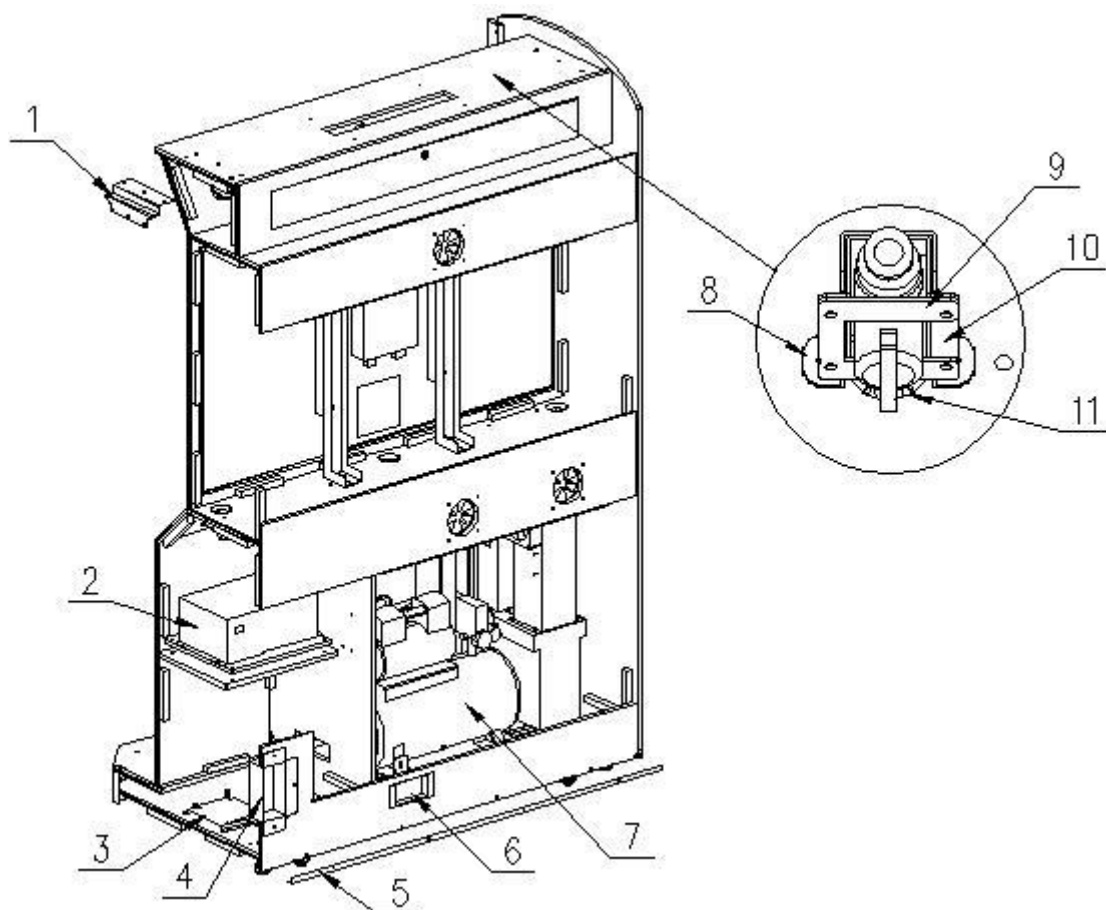

No.	Part No	Code	Name	QTY
1	N111-140-000	20241714022	Cloth bracket (bottom)	2
2	N111-538-001	20341714006B	PC connect plate	1
	N111-146-000	26000012000	Shake proof screw A	4
3	N111-153-002	26000001000D	Wiring box bracket	1
4	N111-147-000	20241714026	Wiring box	1
5	N111-136-000	20241714018	Back molding	1
6	N111-154-000	20241714A001	Wiring box	1
7	N111-010-000	29941714A003	Air compressor assembly	1
8	N111-143-000	20241714025	Bottom bracket	3
9	N111-142-000	20241714024	Air valve bracket	3
10	N111-141-000	20241714023	Air valve bottom bracket	3
11	N111-144-001	20241714124A	Air out let	2

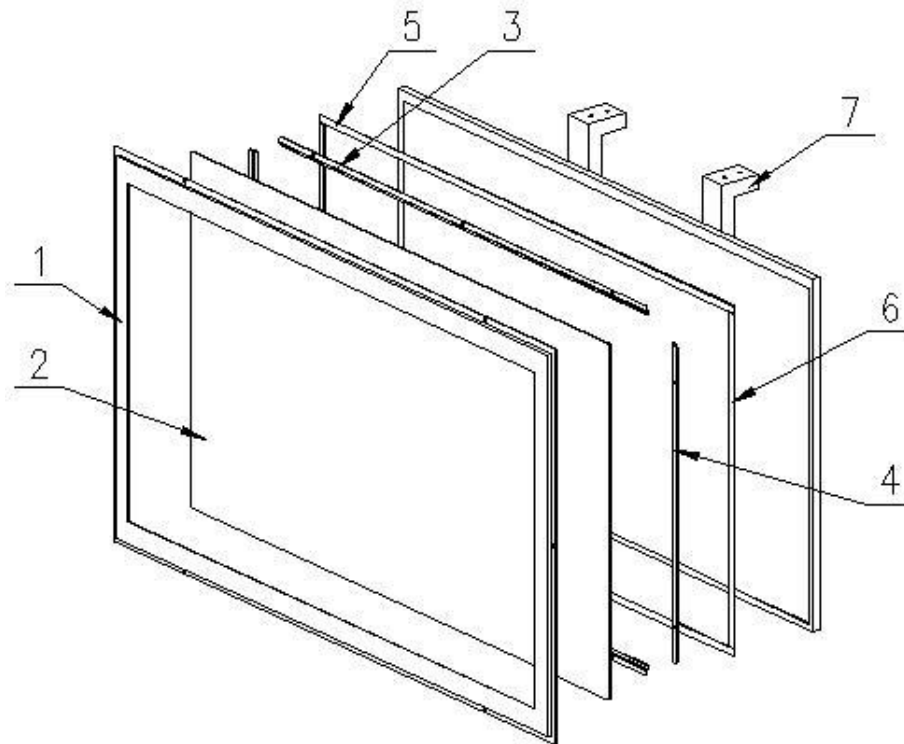


No.	Part No	Code	Name	QTY
1	N111-117-000	20241714008	Monitor frame	1
2	N111-116-000	20641714030	Monitor protect glass	1
3	N111-118-000	20241714009A	Glass up & down plastic	1
4	N111-119-000	20241714010A	Glass L&R plastic	1
5	N111-115-000	20641714042	Monitor up & down plastic	2
6	N111-114-000	20641714041	Monitor L&R plastic	2
7	N111-120-000	20241714105	Monitor bracket	2

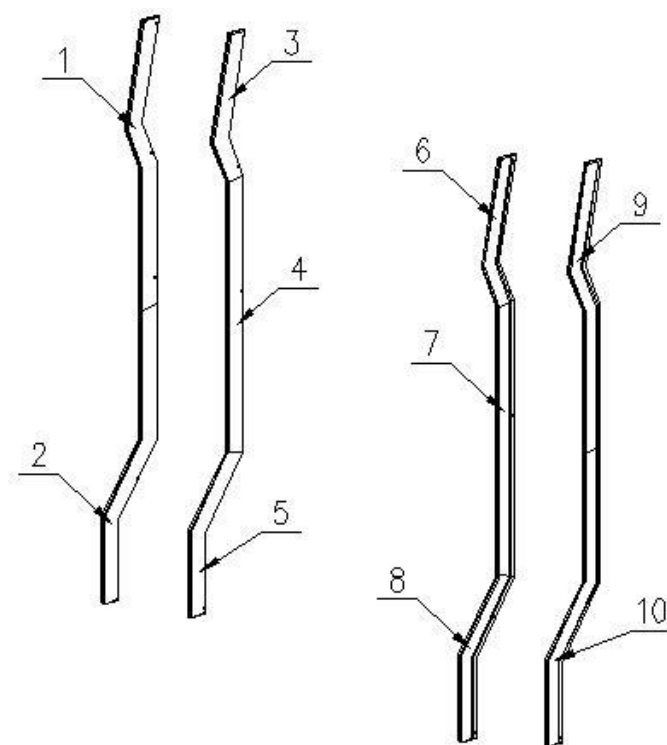


No.	Part No	Code	Name	QTY
1	N111-126-000	20241714016	Top pressing plate R	1
2	N111-124-000	20241714014	Bottom pressing plate R	1
3	N111-128-000	20641714011	Top side plexi. R	1
4	N111-130-000	20641714013	Middle side plexi. R	1
5	N111-132-000	20641714015	Bottom side plexi. R	1
6	N111-127-000	20641714010	Top side plexi. L	1
7	N111-129-000	20641714012	Middle side plexi. L	1
8	N111-131-000	20641714014	Bottom side plexi. L	1
9	N111-125-000	20241714015	Top pressing plate L	1
10	N111-123-000	20241714013	Bottom pressing plate L	1

9.4 Air Compressor Assembly

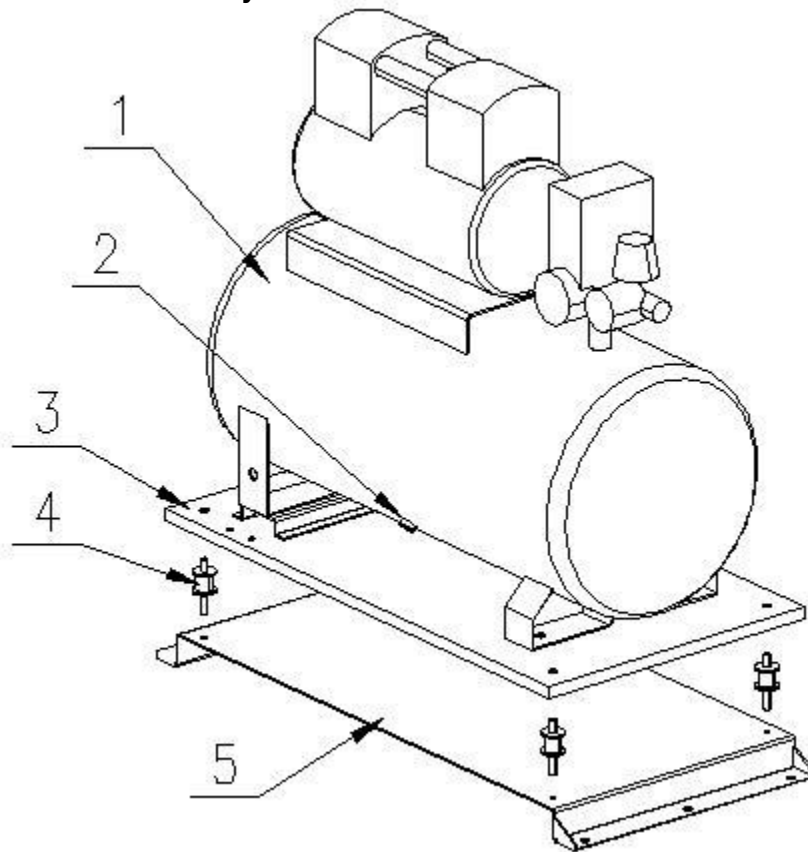


No.	Part No	Code	Name	QTY
1	N111-415-000	40611010193A	Air compressor	1
2	N111-417-000	25108000003	Tape	0.5
3	N111-155-000	20241714128	Air compressor mounting plate	1
4	N111-156-000	26000013000	Screw B	4
5	N111-157-000	20241714129	Air compressor pad	1

9.5 Base Assembly (Top)

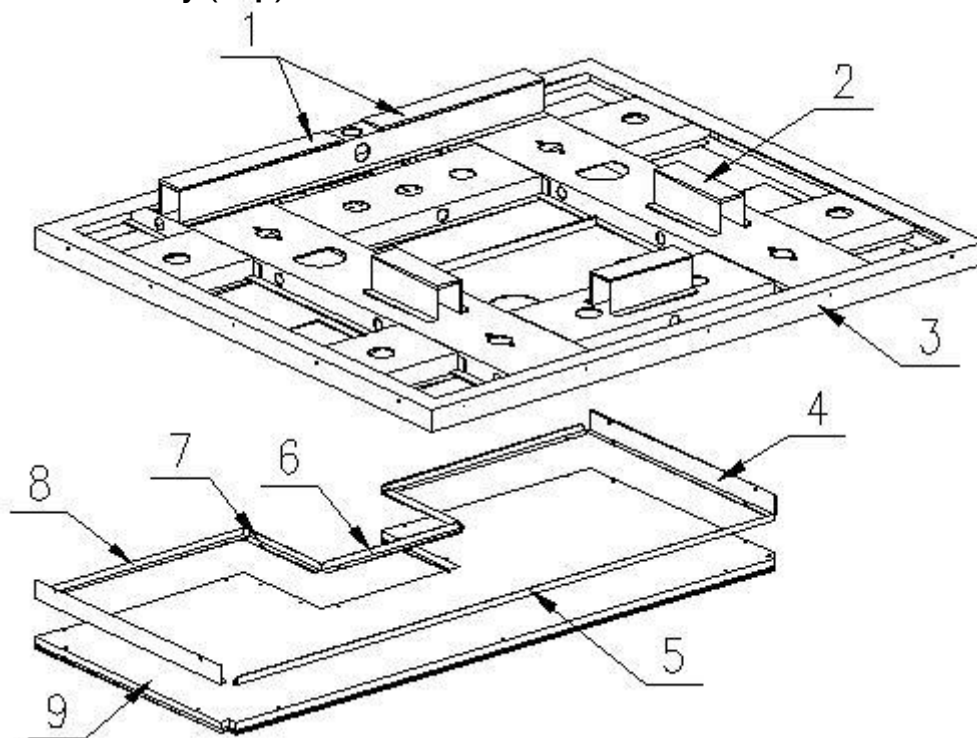


No.	Part No	Code	Name	QTY
1	N111-166-000	20641714052	Base plastic 02	2
2	N111-165-000	20641714051	Base plastic 01	3
3	N111-158-000	20241714027	Top bracket	1
4	N111-160-000	20241714037	Feet pad fix plate 1	2
5	N111-161-000	20241714038	Feet pad fix plate 2	1
6	N111-163-000	20241714040	Feet pad fix plate 4	1
7	N111-164-000	20241714041	Feet pad fix plate 5	2
8	N111-162-000	20241714039	Feet pad fix plate 3	2
9	N111-159-000	20641714040	Antiskid plate	1
	N111-539-000	20341714058	Feet plate	1


9.6 Seat Assembly

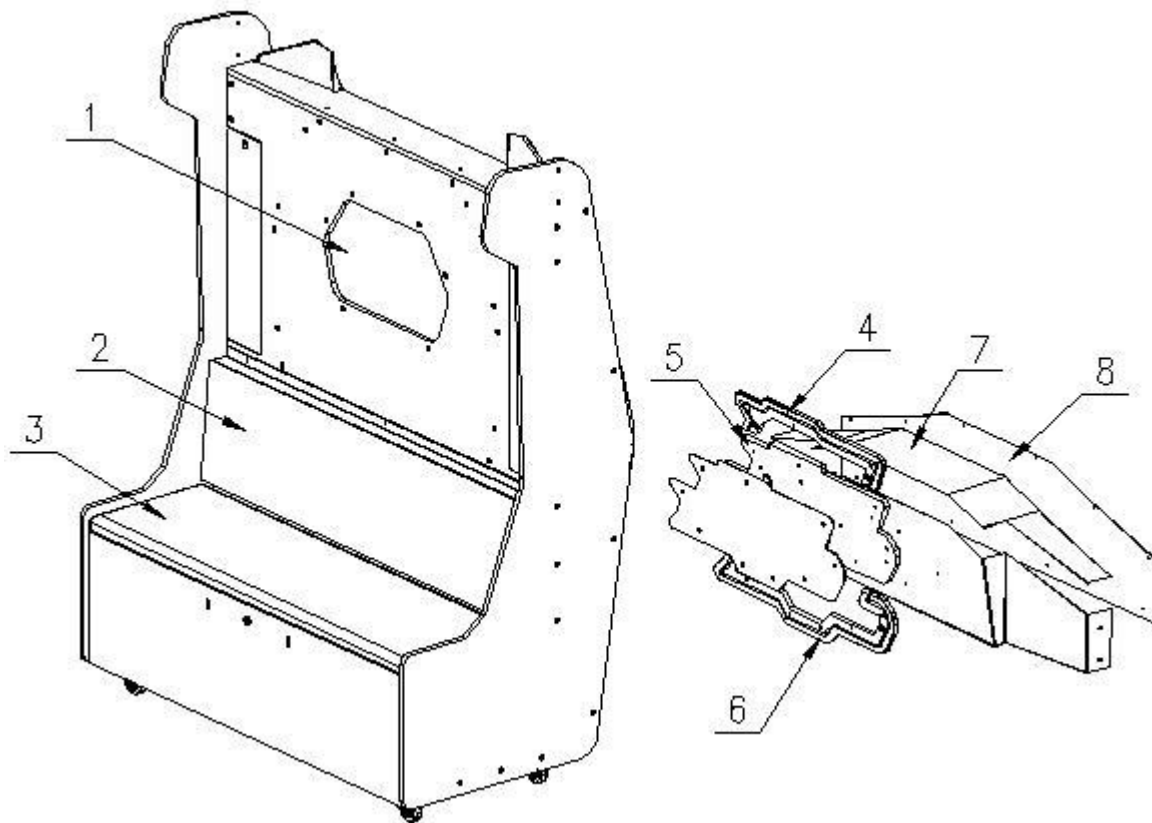

No.	Part No	Code	Name	QTY
1	N111-190-000	20641714025	Plexi. baffle	1
2	N111-211-000	20641714027	Light plexi.	1
3	N111-188-000	20641714043	Seat pad	1
4	N111-222-000	20641714A001	Light plate 01	1
5	N111-565-001	20341714A00A	Marquee plate	1
6	N111-223-001	20641714A002A	Light plate 02	1
7	N111-220-000	20241714070	Marquee inner bracket	1
	N111-219-000	20241714069	Marquee	1
8	N111-221-000	20241714071	Marquee service plate	1

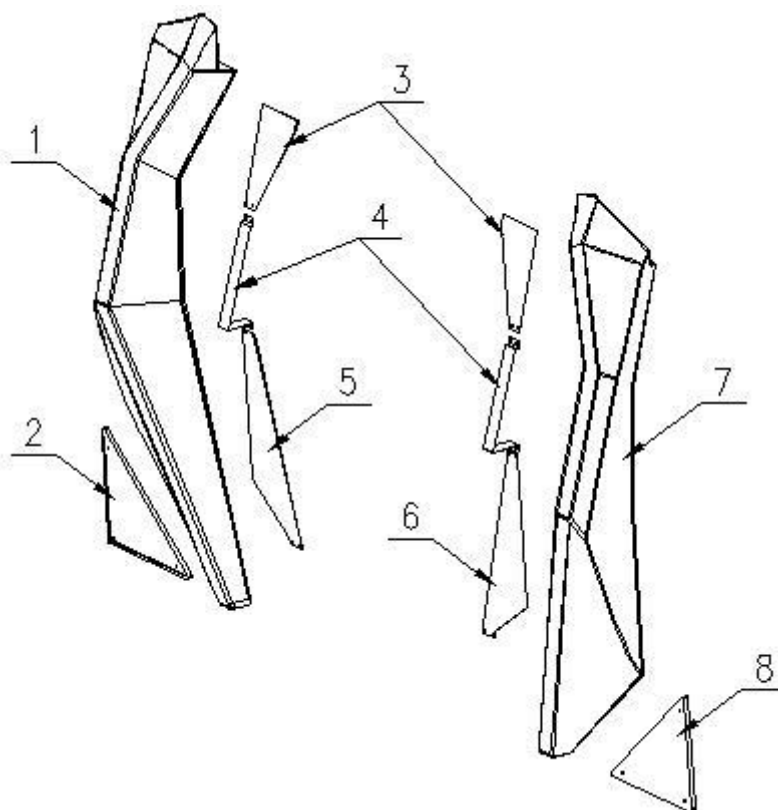


No.	Part No	Code	Name	QTY
1	N111-217-000	20641714036	Marquee L	1
2	N111-211-000	20641714027	Light plexi.	1
3	N111-215-000	20241714117	Light bracket 03	2
4	N111-214-000	20241714116	Light bracket 02	2
5	N111-213-000	20241714115	Light bracket 01	1
6	N111-216-000	20241714118	Light bracket 04	1
7	N111-218-000	20641714037	Marquee R	1
8	N111-212-000	20641714028	Light plexi. R	1

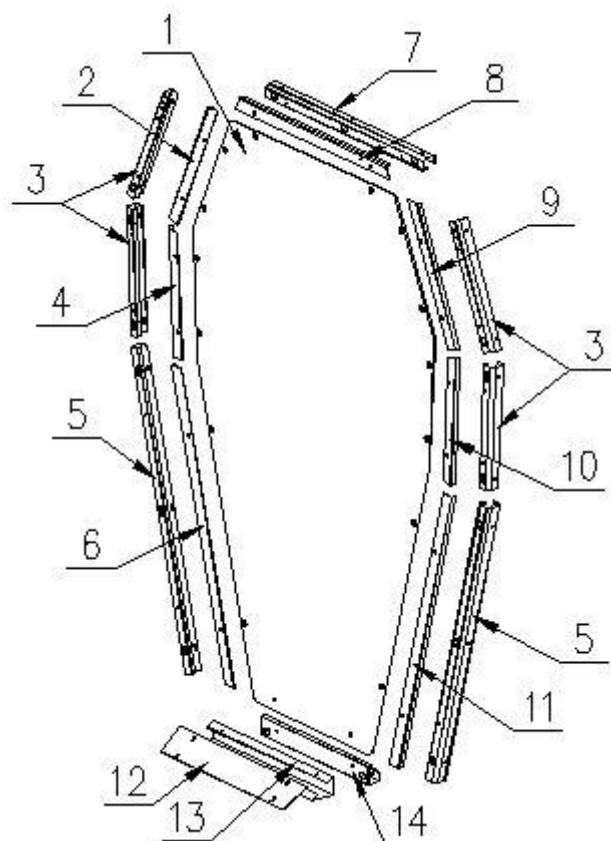


No.	Part No	Code	Name	QTY
1	N111-200-000	20641714026	Glass	1
2	N111-206-000	20241714064	Decal pressing 05	1
3	N111-197-000	20641714006	Light strip middle plate	4
4	N111-204-000	20241714062	Decal pressing 03	2
5	N111-198-000	20641714007	Light strip down plate	2
6	N111-202-000	20241714060	Decal pressing 01	1
7	N111-196-000	20641714005	Light strip top plate	1
8	N111-208-000	20241714066	Decal pressing 07	1
9	N111-207-000	20241714065	Decal pressing 06	1
10	N111-205-000	20241714063	Decal pressing 04	1
11	N111-203-000	20241714061	Decal pressing 02	1
12	N111-210-000	20241714068	Cantboard	1
13	N111-209-000	20241714067	Pad	1
14	N111-195-000	20241714059	Decal bottom plate	1

9.7 Base Assembly (Bottom)

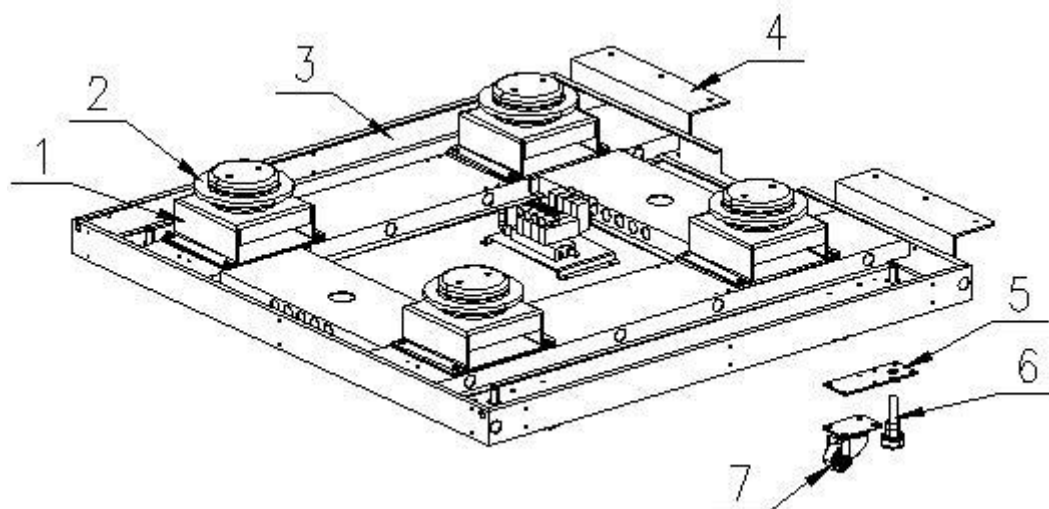


No.	Part No	Code	Name	QTY
1	N111-168-000	20241714050	Spring pad	4
2	N111-416-000	25101110130	10mm pipe	4
	N111-418-000	20841207001	Spring	4
3	N111-167-000	20241714042	Bottom bracket	1
4	N111-169-000	20241714051	Connect plate	2
5	N111-107-000	26000010000	Caster bracket	4
6	N111-108-000	26000008000	Cabinet leveller	4
7	N111-410-001	25501000047	2.5" caster	4

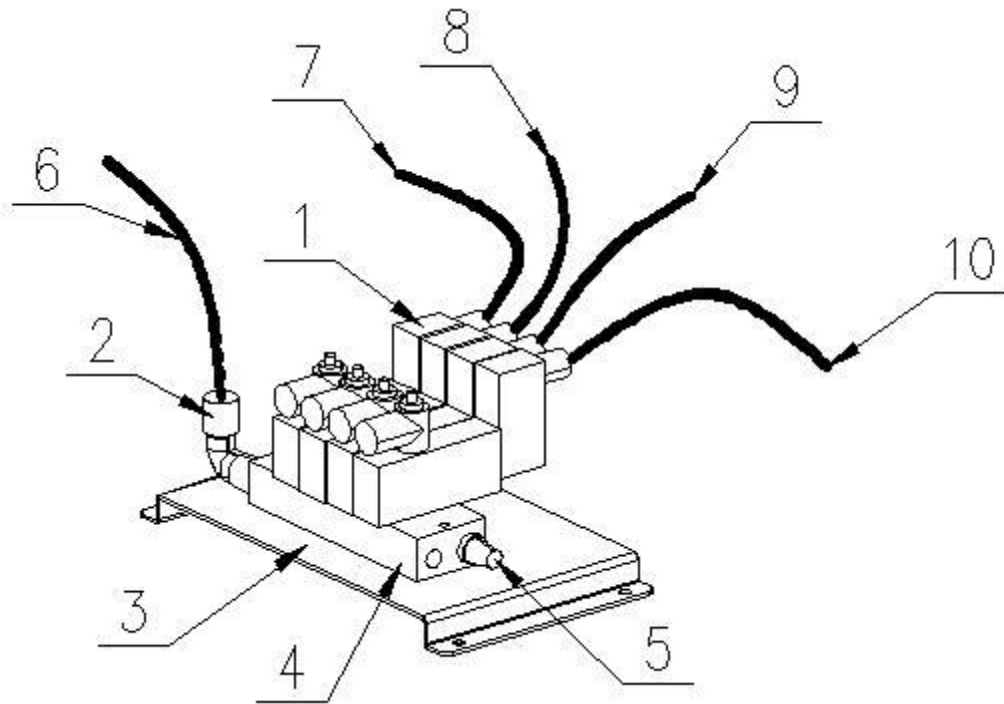


No.	Part No	Code	Name	QTY
1	N111-423-000	25101120040	Electromagnet valve	4
2	N111-422-000	25101123006	Air valve	1
3	N111-170-000	20241714106	Air valve bracket	1
4	N111-421-000	25101180001	Head	2
5	N111-420-000	25101170001	silencer	2
6	N111-429-000	25101111018	Pipe head	1
	N111-428-000	25106025003	PU Pipe	3
7	N111-425-000	25106025002	PU Pipe	1.2
8	N111-427-000	25106025005	PU Pipe	0.8
9	N111-426-000	25106025004	PU Pipe	0.8
10	N111-424-000	25106025001	PU Pipe	1.2

9.8 Side Light Assembly (Bottom)

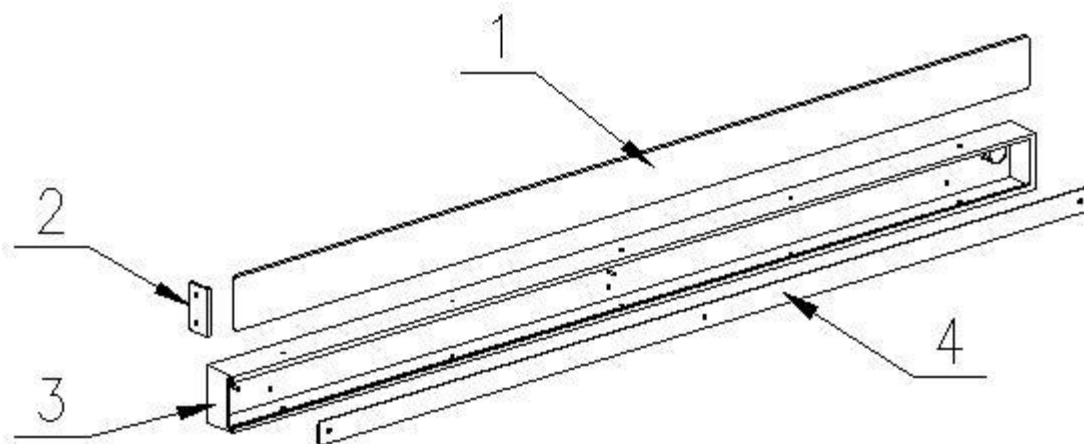


No.	Part No	Code	Name	QTY
1	N111-173-000	20641714016	Light strip plexi.	1
2	N111-174-001	20241714053A	Cover	1
3	N111-171-001	20241714052A	Side light cover	1
4	N111-172-000	20641714003	Light strip plate	1

9.9 Back Light Assembly (Bottom)

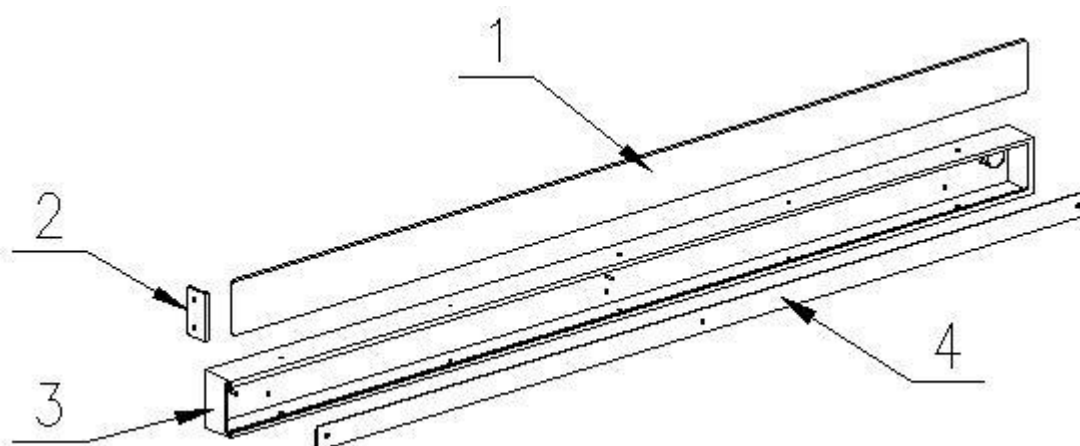


No.	Part No	Code	Name	QTY
1	N111-177-000	20641714017	Back light plexi.	1
2	N111-174-001	20241714053A	Cover	1
3	N111-175-001	20241714054A	Back light cover	1
4	N111-176-000	20641714004	Back light strip plate	1


9.10 Gun Assembly

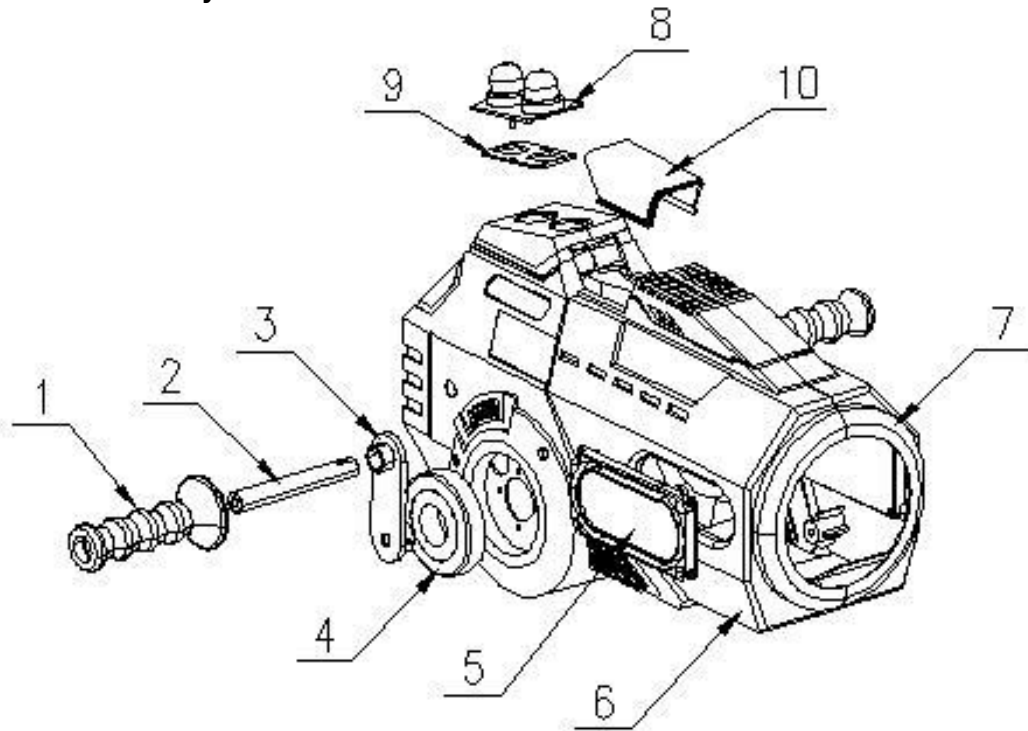


No.	Part No	Code	Name	QTY
1	N111-265-000	20641714045	Wood Handle	2
2	N111-264-000	20241714101	Axle-handle	2
3	N111-263-000	20241714089	Rod	2
4	N111-271-000	20641714035	Side light cover	2
5	N111-272-000	20641714022	Side light plate	2
6	N111-267-000	20641714032	Gun shell R	1
	N111-266-000	20641714031	Gun shell L	1
7	N111-269-000	20641714034	Small cover	1
8	N111-270-000	20641714021	Bulb pressing plate	1
9	N111-268-000	20641714033	Top cover	1
10	N111-265-000	20641714045	Wood Handle	1

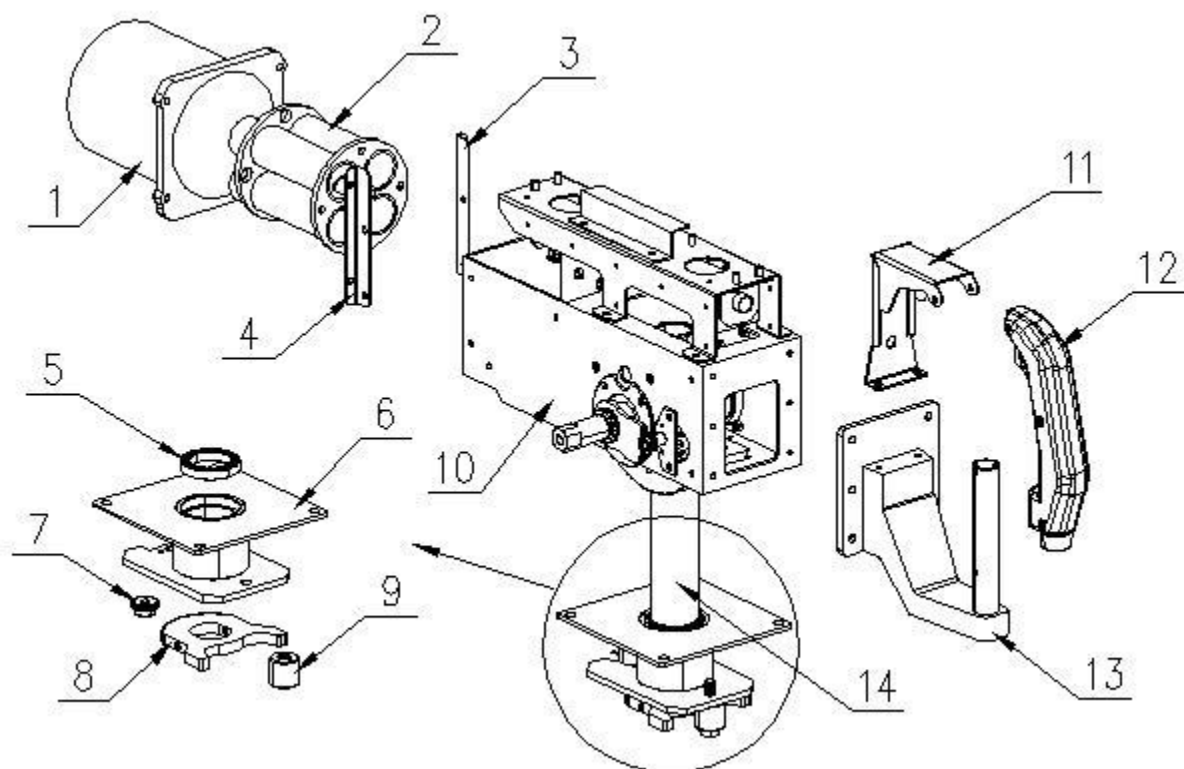

No.	Part No	Code	Name	QTY
1	N111-250-000	20641714049	Gun tube out cover	1
2	N111-249-000	20641714020	Gun tube assembly	2
3	N111-261-000	20241714087	Gun head support	1
4	N111-262-000	20241714088	Gun head support O2	1
5	N111-433-000	20106000196	Deep groove ball BR	2
6	N111-255-001	20241714085A	Gun base	1
7	N111-258-000	20241123019	Gear 2	1
	N111-482-000	22501000030	5K POT	1
8	N111-257-000	20241123018	Gear 1	1
9	N111-256-000	20641714038	Rubber sleeve	1
10	N111-231-000	20241714074	Inner frame	1
11	N111-242-000	20241714081	Handle top bracket	1
12	N111-434-000	20841123001	Handle	1
13	N111-241-001	20241714080A	Handle bottom bracket assembly	1
14	N111-251-001	20241714084A	Middle axle	1

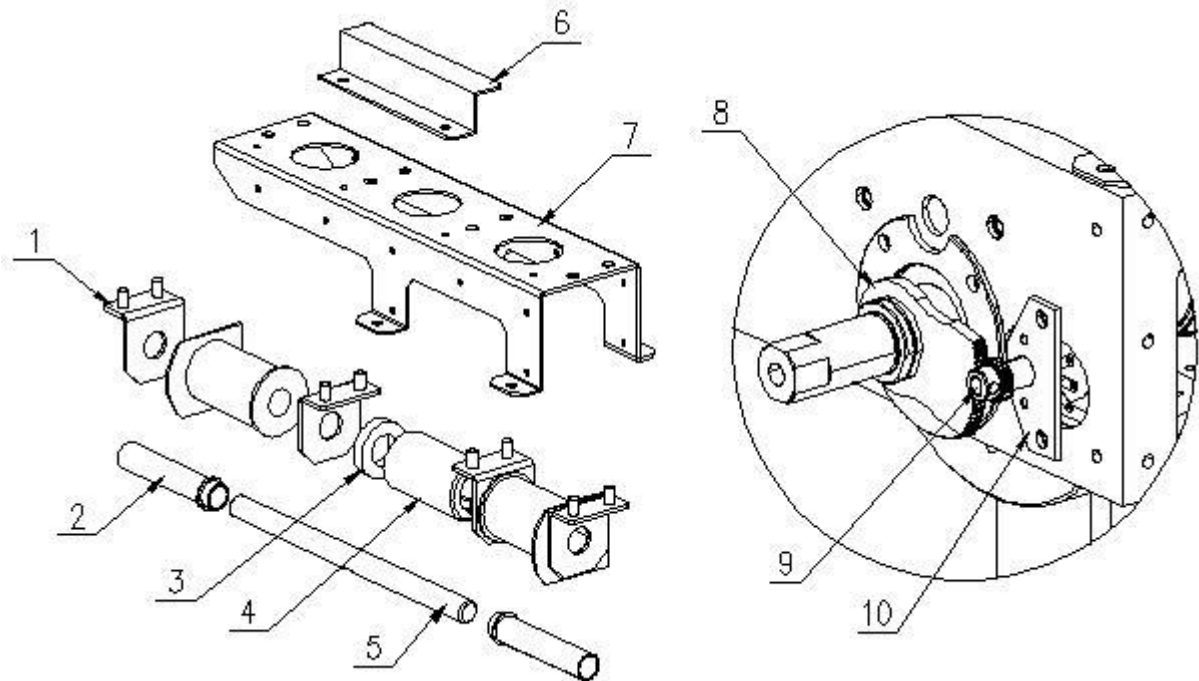


No.	Part No	Code	Name	QTY
1	N111-225-001	20241714073B	Electromagnet bracket	4
2	N111-228-001	20741515007	Electromagnet sleeve	2
3	N111-230-000	20641714047	Pad	2
4	N111-227-000	20241714125A	Bushing	1
5	N111-226-000	20241714100A	Rod	2
6	N111-260-000	20241714086	Top light mounting bracket	1
7	N111-224-000	20241714072	Motion bracket	1
8	N111-245-000	20241714083	Gear	1
9	N111-246-000	20241123021	Gear 4	1
10	N111-243-000	20241123008	POT plate	1
	N111-482-000	22501000030	5K POT	1

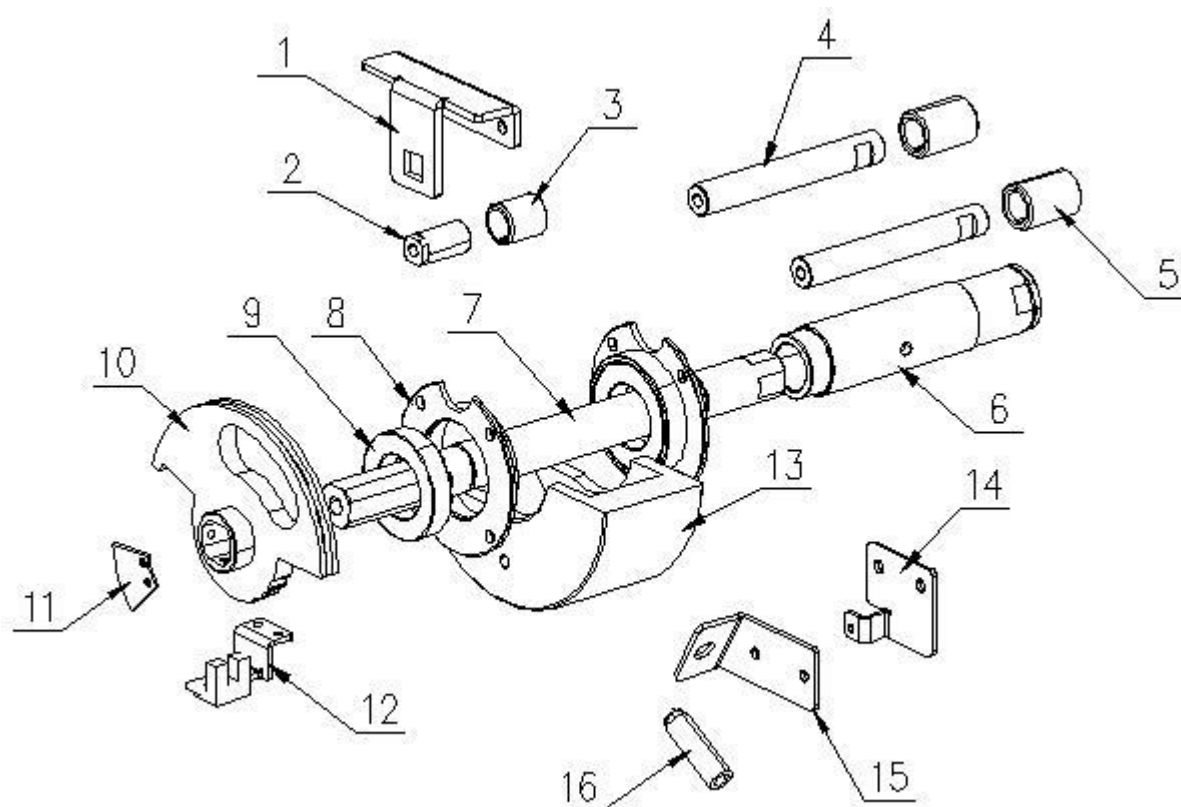


No.	Part No	Code	Name	QTY
1	N111-239-000	20241714079	Support block 02	1
2	N111-240-000	20241714097	Axle 02	1
3	N111-259-000	20641714039	Clear rubber	1
4	N111-248-000	20241714098	Axle 01	1
5	N111-247-001	20641714054	Damping sleeve	1
6	N111-253-000	20241714099	Horizontal axis	1
7	N111-254-000	20241714122	Axis	1
8	N111-244-000	20241714082	BR cover	2
9	N111-432-000	20106000065	Deep groove ball BR	2
10	N111-232-000	20241714075	SW pushing plate	1
11	N111-233-000	20241714076	Sensor baffle	1
12	N111-238-000	20241714078	Sensor mounting plate	1
13	N111-252-000	20641714046	Guide block	1
14	N111-236-000	20241714130	Steel rope	0.14
	N111-235-001	20241714126A	Spring	1
	N111-234-000	20241714119	Support block	1
15	N111-237-000	20241714077	Mounting plate	1
16	N111-355-000	20101180301	Screw	1

9.11 Control Panel Assembly

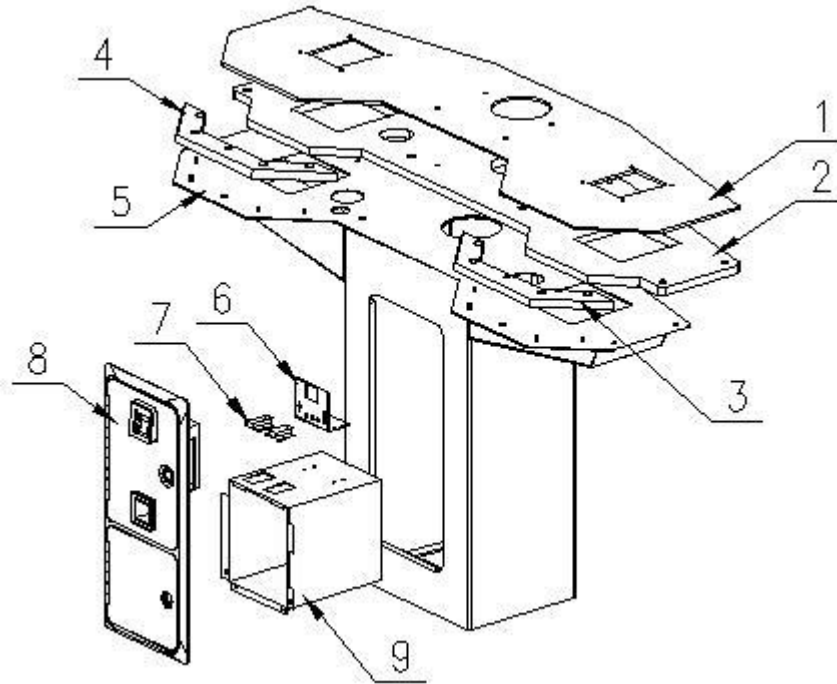

No.	Part No	Code	Name	QTY
1	N111-277-000	20241714091	Control panel plate	1
2	N111-566-000	20341714056	Control pad plate	1
3	N111-276-000	20641714024	Control panel light plastic R	1
4	N111-275-000	20641714023	Control panel light plastic	1
5	N111-274-001	20241714090A	Control panel	1
6	N111-290-000	20241216073	Meter bracket	1
7	N111-289-000	26000046002	Coin box hopper	2
8	N111-437-000	26000017000	Coin door	1
	N111-411-000	25300171001	Lock	1
	N111-436-000	25300172001	Lock	1
9	N111-288-000	20241714095	Coin box 2	1
	N111-287-001	20241714094A	Coin box 1	1

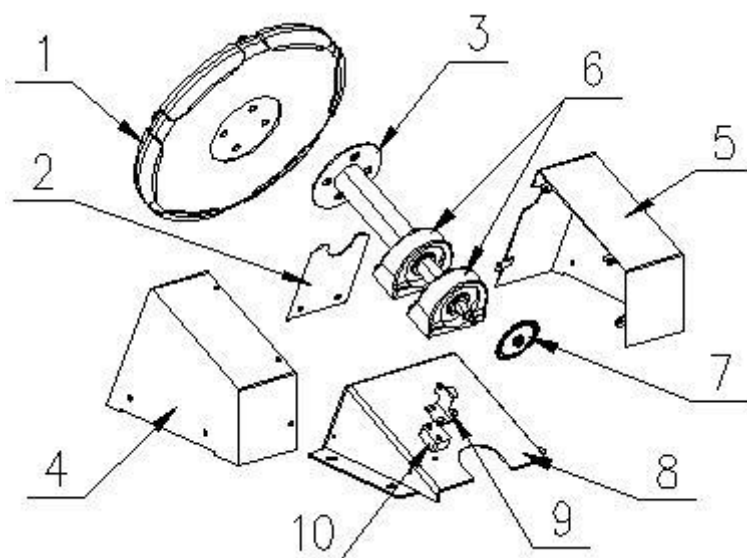


No.	Part No	Code	Name	QTY
1	N111-284-000	20241207063	Control panel rudder	1
2	N111-283-000	20241207065	Steering wheel fix plate	1
3	N111-281-000	20241207062	Steering wheel axle	1
4	N111-286-000	20241714093	Out cover R	1
5	N111-285-000	20241714092	Out cover L	1
6	N111-435-000	20106130015	Insert BR	2
7	N111-282-000	20241207061	Dividing plate	1
8	N111-278-000	20241714096	Steering wheel base	1
9	N111-280-000	20241207060	Sensor mounting bracket	1
10	N111-279-000	20641207003	Sensor base	1


9.13 Decals





No.	Part No	Code	Name	QTY
1	N111-702-000	20541714A002	Marquee decal	1
2	N111-716-000	20541714002	R speaker decal	1
3	N111-717-000	20541714003	L speaker decal	1
4	N111-701-001	20541714A00A	Logo plexi.	1
5	N111-722-000	20541714016	Character decal	1
6	N111-706-000	20541714A006	Seat L side decal	1
7	N111-708-000	20541714A008	Seat R side decal	1
8	N111-705-002	20541714A005B	Cloth L	1
9	N111-704-002	20541714A004B	Cloth R	1
10	N111-721-000	20541714010	Front L side wood plate decal	1
11	N111-720-000	20541714009	Front R side wood plate decal	1
12	N111-703-001	20541714A003A	Speaker bottom decal	1
13	N111-719-000	20541714008	Monitor decal	1
14	N111-718-000	20541714006	Front wood decal	1
15	N111-707-000	20541714A007	Control panel decal	1

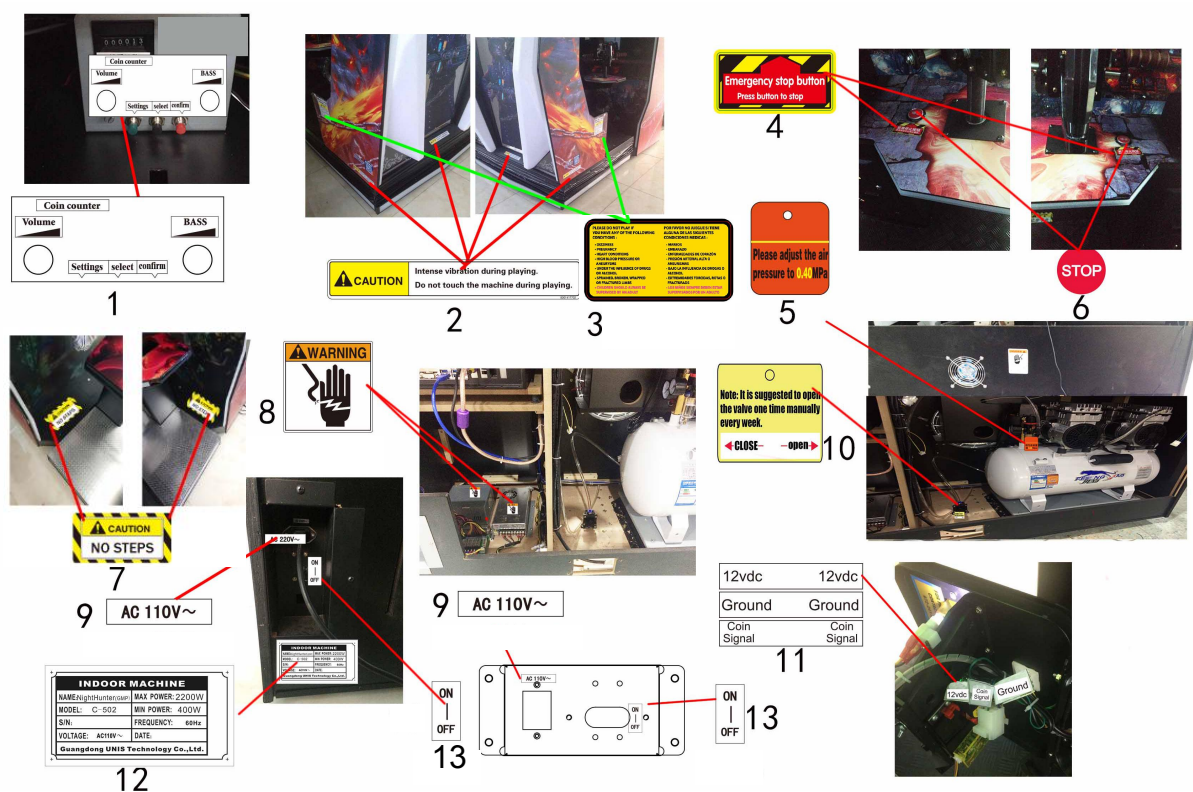

No.	Part No	Code	Name	QTY
1	N111-711-000	20541714A013	Meter label	1
2	N111-735-001	20541714A025	Warning label	1
3	N111-742-000	20541714A021	Warning label	2
4	N111-733-000	20541706A009	Button instruction	2
5	N111-734-000	20541706A010	Air valve label	1
6	N111-714-000	20541714A016	Button decal	1
7	N111-740-000	20541714A024	Warning label	2
8	N111-727-000	25600000036	Warning label S	1
9	N111-728-000	25600000071	110 V label	2
10	N111-713-000	20541714A015	Air valve instruction	1
11	N111-715-002	20541714A019	Wiring label	1
12	N111-709-000	20541714A009	110V nameplate	1
13	N111-726-000	25600000016	Power SW label A	2

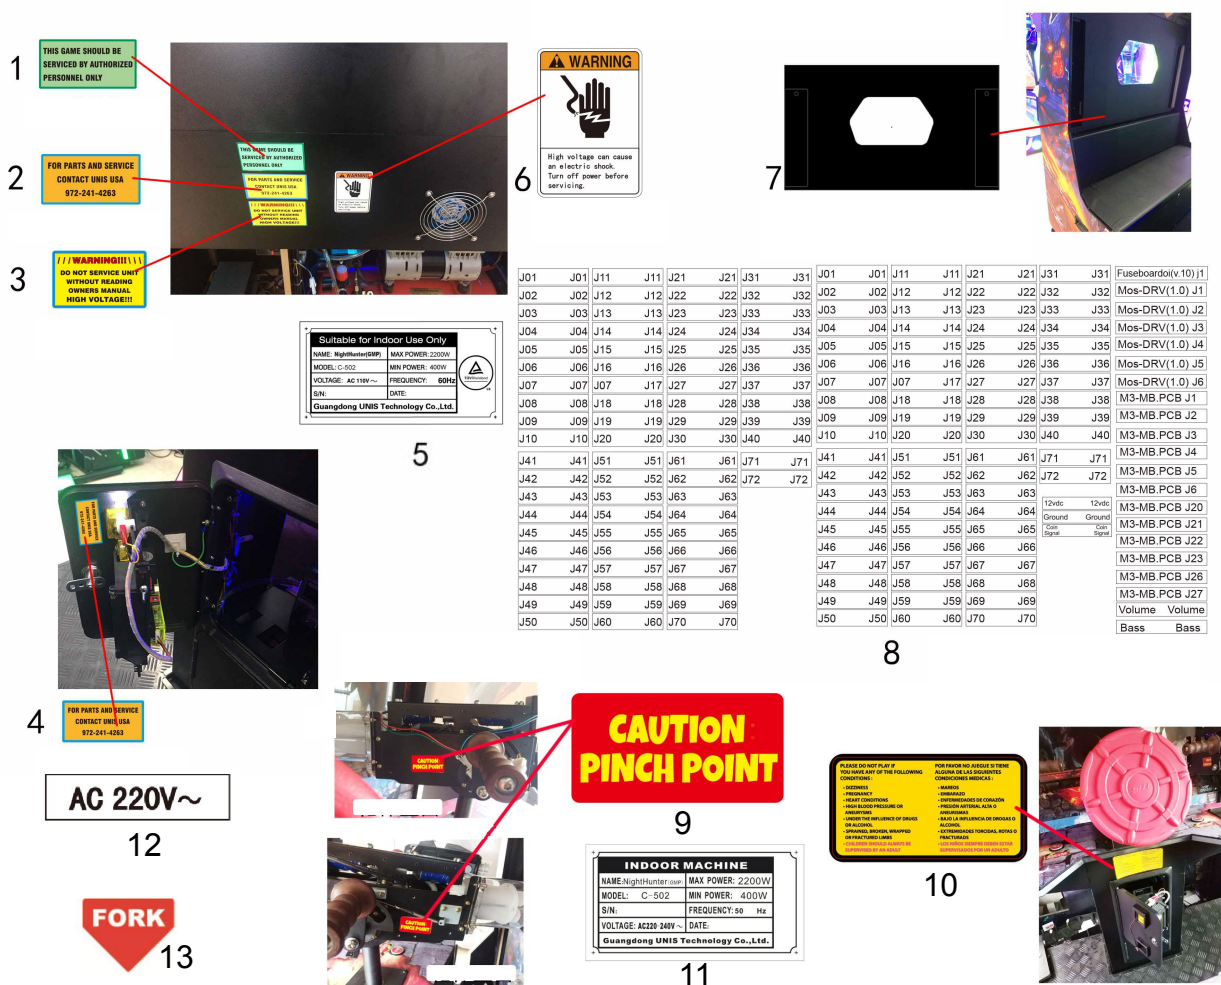

No.	Part No	Code	Name	QTY
1	N111-729-000	25600000042	Service label 1	1
2	N111-731-000	25600000095	Service label (L)	1
3	N111-730-000	25600000067	Service label	1
4	N111-732-000	25600000096	Service label (S)	1
5	N111-710-000	20541714A012	TUV 110V nameplate	1
6	N111-736-001	25600000037	Warning label L	1
7	N111-725-000	20541714027	Back black decal	1
8	N111-715-002	20541714A019	Wiring label	1
9	N111-743-000	20541714A020	Caution label	4
10	N111-742-000	20541714A021	Warning label	1
11	N111-741-000	20541714A022	220V nameplate	1
12	N111-745-000	25600000072	220V label	1
13	N111-737-000	25600000035	Fork label	6

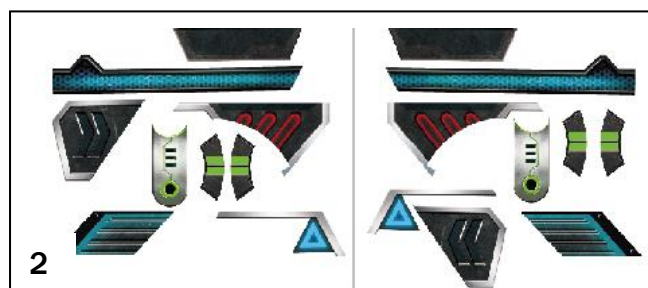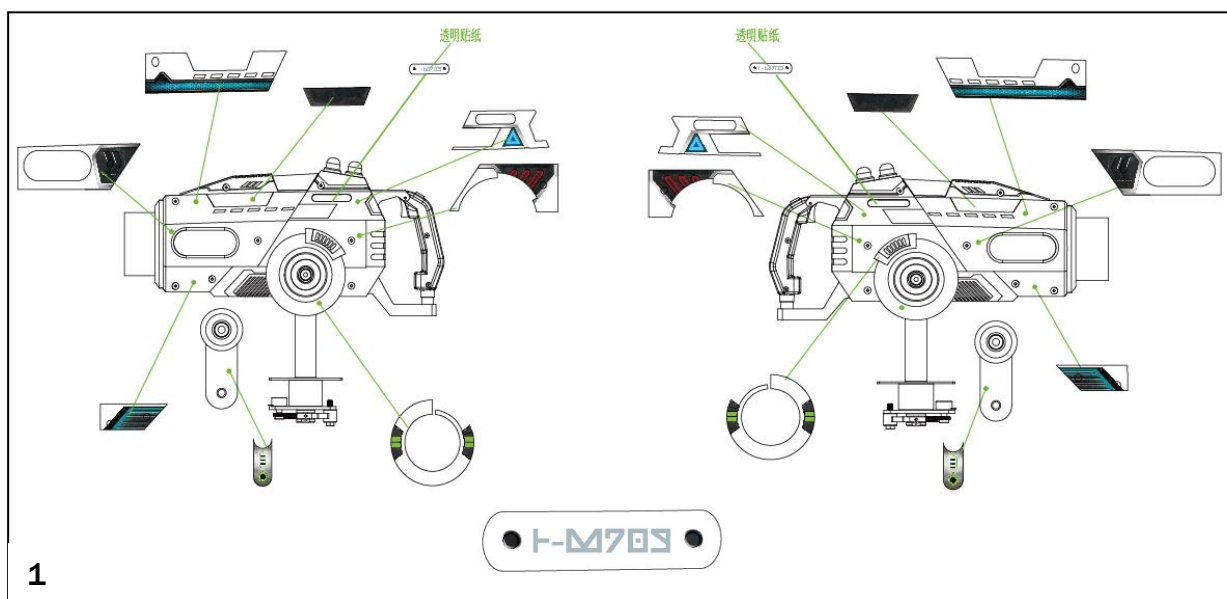


No.	Part No	Code	Name	QTY
1	N111-724-000	20541714019	Gun clear decal	1 set
2	N111-723-000	20541714017	Gun decal	1 set


9.14 Electrical Components




No.	Part No	Code	Name	QTY
1	N111-487-000	22002013002	RGB light strip	0.425*2
2	N111-487-000	22002013002	RGB light strip	1.15*2
3	N111-487-000	22002013002	RGB light strip	1.28
4	N111-487-000	22002013002	RGB light strip	4.15
5	N111-487-000	22002013002	RGB light strip	4.35*2
6	N111-484-001	22006012010	B2835B Light strip-blue	0.64*2
7	N111-457-001	22002016042	B5050W light strip-white	2.50
8	N111-487-000	22002013002	RGB light strip	2.55
9	N111-487-001	22002016044	B5050 light strip	1920*2
10	N111-485-000	22801000010	Speaker	4

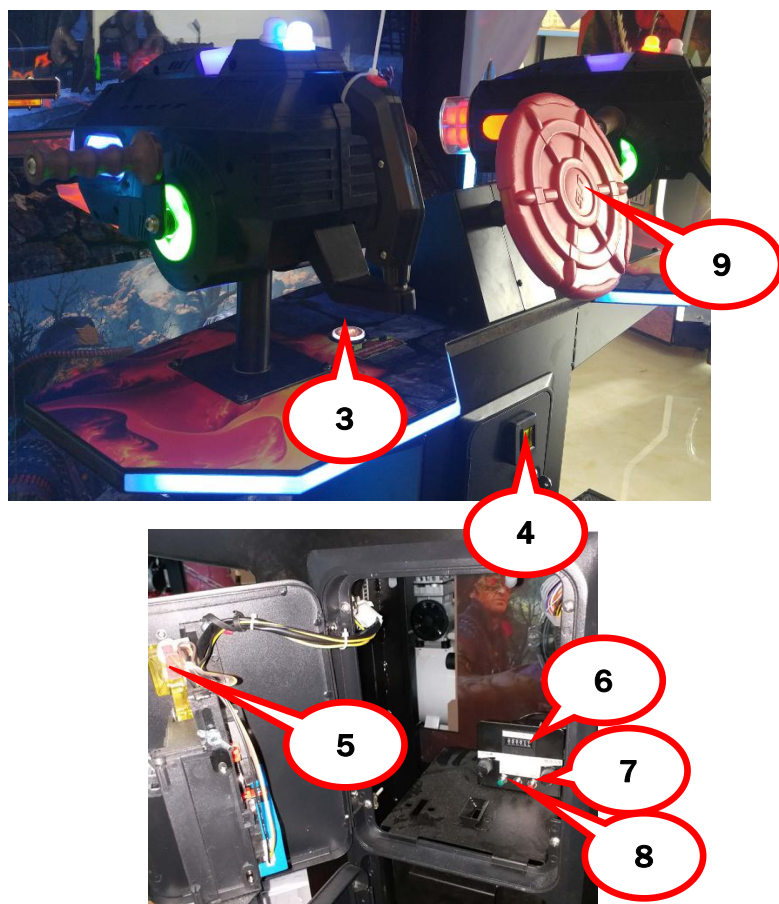

No.	Part No	Code	Name	QTY
1	N111-457-001	22002016042	B5050W light strip-white	4.6
2	N111-483-000	22801000078	Bass speaker	1
	N111-461-000	22002017019	Chain light	1
3	N111-446-000	22401030006	White button	2
	N111-474-000	22003000018	LED bulb	2
	N111-478-000	22604000006	Micro SW	2
4	N111-445-000	22201000028	12V white light socket	1
	N111-474-000	22003000018	LED bulb	1
5	N111-468-000	22301000007	Coin mech.	1
6	N111-459-000	23000000006	Meter	2
7	N111-488-000	22403000001	POT knob	2
	N111-475-000	29791400001	POT connect board	2
8	N111-470-000	22402010002	Button	1
	N111-472-000	22402050001	Button-black	1
	N111-473-000	22402030002	Button-green	1
9	N111-453-000	21503000045	Photoelectric sensor	1

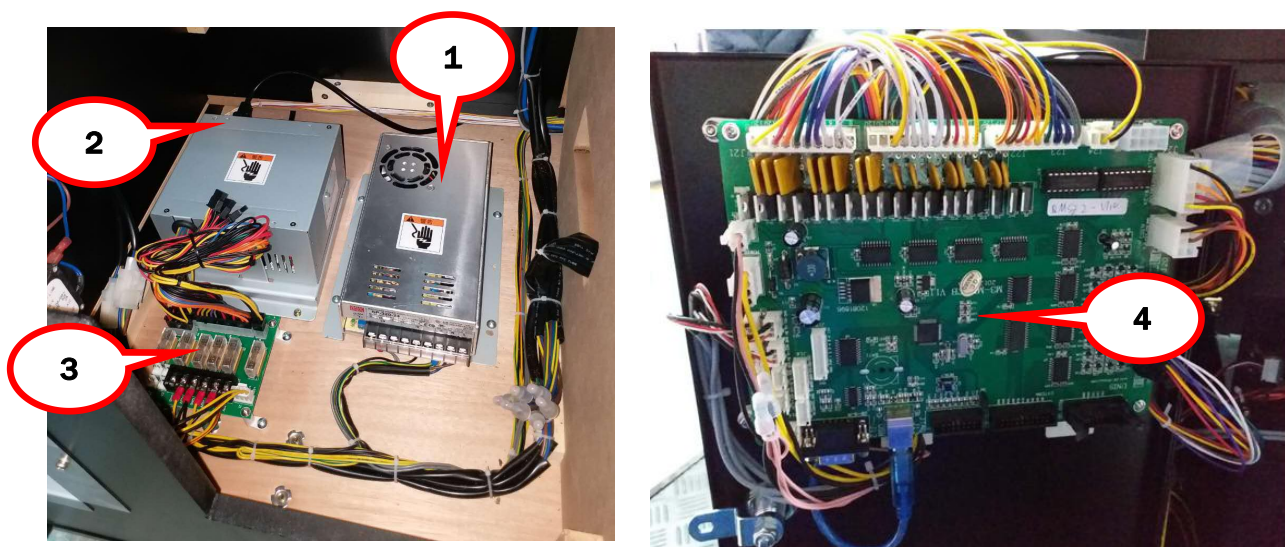


No.	Part No	Code	Name	QTY
1	N1111-451-001	21602000108	Power supply	1
2	N1111-464-000	21602000001A	Power supply	1
3	N1111-456-000	29711605001	Short circuit board (Fuseboard01(V1.0))	1
4	N1111-463-000	29741702003	Main board	1
	N1111-443-000	23309000268A	Cable set	1
	N1111-476-000	23304000098	Cable	1

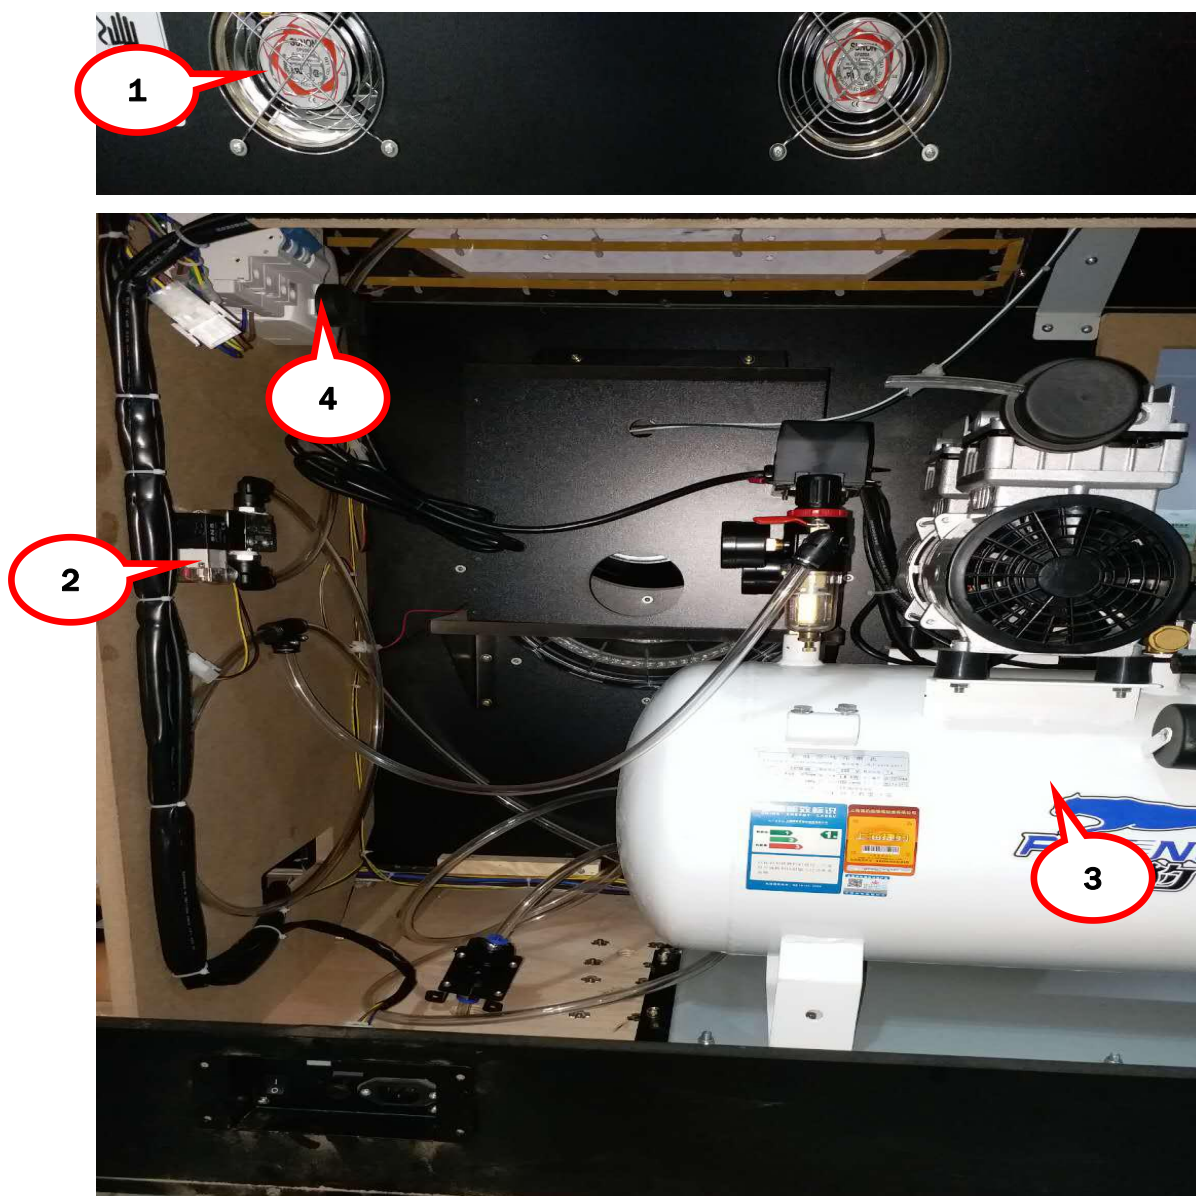


No.	Part No	Code	Name	QTY
1	N111-489-001	22702010032	Fan	5
	N111-471-000	22702000010	Fan net	10
2	N111-423-000	25101120040	Electromagnet valve	1
3	N111-415-000	40611010193A	Air compressor	1
4	N111-466-000	21606060001	Socket box	1
	N111-467-000	21606000010A	Socket	1




No.	Part No	Code	Name	QTY
1	N111-490-000	23201000001A	Filter	1
2	N111-469-000	22601000076	Cut-out switch	1
3	N111-804-000	23301018023	Power cord	2

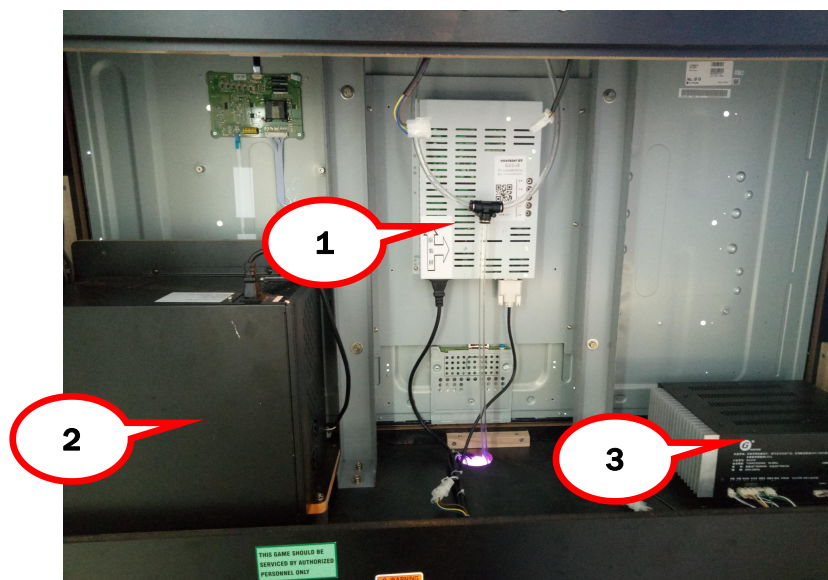

No.	Part No	Code	Name	QTY
1	N111-465-001	21201055010	55" monitor	1
	N111-458-000	23301018002	Power cord	1
	N111-462-001	23307020001C	DVI-DVI video cable	1
2	N111-493-002	21102000078	PC	1
	N111-449-001	23304010037	Cable	1
	N111-444-000	23301050012	Power cord	1
3	N111-492-000	22803000041	Amplifier	1
	N111-455-000	23305000006	Audio cable	1

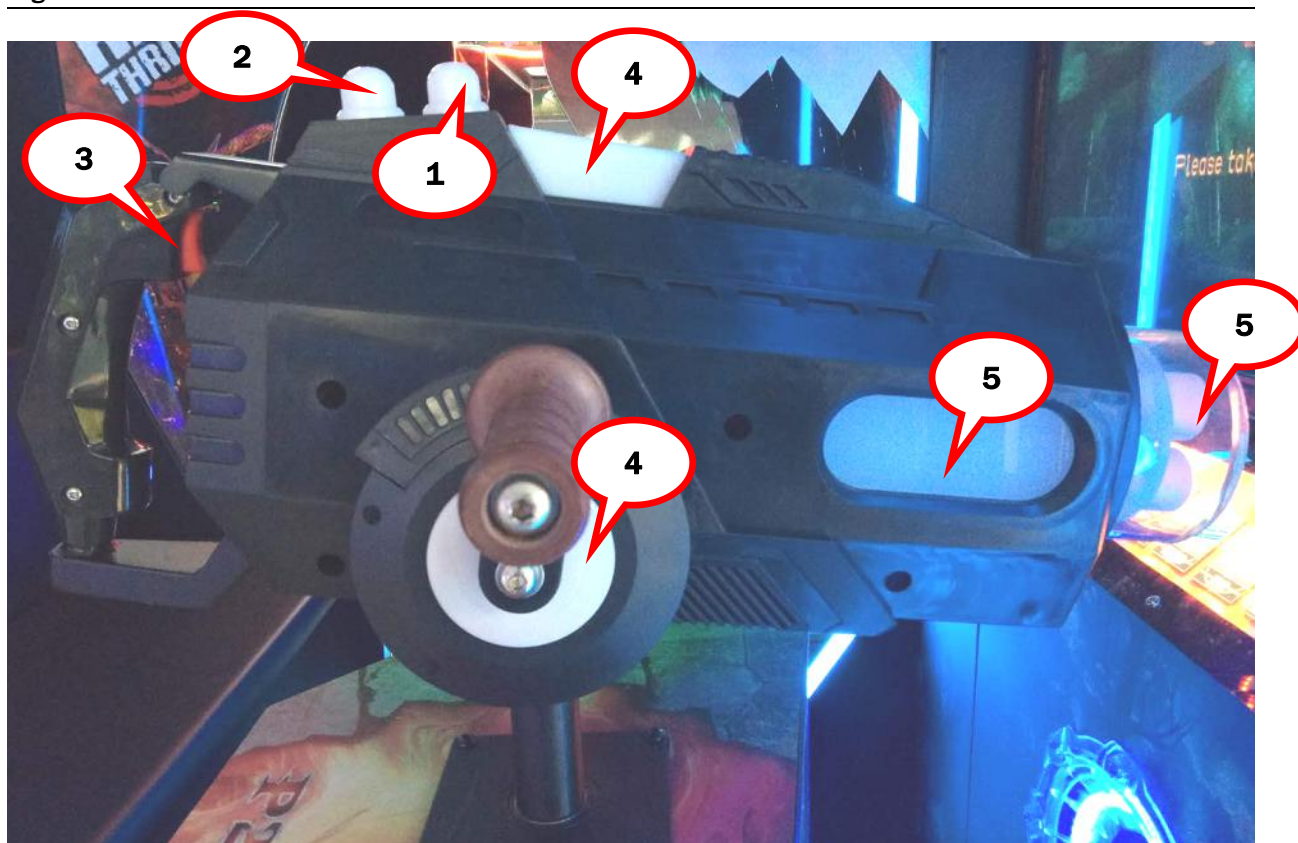

No.	Part No	Code	Name	QTY
1	N111-447-000	22003190003	Blue light	2
2	N111-481-000	22003190002	Red light	2
3	N111-450-000	22604000011	Micro SW	4
4	N111-486-001	22006012008	B2835G flexible light strip	0.3m
5	N111-487-001	22002016044	B5050 light strip	0.9M

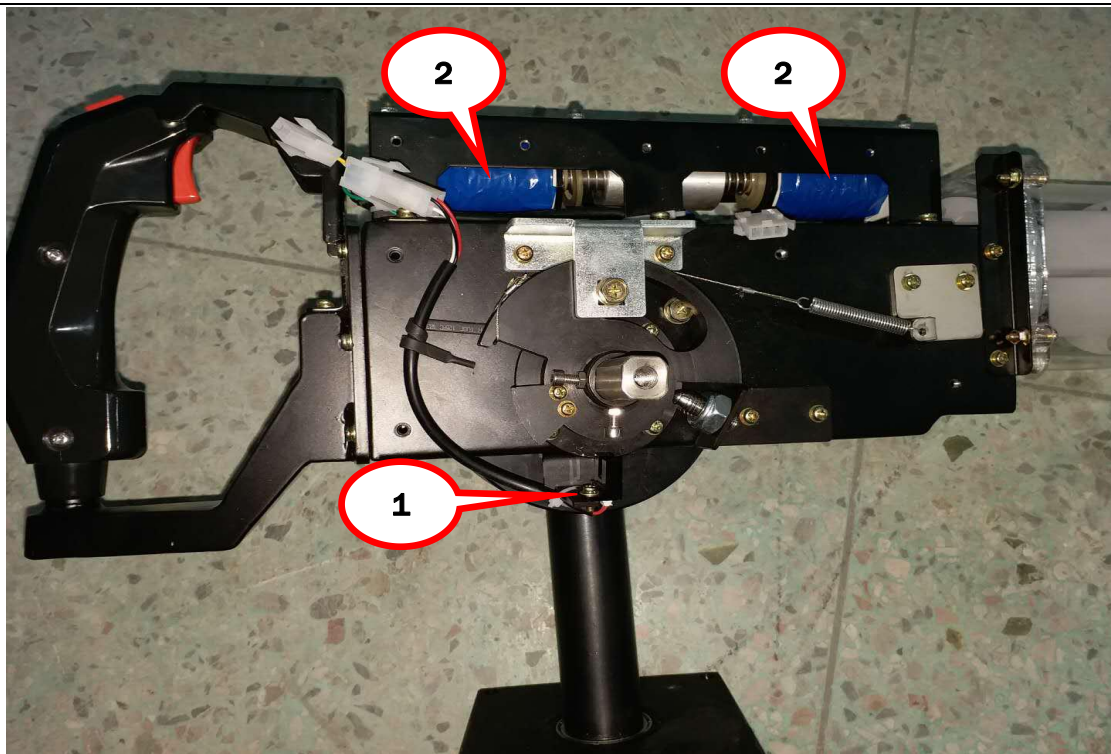

No.	Part No	Code	Name	QTY
1	N111-454-000	21501000044	Sensor	1
2	N111-438-000	23501000042	Electromagnet	2

