



Trampoline Games

P R O D U C T M A N U A L



Thank you for purchasing **Trampoline Games**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your product properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

IMPORTANT SAFETY INSTRUCTIONS

⚠️ This product is an indoor product. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.


1.CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included

1.Following accessories

No.	Part No.	Code No.	Name	Picture	Qty
1	Z119-002-000	29992009001A	Android Box		1 pcs
2	Z119-004-000	29992007001	Sensor		1 pcs
3	Z119-404-000	23304000038	Serial cable		1 pcs
4	Z119-401-000	21603000028	Adapter		1 pcs
5	Z119-402-000	23307000041	H Cable		1 pcs
6	Z119-403-000	22606090003	Remote control		1 pcs

2.Optional accessories

No.	Name	Picture	Qty
1	Trampoline		1 pcs

2. SPECIFICATIONS

Rated power supply: DC12V, 3A;

Max. Power consumption: 36W

Model No: A-449

Part No: Z119

Sensor Dimension: W2.32*D2.12*H0.90 in

W59*D54*H23 mm

Trampoline Games Box Dimension: W5.51*D4.09*H1.65 in

W140*D104*H42 mm

3.SET UP & INSTALLATION


3.1 Machine Installation

Step 1 Place Trampoline in front of the monitor and place the Sensor under the trampoline.


Step 2 Place Trampoline games box under the monitor. Utilize Serial cable to connect Sensor and Trampoline games box.

Step 3 Utilize Cable to connect Monitor and Trampoline games box. Connect Adapter to the Trampoline games box.

Step 4 Power on and start to play.

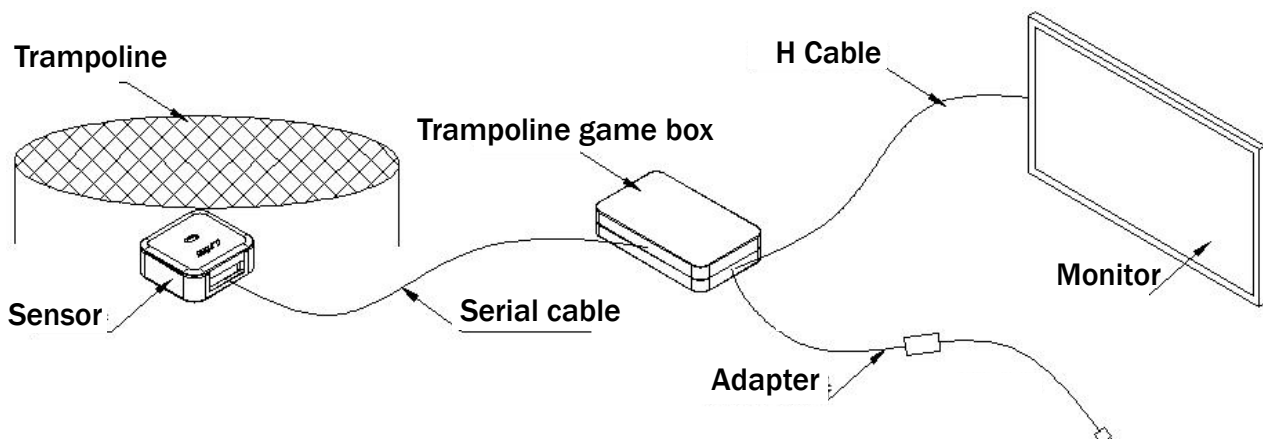

4.REMOTE CONTROL INSTRUCTION

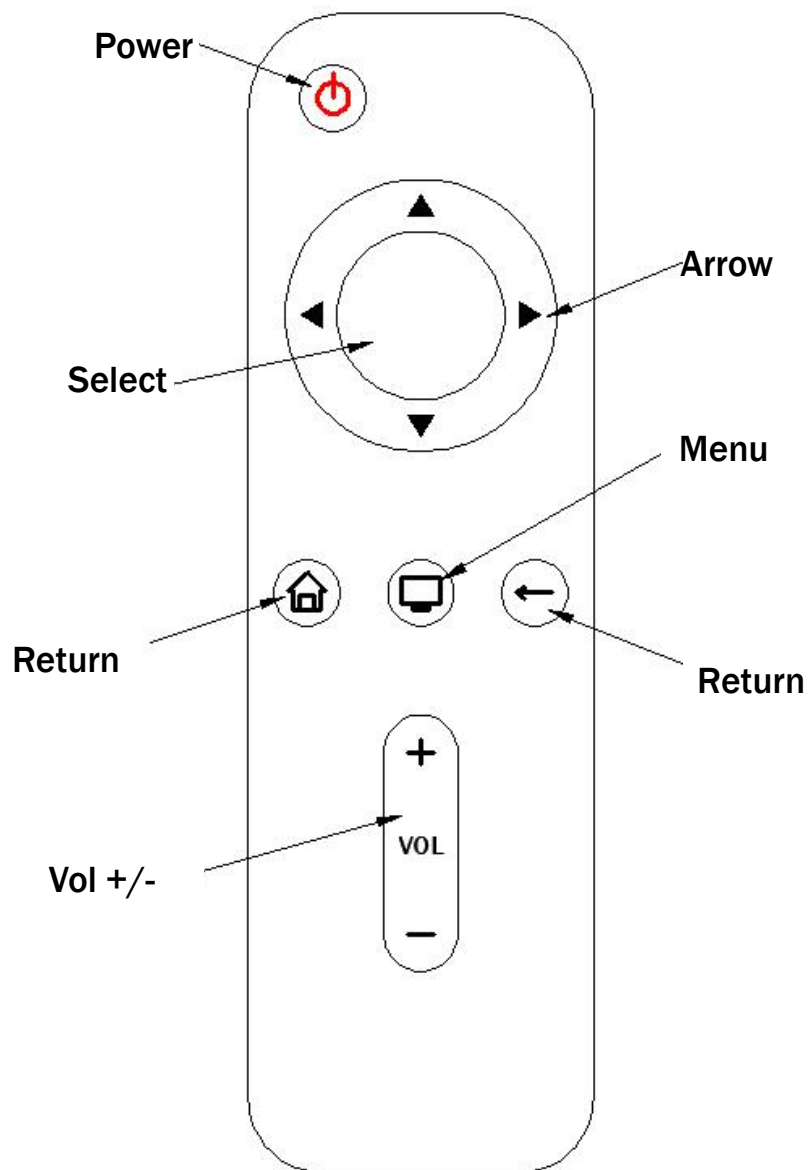

Power: Turn game on and off.

Arrow: Used for on-screen navigation(up,down, left and right).

Select: Confirms selection or action.

Home: Turn back to menu to select game.

Menu: (This feature is not yet available.)

Return: Exit or turn back.

Vol +/-: Vol + increase the volume; Vol - decrease the volume.

5.HOW TO PLAY

1. Select game to play.



Bounce Mania



Battle Bounce

2. Players perform corresponding operations according to the demonstrate actions.
3. Player control the game role to to avoid obstacles and get scores.
4. The game physical test data will be displayed after game over.

WE ARE HERE TO ASSIST
For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

www.unispartsandservice.com