
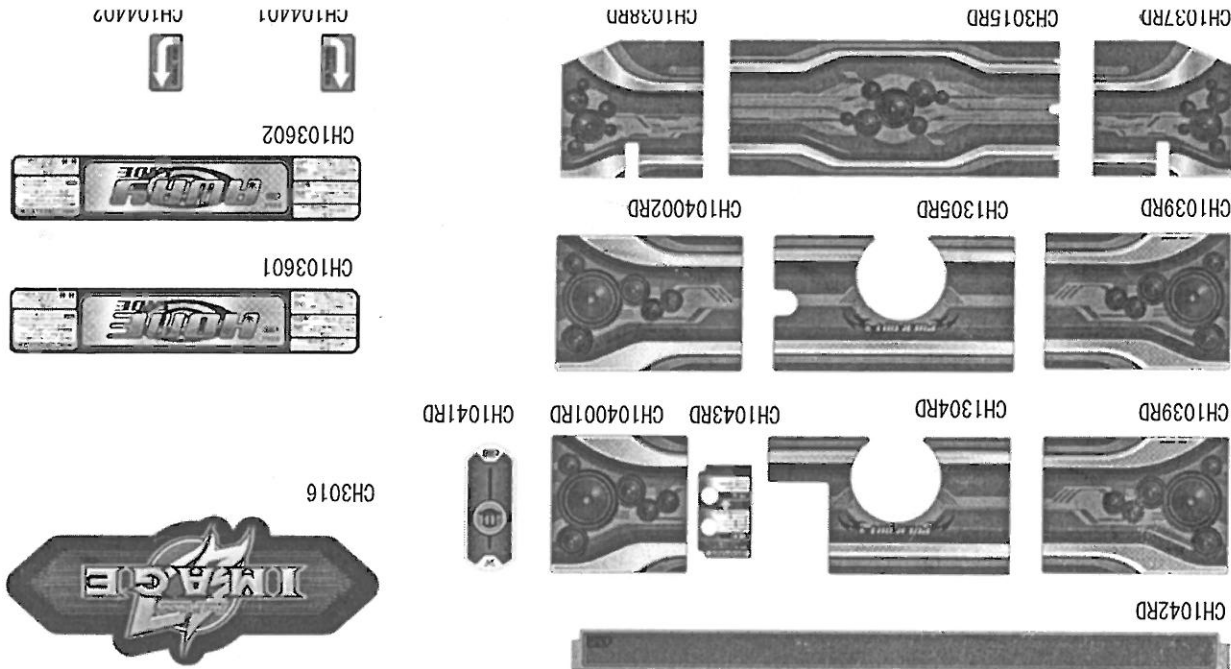



Heat up Hockey



19. 部品リスト

① TOP ASSY HEAT UP HOCKEY IMAGE (CH0000)

(D-1/2)

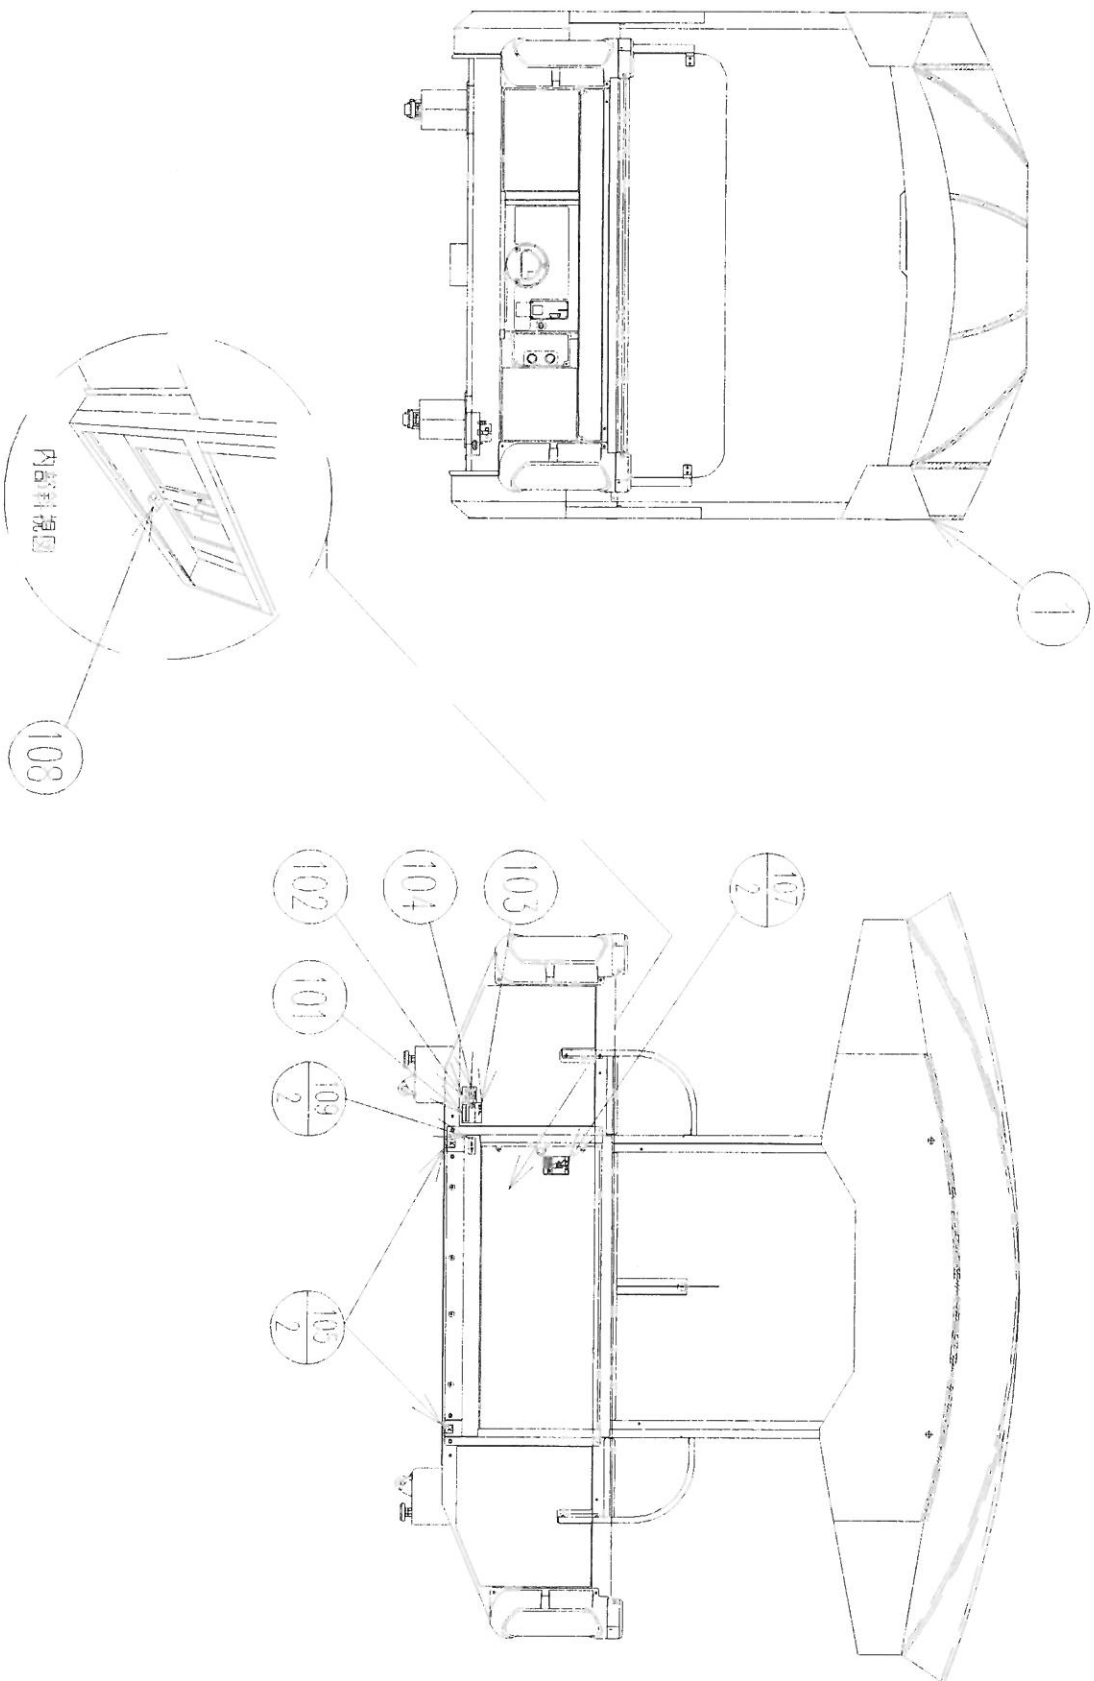

(D-2/2)

NOTE


DESCRIPTION
ASSY CABINET

ITEM No. PART No.
1 CH1000


101	4210007X	STICKER ELEC SPEC CIRCLE PSE
102	4210010433	STICKER WEIGHT 433Kg
103	4210284	STICKER SERIAL NO OF SEG A
104	421000992	STICKER CERTIFICATE
105	42111416	STICKER CAUTION FORK
106	6210052	PACKING SET HEAT UP HOCKEY IMAGE
107	440WS0001XJP	STICKER W NOT OPEN DOOR
108	440WS0033XJP	STICKER W BD POWER OFF
109	4210303035	STICKER UNIT WEIGHT 35Kg
110	4210304	STICKER CAUTION PUT PLACE Mallet
111	4210081X	STICKER CAUTION EPILEPSY

H H0002 mallet w magnet

401	WU0001	Mallet WU YELLOW
402	CH0001	PUCK
403	4200099	SERVICE MANUAL HEAT UP HOCKEY IMAGE RD1
404	22057932A001	KEY MASTER A001
405	6010012	KEY BAG
406	6010013	POLYETHYLENE BAG 240X370
407	600672901	AC CABLE CONNECT TYPE 15A W/E
408	600666402	WIRE HARN EARTH W/LUG M6
409	6019343	SANDPAPER NO.320
410	421015101	STICKER DENOMI 1PLAY ¥100
411	421015102	STICKER DENOMI 1PLAY ¥200
412	51450333000	FUSE 5.2X20 3A 125V
413	540004391	L-WRENCH FOR HEX SOC 3MM
414	6000045	AC CABLE TAP-EX153-3N
415	6010099	LEVEL METER
416	1250016	COMPRESSION SPRING SUS304WPB0.5-L8-8
417	2800068061210	PLASTIC WASHER CC-0612-10
418	2805277	CORD CLAMP 18
419	065CS006	CS RING CSTW-6

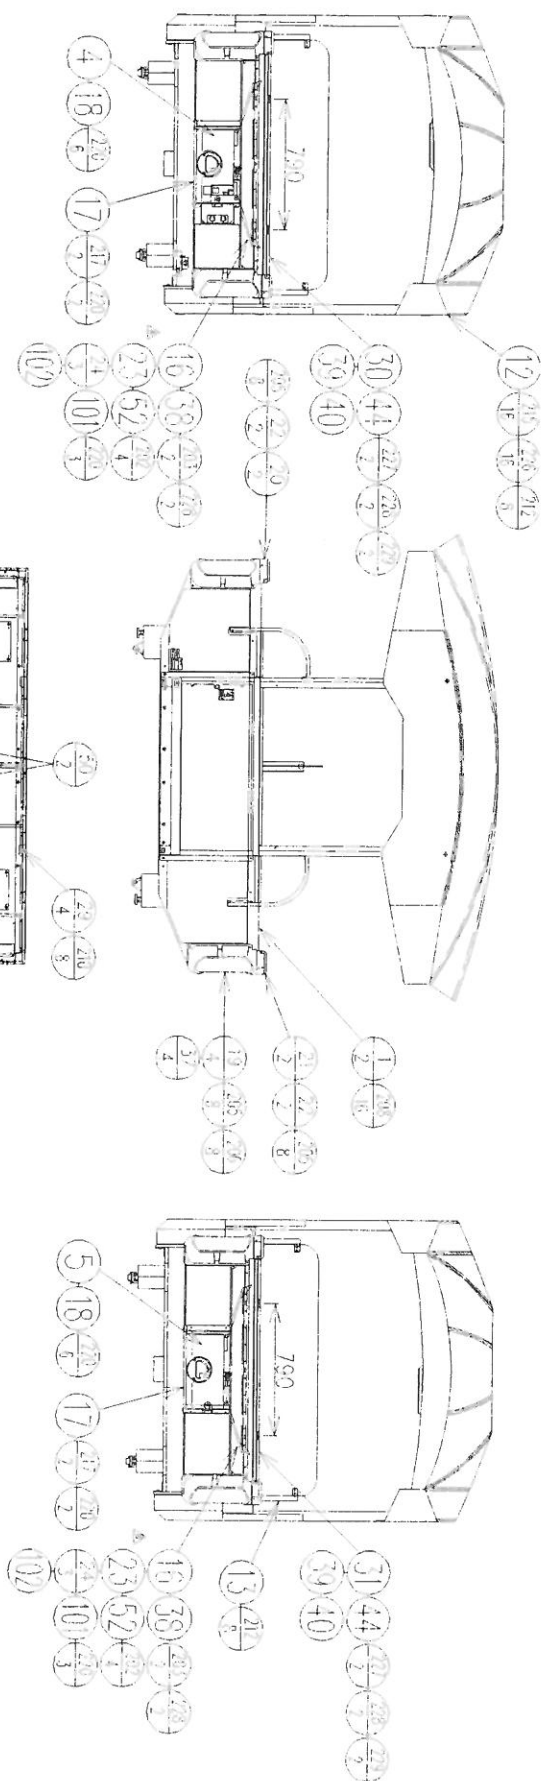

② ASSY CABINET (CH1000)

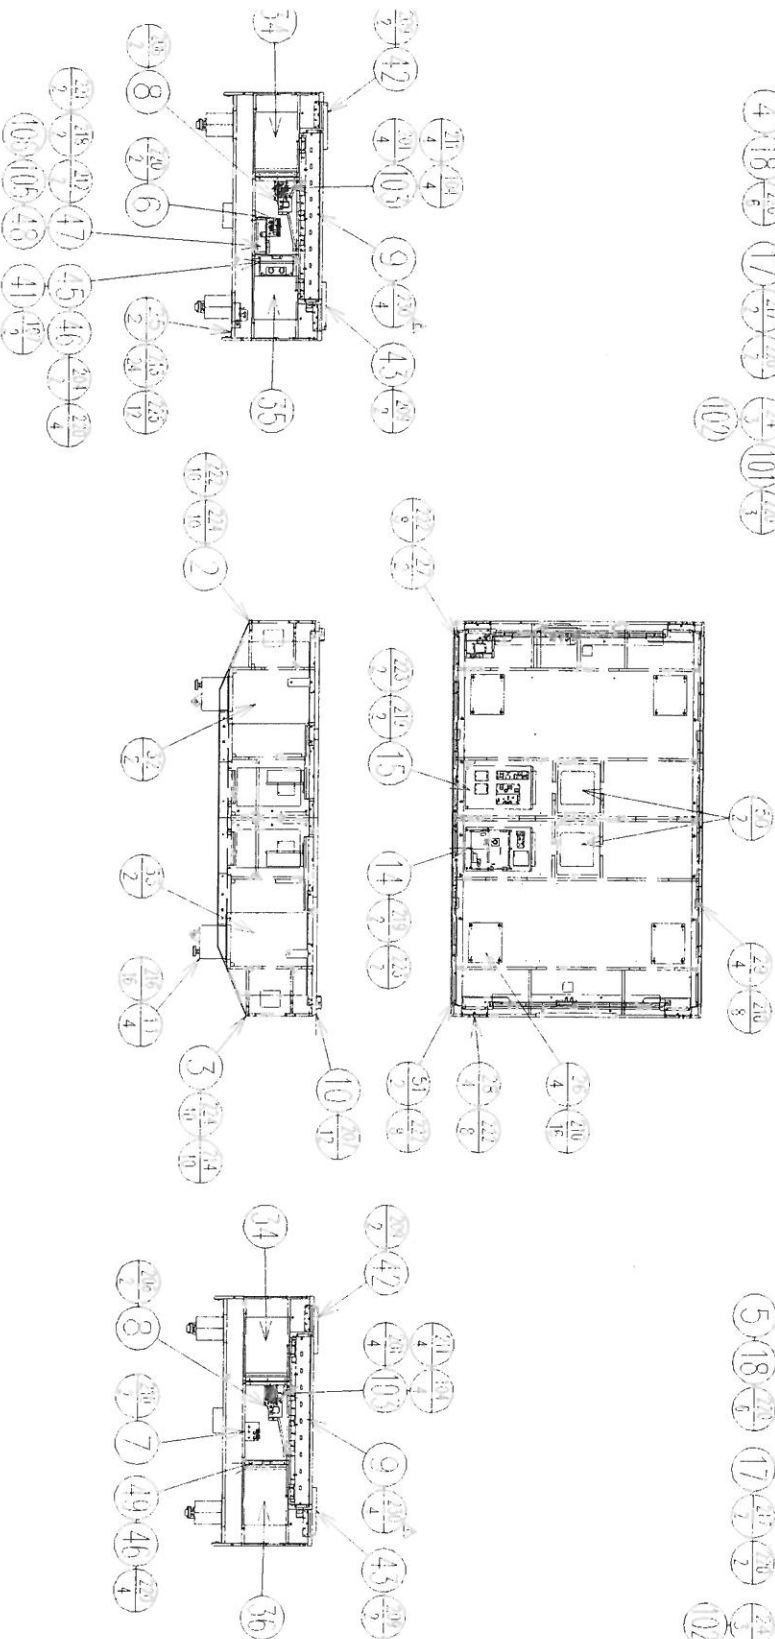

(D-1/3)

(D-2/3)



NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1050	ASSY REBOUND SENSOR
2	CH1100	ASSY SUB CABINET HOME
3	CH1200	ASSY SUB CABINET AWAY
4	CH1300	ASSY DOOR HOME
5	CH1400	ASSY DOOR AWAY
6	CH1500	ASSY SW&VOLUME
7	CH1550	ASSY SW
8	CH1600	ASSY PACK OUT
9	CH1700	ASSY BLOCK MECHA
10	CH1800	ASSY PLAYFIELD
11	CH1900	ASSY LEG
12	CH3000	ASSY TOWER
13	CH3500	ASSY CENTER NET
14	CH4000	ASSY MAIN BASE
15	CH4100	ASSY ELEC BASE
16	CH1020	GOAL UNDER BRKT
17	CH1021	FRONT DOOR UNDER BRKT
18	CH1022	FRONT DOOR HINGE
19	CH1023RD	CORNER PROTECTOR RD1
20	CH1024RD	CORNER CAP L RD1
21	CH1025RD	CORNER CAP R RD1
22	CH1026	CORNER CAP BRKT
23	CH1027L	GOAL GUIDE BLOCK L
24	CH1028	LED SUPPORT BRKT
25	CH1030	CABINET L BLKT CH
26	CH1032	CABINET LEG SUPPORT BRKT CH
27	CH103301	FIELD SUPPORT BRKT L
28	CH1034	FIELD SUPPORT BRKT SHORT
29	CH1035	M8 BRKT
30	CH103601	STICKER GOAL COVER HOME
31	CH103602	STICKER GOAL COVER AWAY
32	CH1037RD	STICKER CABINET SIDE L RD1
33	CH1038RD	STICKER CABINET SIDE R RD1
34	CH1039RD	STICKER CABINET FRONT L RD1
35	CH104001RD	STICKER CABINET FRONT R HOME RD1
36	CH104002RD	STICKER CABINET FRONT R AWAY RD1
37	CH1041RD	STICKER CORNER RD1
38	CH1042RD	STICKER GOAL UNDER BRKT RD1
39	CH104401	STICKER GOAL POSITION L
40	CH104402	STICKER GOAL POSITION R
41	CH1043RD	STICKER SELECT BUTTON RD1
42	CH105401	GOAL SIDE EDGE L
43	CH105402	GOAL SIDE EDGE R
44	CH1055X	GOAL COVER CH
45	CH1112	FRONT DOOR BUTTON BRKT
46	CH1113	LOCK BRKT
47	CH1114X	COIN BOX HUNGER
48	CH1115	CASH BOX
49	CH1212	FRONT DOOR SIDE BRKT
50	WH1702	FILTER
51	CH103302	FIELD SUPPORT BRKT R
52	CH1027R	GOAL GUIDE BLOCK R

NOTE

ITEM No.	PART No.	DESCRIPTION
101	3900055	LED BAR RED
102	4210015	STICKER CAUTION ELEC SHOCK
103	837003901	I/O BD
104	253002001	L-LOCK TKK LT320
105	2205794	CLY LOCK W/KEYS
106	2200005	TONGUE PLATE
107	509003110	SW ROUND Φ 30 SANWA OBSAX-C30UM-W-1F-LED-W-5V
108	2805275SR10	CORD CLAMP SR10
109	2805207	HARNES LUIG GC-1005
201	000P00308W	M SCR PH W/FS M3X8
202	000P00408W	M SCR PH W/FS M4X8
203	000P00510W	M SCR PH W/FS M5X10
204	000T004160B	M SCR TH BLK M4X16
205	000T005120C	M SCR TH CRM M5X12
206	000T005200C	M SCR TH CRM M5X20
207	000T00630	M SCR TH M6X30
208	000T00640	M SCR TH M6X40
209	000T00660	M SCR TH M6X60
210	011T03512	TAP SCR TH 3.5X12
211	011T03516	TAP SCR TH 3.5X16
212	030000520WB	HEX BLT W/FS BLK M5X20
213	030000630SB	HEX BLT W/S BLK M6X30
214	030000645S	HEX BLT W/S M6X45
215	030000835SB	HEX BLT W/S BLK M8X35
216	030001040S	HEX BLT W/S M10X40
217	0310004200B	CRG BLT BLK M4X20
218	0310005200U	CRG BLT UCRM M5X20
219	032000430	WING BLT M4X30
220	050F00400	FLG NUT M4
221	050F00500	FLG NUT M5
222	050F00600	FLG NUT M6
223	068441616	FLT WSHR 4.4-16X1.6
224	068652016	FLT WSHR 6.5-20 X1.6
225	0686516160B	FLT WSHR BLK 6.5-16X1.6
226	0688522160B	FLT WSHR BLK 8.5-22X1.6
227	068651612	FLAT WASHER 6.5-16X1.2
228	079000003	HEX SKT LHK1.5 3MM CUP STN M5X16 (極低頭)
229	079000004	HEX SKT LHK1.5 3MM CUP STN M6X20 (極低頭)
230	030000525W	HEX BLT W/FS M5X25


③ ASSY REBOUND SENSOR (CH1050)

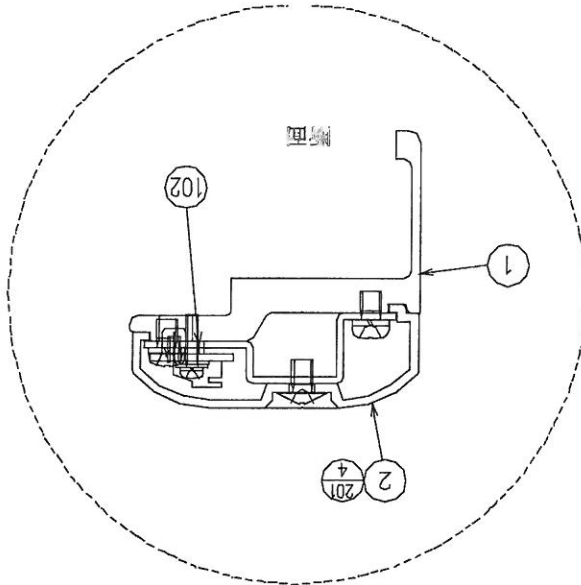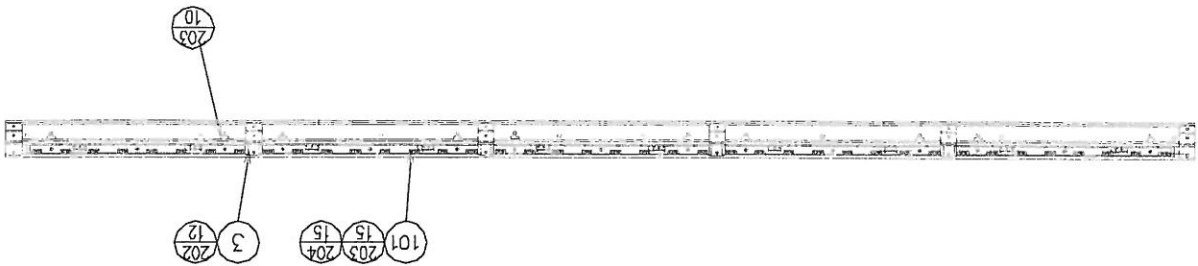

NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1051	SIDE EDGE BASE CH
2	CH1052	SIDE EDGE COVER CH
3	CH1053	EDGE COVER BRKT
101	8370037	SENSOR BD
102	2800056303	PLASTIC SPACER C-303
103	2805275SR10	CORD CLAMP SR10
201	000T005080C	M SCR TH GRM M5X8
202	000P00508S	M SCR PH W/S M5X8
203	000P00312W	M SCR PH W/FS M3X12
204	068330808PN	FLT WSHR PLASTIC 3.3-8X0.8
301	CH600105001	WH SENSOR BD CONN

④ ASSY SUB CABINET HOME (CH1100)

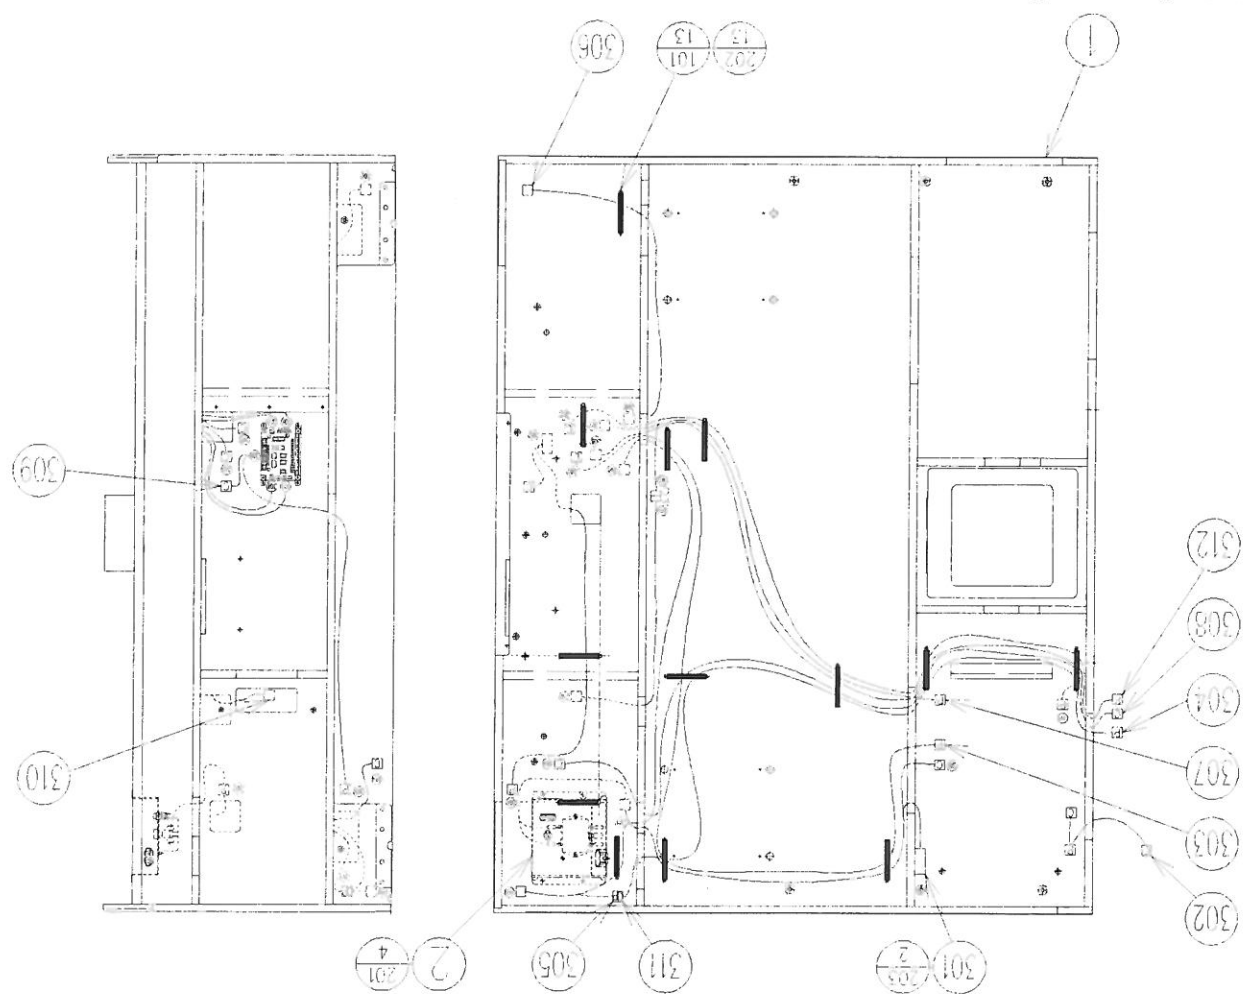

NOTE


ITEM No.	PART No.	DESCRIPTION
1	CH1111	CABINET HOME CH
2	CH1150	AC UNIT

101	2805208	HARNES LUG CC-1007
-----	---------	--------------------

201	000T05200B	M SCR TH BLK 5X20
202	011T03512	TAP SCR TH 3.5X12
203	011T03520	TAP SCR TH 3.5X20

301	CH600110001	WH AC100V EXT
302	CH600110002	WH BLOWER MOTOR
303	CH600110003	WH SOLENOID HOME
304	CH600110004	WH MOTOR HOME
305	CH600110005	WH IO/SENSOR BD HOME
306	CH600110006	WH IO BD SENSOR BD CONN
307	CH600110007	WH IO BD DC12V EXT
308	CH600110008	WH IO BD DC12V HOME
309	CH600110009X	WH LED BAR
310	CH600110010	WH GAME SELECT SW
311	CH600120003	WH DC5V EXT
312	CH600120004	WH SW/METER/DOOR/VOL EXT

⑤ AC UNIT (CH1150)

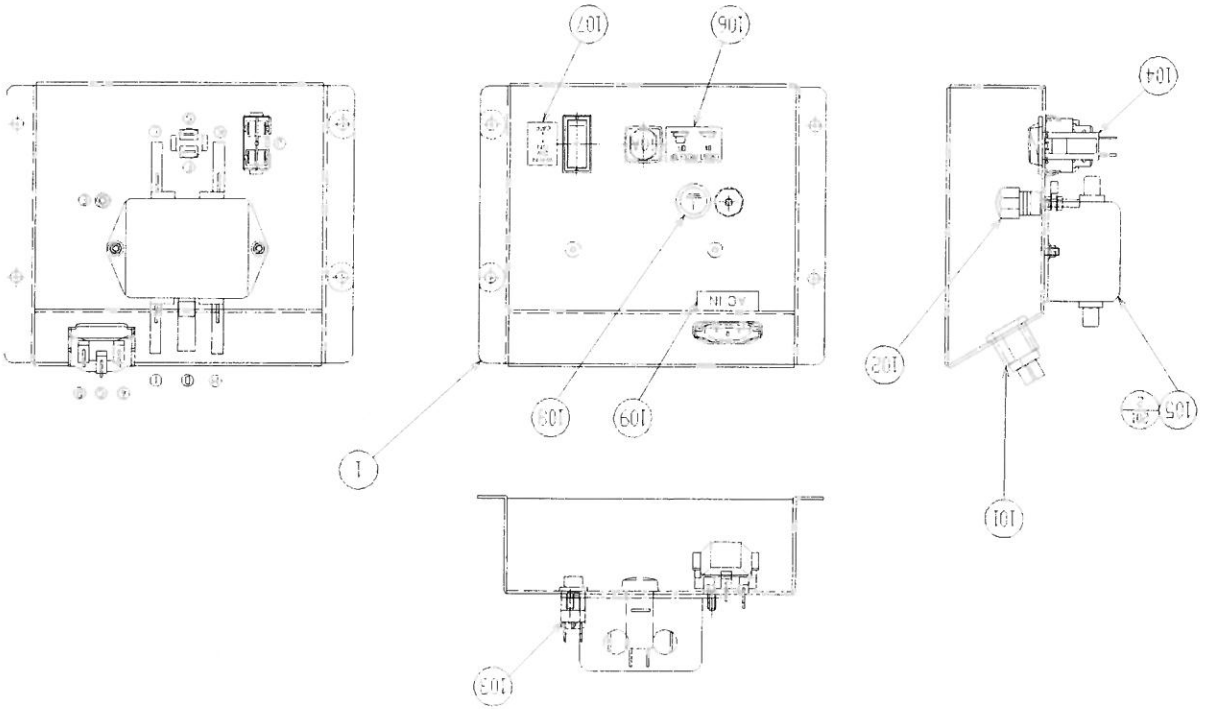


ITEM No.	PART No.	DESCRIPTION
----------	----------	-------------

101	2140202	AC INLET PANEL TYPE
102	2800417	TERMINAL BINDING POST BLACK
103	5096102VB	SW ROCKER J8 V-B AJ8202BF
104	512504510000	CIRCUIT PROTECTOR 10A
105	270502201	NOISE FILTER 20A
106	4210005	STICKER C.P.W/PIC
107	421652603	STICKER ON OFF XS
108	4218202	STICKER EARTH MARK
109	4219108	STICKER AC IN
110	6010460	PLASTIC TIE BELT 100 MM
201	050F00400	FLG NUT M4
301	CH600115001	WH MAIN SW/NOISE FILTER IN
302	CH600115002	WH NOISE FILTER OUT

NOTE


⑥ ASSY SUB CABINET AWAY (CH1200)

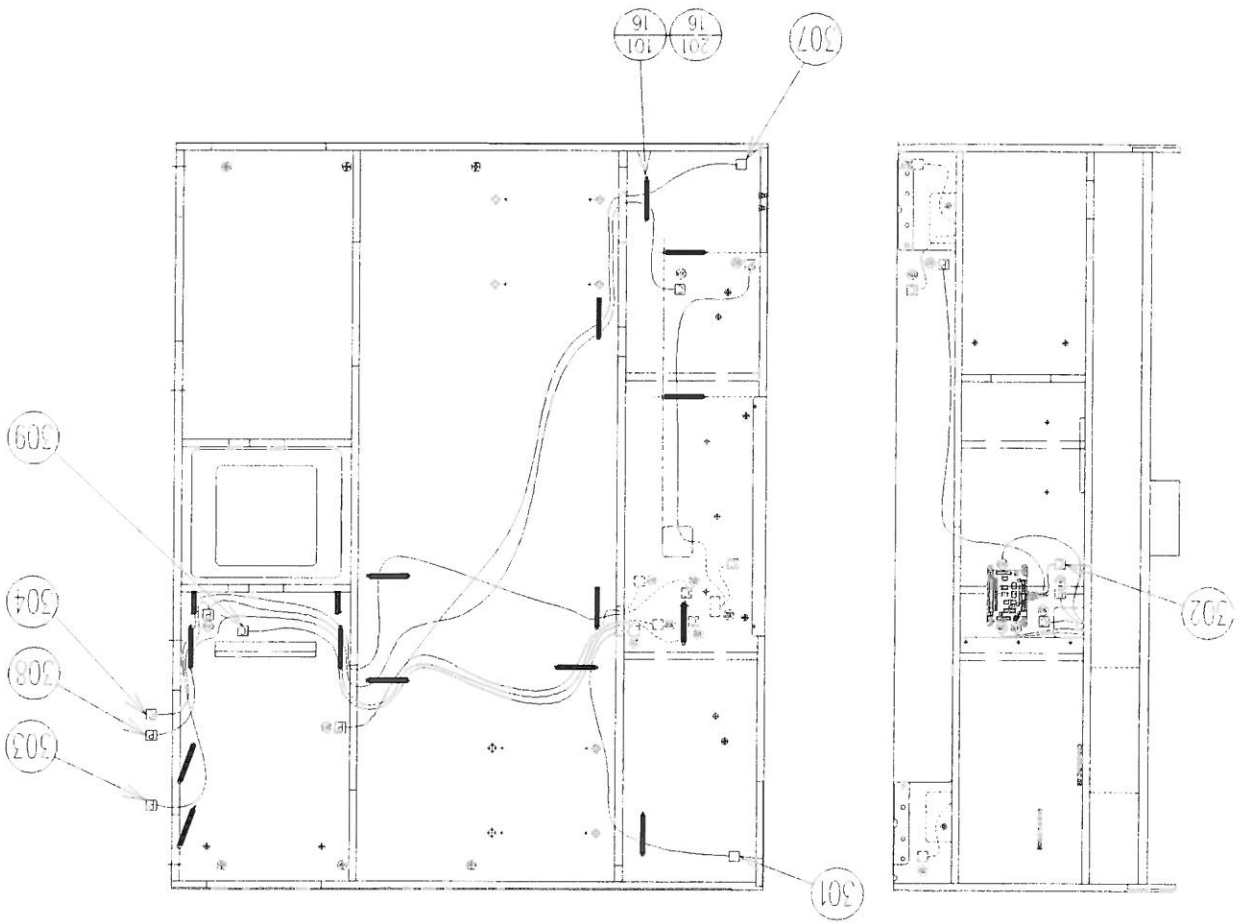

NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1211	CABINET AWAY CH
101	2805208	HARNES LUG CC-1007
201	011T03512	TAP SCR TH 3.5X12
301	CH600110006	WH IO BD SENSOR BD CONN
302	CH600110009X	WH LED BAR
303	CH600120001	WH SOLENOID AWAY
304	CH600120002	WH MOTOR EXT
305	CH600120003	WH DC5V EXT
306	CH600120004	WH SW/METER/DOOR/VOL EXT
307	CH600120005	WH IO/SENSOR BD AWAY
308	CH600120006	WH IO BD DC12V AWAY
309	CH600120008	WH TEST/SERVICE SW AWAY

⑦ ASSY DOOR HOME (CH1300)

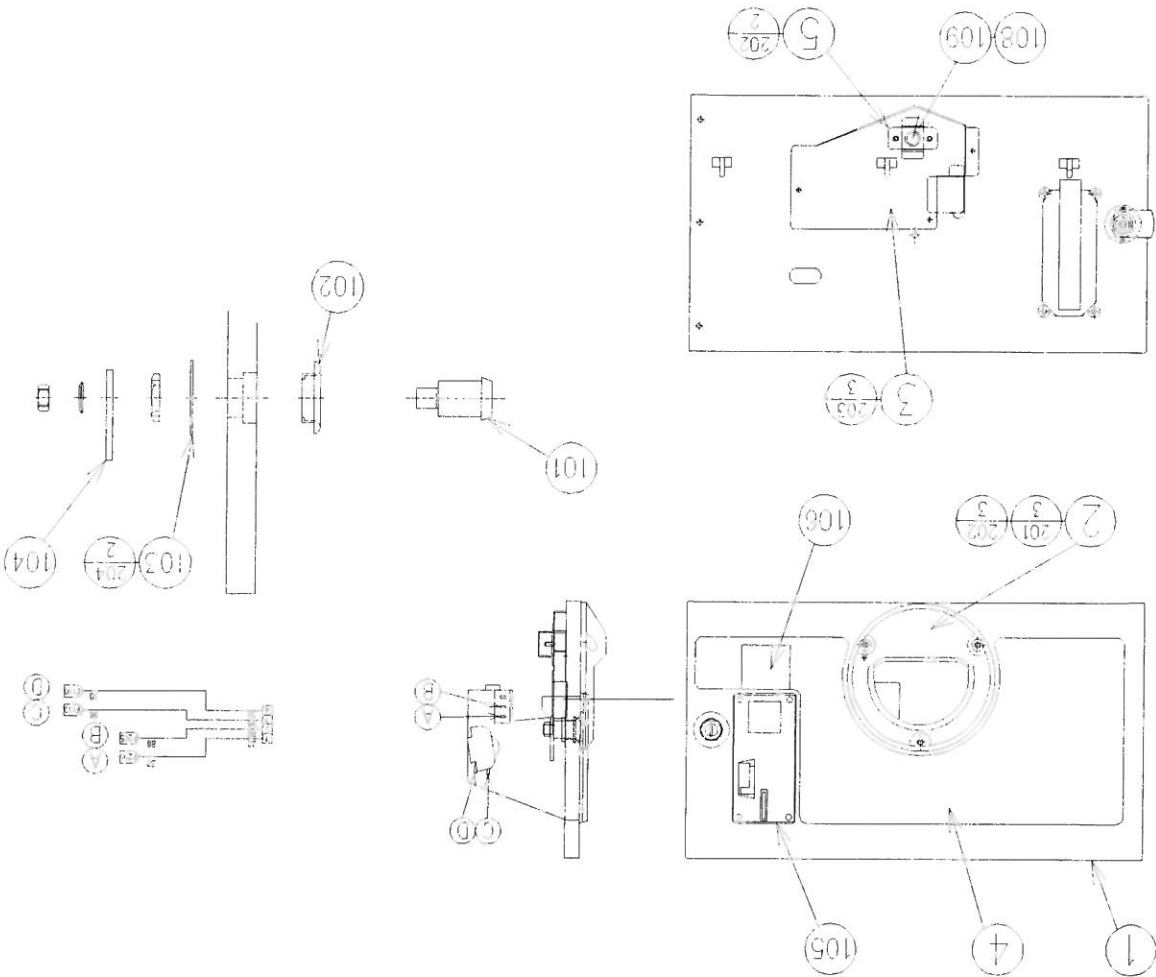


NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1301X	FRONT DOOR HOME
2	CH1302RD	PUCK OUT CV RD1
3	CH1303	PUCK OUT BRKT
4	CH1304RD	STICKER FRONT DOOR HOME RD1
5	CH1306	LED PLATE

101	22057931A001	CLY LOCK MASTER W/O KEY A001
102	2500021	ORNAMENTAL RING KP-1
103	250002201	LOCK RING KSP-SE
104	2200005	TONGUE PLATE
105	2200006	COIN SELECTOR PFB-730 DC12V ¥100
106	4210141	STICKER CAUTION COIN SHOOT
107	2805275SR10	CORD CLAMP SR10
108	2140011	WEDGE BASE SKT W/TUBE&CONN
109	3900059R12	LED RED SANWA LED-R-12V
110	6010460	PLASTIC TIE BELT 100 M/M
201	0310004160C	CRG BLT GRM M4X16
202	050F00400	FLG NUT M4
203	011T03512	TAP SCR TH 3.5X12
204	011F00312	TAP SCR #1 FH 3X12
301	CH600130001	COIN SW BLOCKER

⑧ ASSY DOOR AWAY (CH1400)

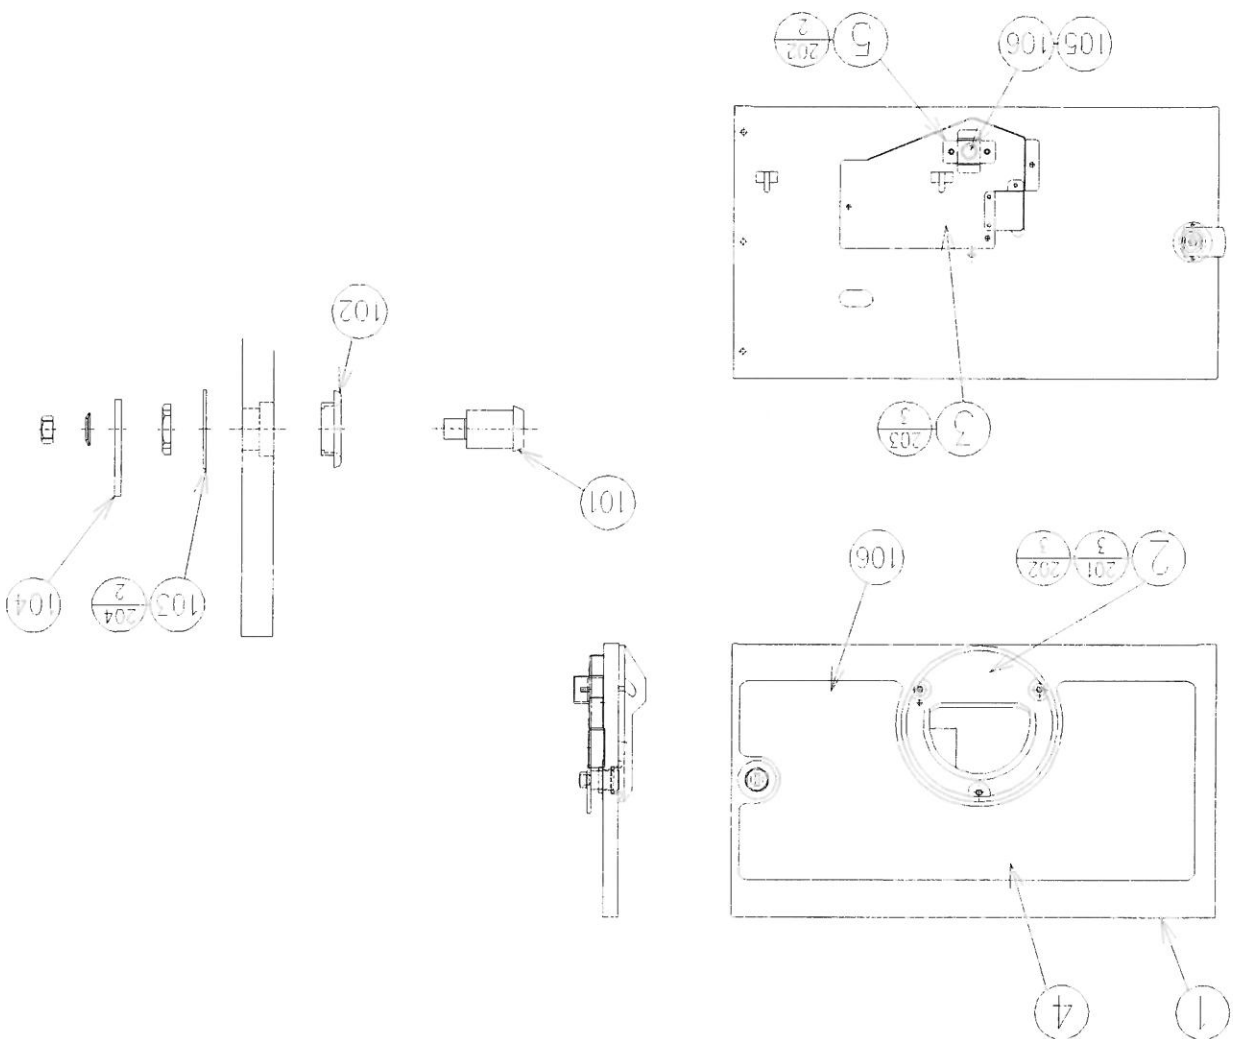


NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1401X	FRONT DOOR AWAY
2	CH1302RD	PUCK OUT CV RD1
3	CH1303	PUCK OUT BRKT
4	CH1305RD	STICKER FRONT DOOR AWAY RD1
5	CH1306	LED PLATE

204	011F00312	TAP SCR #1 FH 3X12
203	011T03512	TAP SCR TH 3.5X12
202	050F00400	FLG NUT M4
201	0310004160C	CRG BLT GRM M4X16
107	2805275SR10	CORD CLAMP SR10
106	3900059R12	LED RED SANWA LED-R-12V
105	2140011	WEDGE BASE SKT W/TUBE&CONN
104	2200005	TONGUE PLATE
103	250002201	LOCK RING KSP-SE
102	2500021	ORNAMENTAL RING KP-1
101	22057931A001	CLY LOCK MASTER W/O KEY A001


⑨ ASSY SW&VOLUME (CH1500)

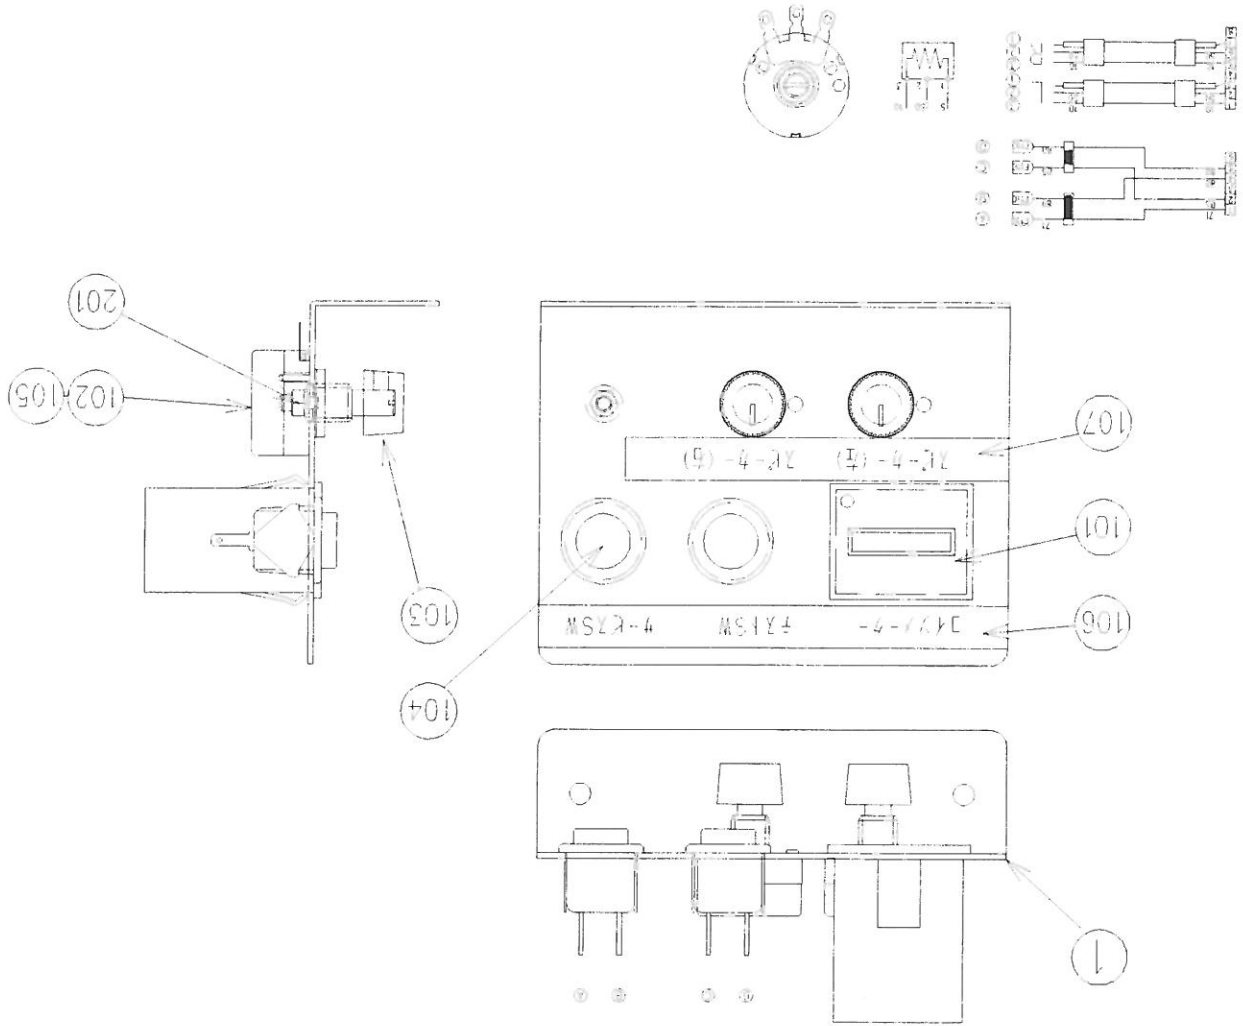

NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1501	VOL SW BASE
101	2200019	COIN METER TORII MZ-674-D41
102	2200012B2	VOL CONT TOCOS RV24YN20S15B503
103	6010018	KNOB 15.5MM
104	5095875	SW PB(SHINDEN SDP-103C)
105	3105029D15	SUMITUBE F D15MM
106	421020301	STICKER SW
107	4210204	STICKER VOLUME
201	050F00400	FLG NUT M4
301	CH600150001	WH TEST/SERVICE SW
302	CH600150002	WH VOLUME


⑩ ASSY SW (CH1550)

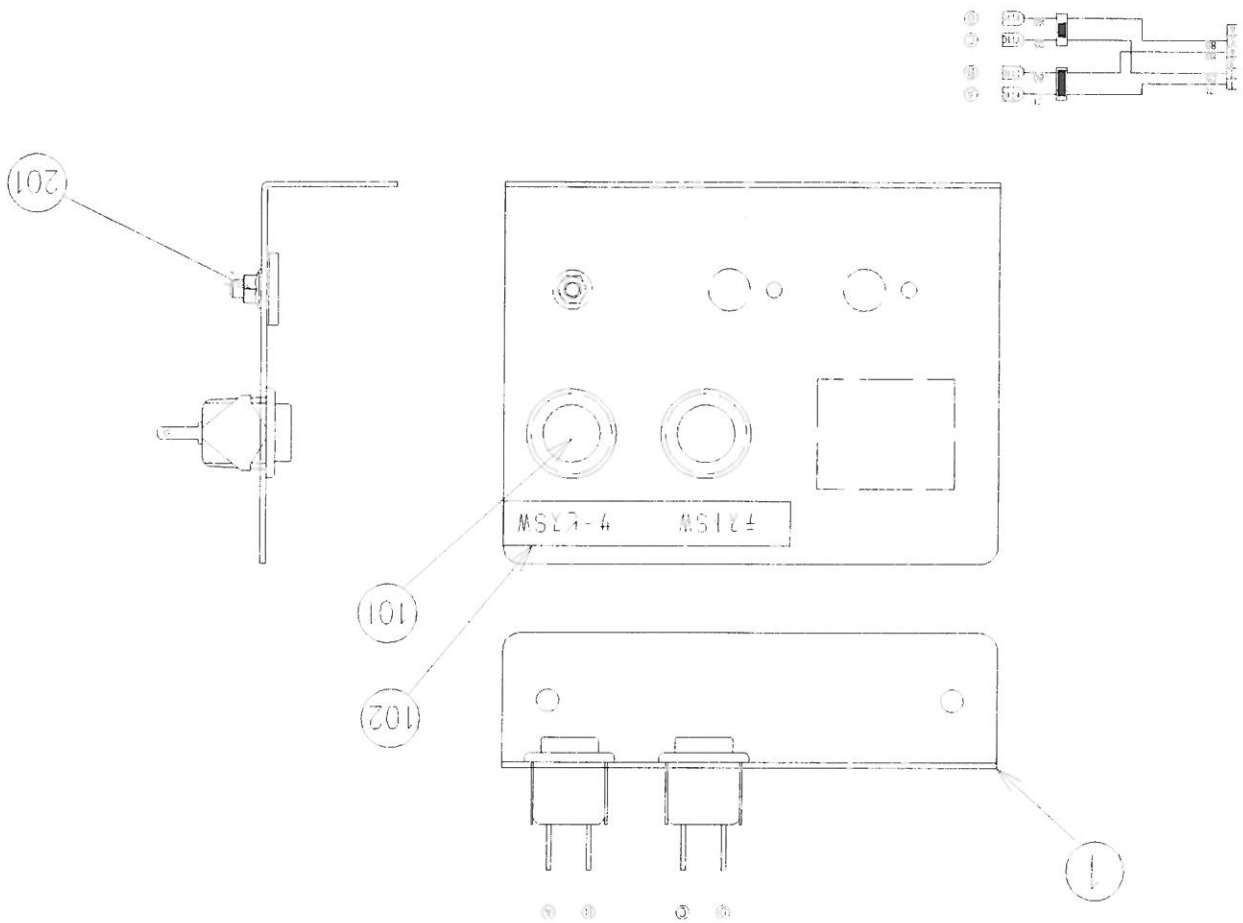

NOTE

ITEM No.	PART No.	DESCRIPTION
101	5095875	SW PB(SHINDEN SDP-103C)
102	421020302	STICKER SW
201	050F00400	FLG NUT M4
301	CH600150001	WH TEST/SERVICE SW

⑪ ASSY PUCK OUT (CH1600)

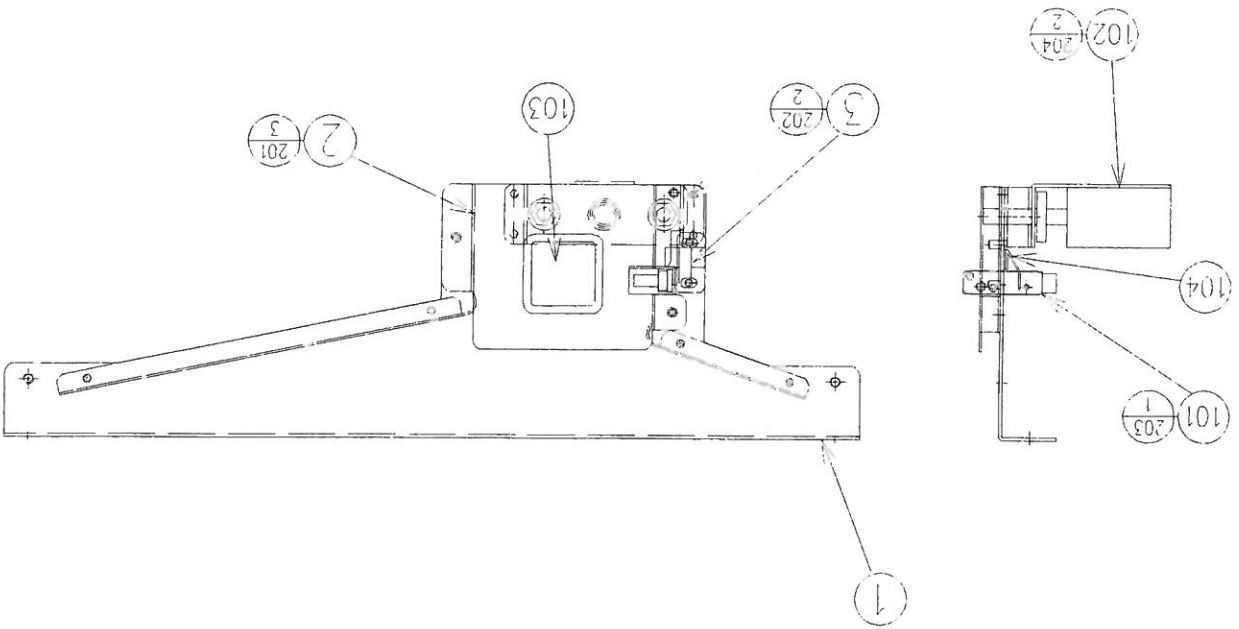


NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1601	PUCK OUT BASE
2	CH1602	SENSOR CV
3	CH1603	SENSOR STAY BRKT
101	6010011	SENSOR KI1248-AALF
102	124000193	SOLENOID TAKAHARA KIKO T1053090B
103	421006403	STICKER CAUTION STUCK
104	2805275SR10	CORD CLAMP SR10
201	000P00408W	M SCR PH 4X8 W/FS
202	050F00400	FLG NUT M4
203	000P00312W	M SCR PH 3X12 W/FS
204	000P00612W	M SCR PH 6X12 W/FS
301	CH600160001	WH GOAL SENSOR

⑫ ASSY BLOCK MECHA (CH1700)

(D-1/2)

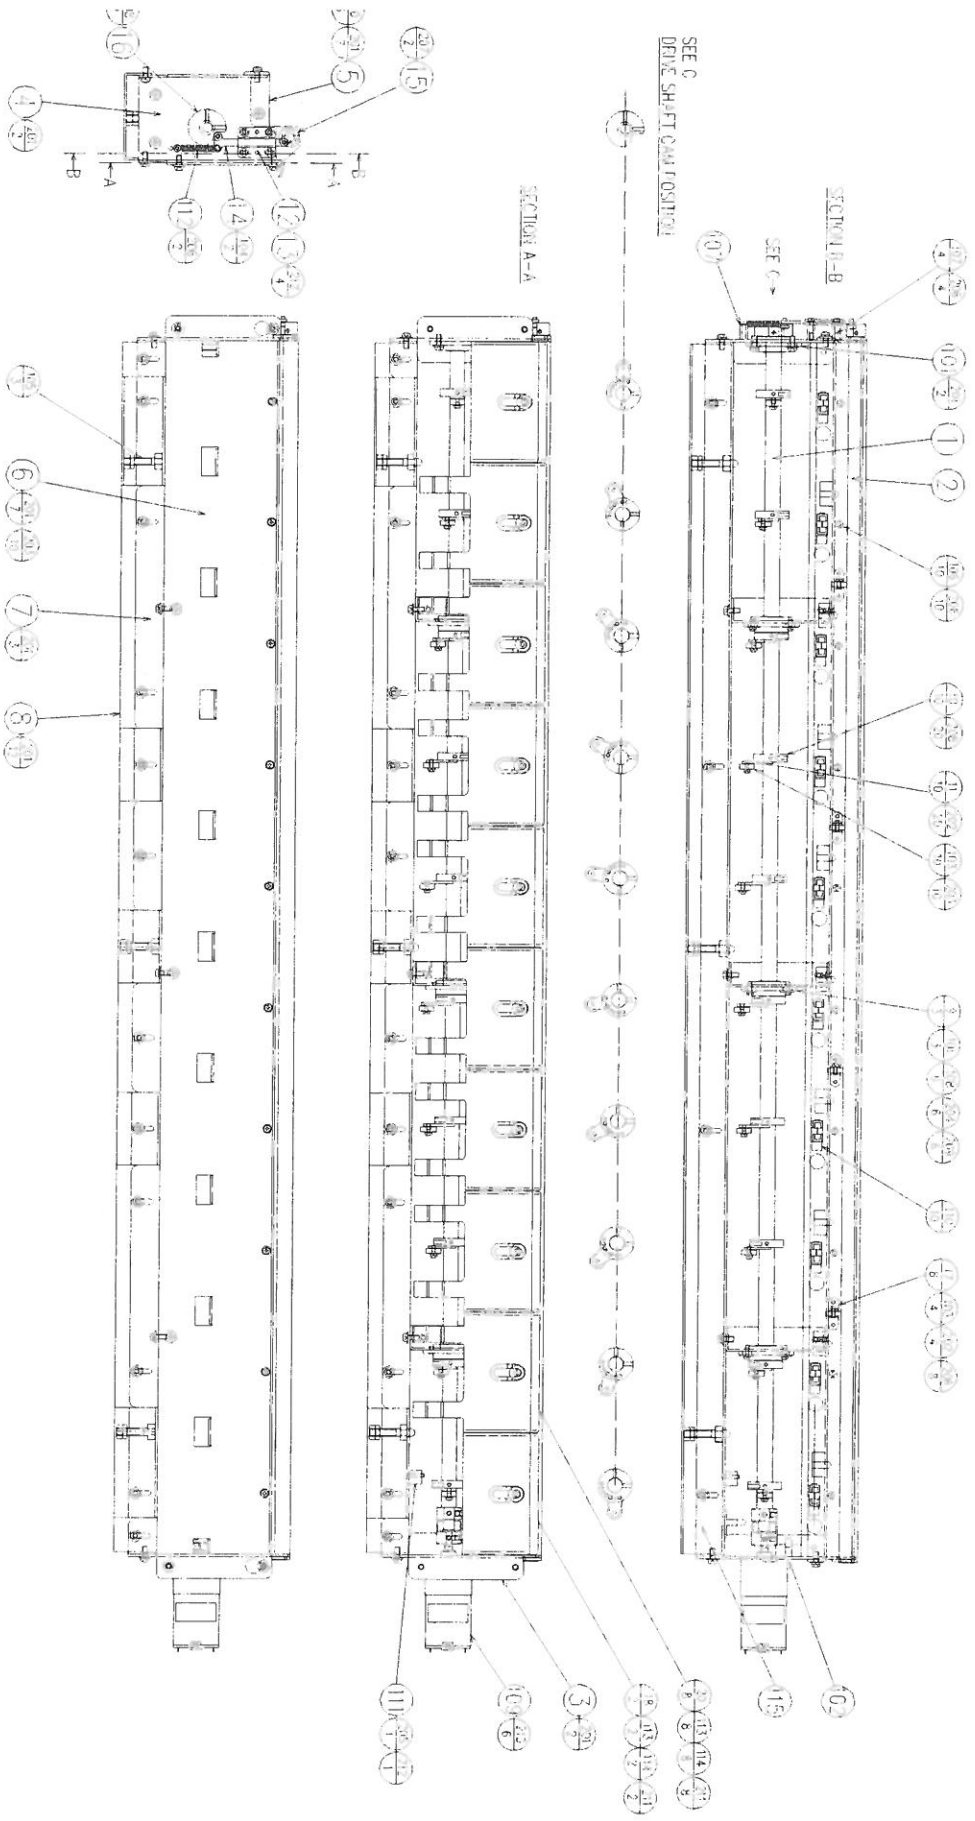


(D-2/2)

NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH1701	DRIVE SHAFT
2	CH1702	RESET SHAFT
3	CH1703	MOTOR BASE
4	CH1704	RESET BASE
5	CH1705	TOP FRAME
6	CH1706	BACK COVER
7	CH1707	BOTTOM FRAME
8	CH1708	MECHA BASE
9	CH1709	SUPPORT BRKET
10	CH1710	CRANK RING
11	CH1711	CRANK PLATE
12	CH1712	LINK BASE
13	CH1713	LINK COVER
14	CH1714	RESET LINK
15	CH1715	RESET CAM UPPER
16	CH1716	RESET CAM LOWER
17	CH1717	RESET SHAFT SUPPORT
18	CH1718	BLOCK PLATE
20	CH1720	BLOCK PLATE W/PLUMB
101	1000022	OILES BEARING 80FL-12
102	1000023	OILES BEARING GSF-081235
103	1000024	TOK BEARING DRS12H3
104	1000025	BEARING NTB67-4 MISUMI
105	1230031	MINI JACK IMAO BJ331-06001
106	2800064328S	STAINLESS SPACER ARU-328S
107	2800066313	STEEL SPACER BSF-313E
108	28000673035	STEEL SPACER CF-303.5E
109	3500027	MOTOR TG-85C-SM-300-HAL9.24V
110	3700008	PHOTO INTERRUPTER GP1A71AJ000F
111	3700015	PHOTO SENSOR KR1207
112	1250015	EXTENSION SPRING SUS304WPB0.6-L25-5.5
113	1250016	COMPRESSION SPRING SUS304WPB0.5-L8-8
114	2800068061210	PLASTIC WASHER GC-0612-10
115	3500028	COUPLING MIKI ALS-020-R-6-8
116	2805275SR10	CORD CLAMP SR10
117	2805277	TL-18A
118	3105029D20	SUMMITUBE F D 20MM
201	000P00410W	M SCR PH W/FS M4X10
202	000P00308S	M SCR PH W/S M3X8
203	000P00308W	M SCR PH W/FS M3X8
204	000P00310S	M SCR PH W/S M3X10
205	000P00316W	M SCR PH W/FS M3X16
206	000F00306	M SCR FH M3X6
207	028A00304P	SET SCR HEX SKT CUP P M3X4
208	028A00310P	SET SCR HEX SKT CUP P M3X10
209	FAS680006	FLT WSHR GRM 3.3-12X1
210	000F00408D6	M SCR FH D6 M4X8
211	065CS006	CS RING CSTW-6
212	050F00300	FLG NUT M3
213	000P00306S	M SCR PH W/S M3X6
301	CH600170001	WH BLOCK SENSOR
302	CH600170002	WH MOTOR

NOTE

⑭ ASSY LEG (CH1900)

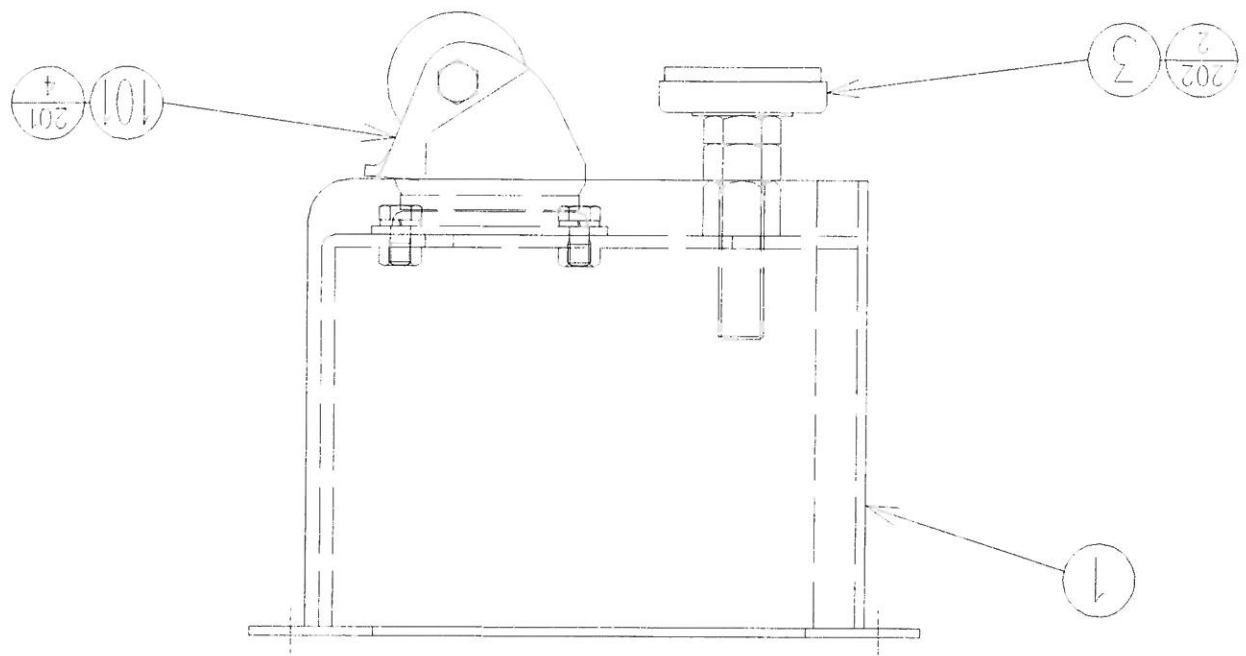


NOTE

ITEM No.	PART No.	DESCRIPTION
201	030000816S	HEX BLT W/S M8X16
202	050H016000B	HEX NUT BLK M16
101	601002001	CASTER ϕ 50 YUEI UHG-50GFB
102	6010058	LEGADJUSTER TAKIGEN KC-280-2
1	CH1031	CABINET LEG

⑮ ASSY TOWER (CH3000)


(D-1/2)

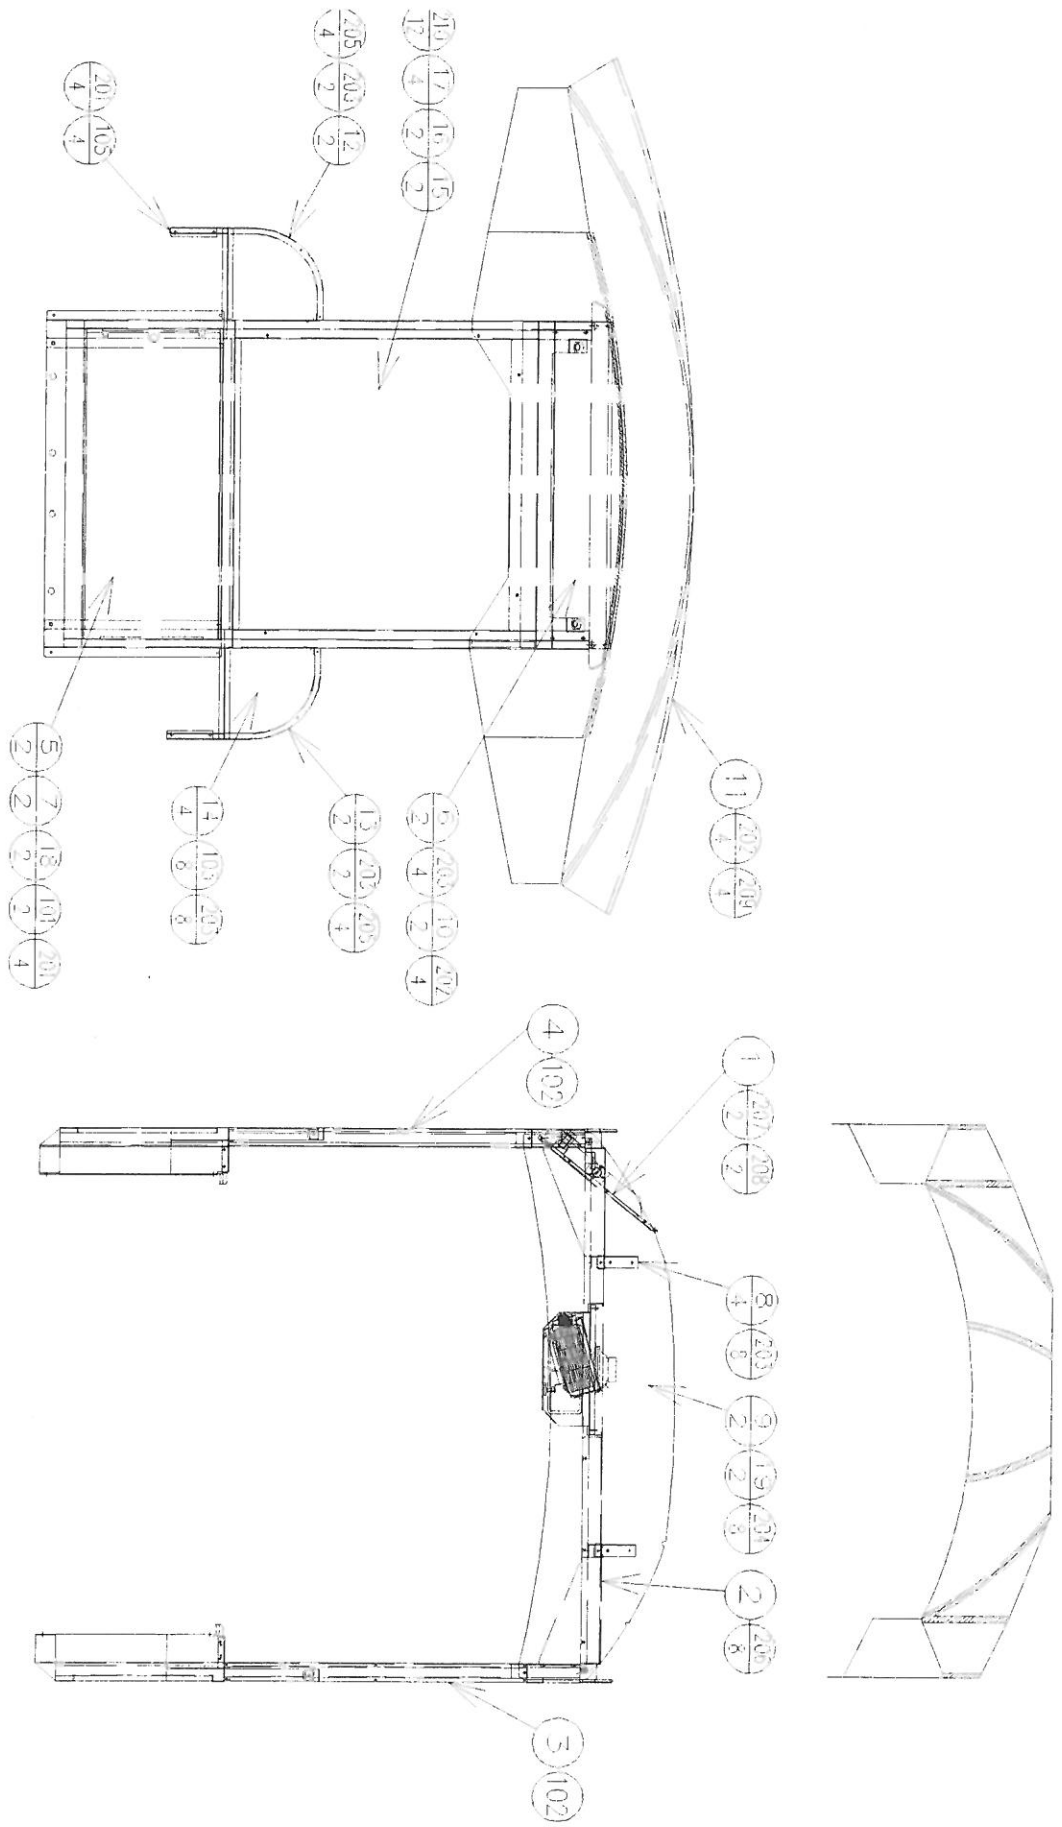

NOTE

ITEM No. PART No.	DESCRIPTION
1	CH3100 ASSY MIRROR
2	CH3200 ASSY BRDGE
3	CH3001 SIDE TOWER
4	CH3002 SIDE TOWER W/M20
5	CH3003 SIDE TOWER LID
6	CH3004 TOP COVER BRKT
7	CH3005 TONGUE CH
8	CH3006 TOP BOARD BRKT
9	CH3007 TOP BOARD
10	CH3008 SIDE TOP BOARD
11	CH3009RD OUT COVER RD1
12	CH301001 SIDE FENCE FRAME L
13	CH301002 SIDE FENCE FRAME R
14	CH3011 SIDE FENCE PANEL
15	CH3012 TOWER CLEAR PANEL
16	CH3013 TOWER CLEAR PANEL BRKT TOP
17	CH3014 TOWER CLEAR PANEL BRKT SIDE
18	CH3015RD STICKER SIDE TOWER LID RD1
19	CH3016 STICKER TOP BOARD
101	22057931A001 CLY LOCK MASTER W/O KEY A001
102	280006314 LOCKING HOLE PLUG 1187
103	2800056503 PLASTIC SPACER C-503
104	2805277 CORD CLAMP 18
105	2530076 PIPE END CAP 40X20
201	000T004100B M SCR TH BLK M4X10
202	000T004160B M SCR TH BLK M4X16
203	000T005100B M SCR TH BLK M5X10
204	000T005160B M SCR TH BLK M5X16
205	0300000520WB HEX BLT W/FS BLK M5X20
206	0300000612WB HEX BLT W/FS BLK M6X12
207	030002050 HEX BLT M20X50
208	0500020 MEX NUT M20
209	0684416160B FLT WSHR BLK 4.4-16X1.6
210	000T004060B M SCR TH BLK M4X6
301	CH600300001 WH SPEAKER/SERIAL EXT

⑩ ASSY MIRROR (CH3100)

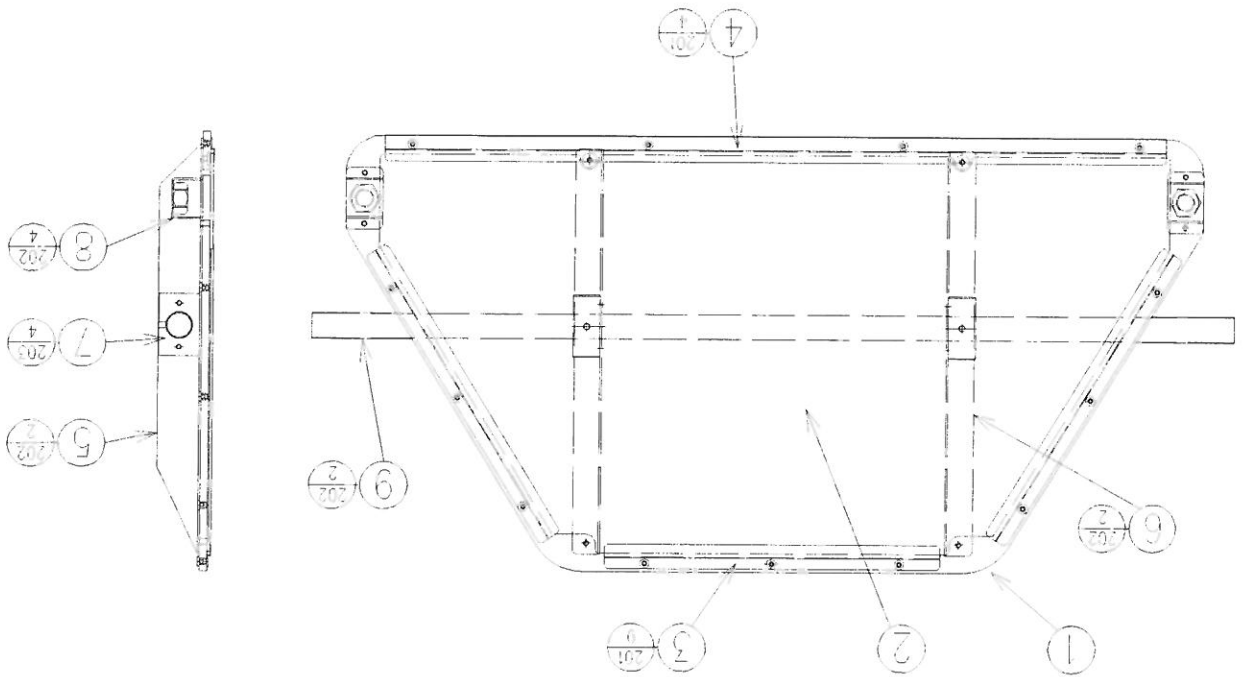


NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH3101	MIRROR BOARD
2	CH3102	MIRROR CH
3	CH3103	MIRROR BRKT SHORT
4	CH3104	MIRROR BRKT LONG
5	CH310501	MIRROR BACK BRKT L
6	CH310502	MIRROR BACK BRKT R
7	CH3106	MIRROR BAR SUPPORT
8	CH3107	M20 BRKT
9	CH3108	MIRROR BAR
201	000P00410W	M SCR PH 4X10 W/FS
202	000T005160C	M SCR TH CRM 5X16
203	000P00535W	M SCR PH 5X35 W/FS

⑰ ASSY BRIDGE (CH3200)


(D-1/2)

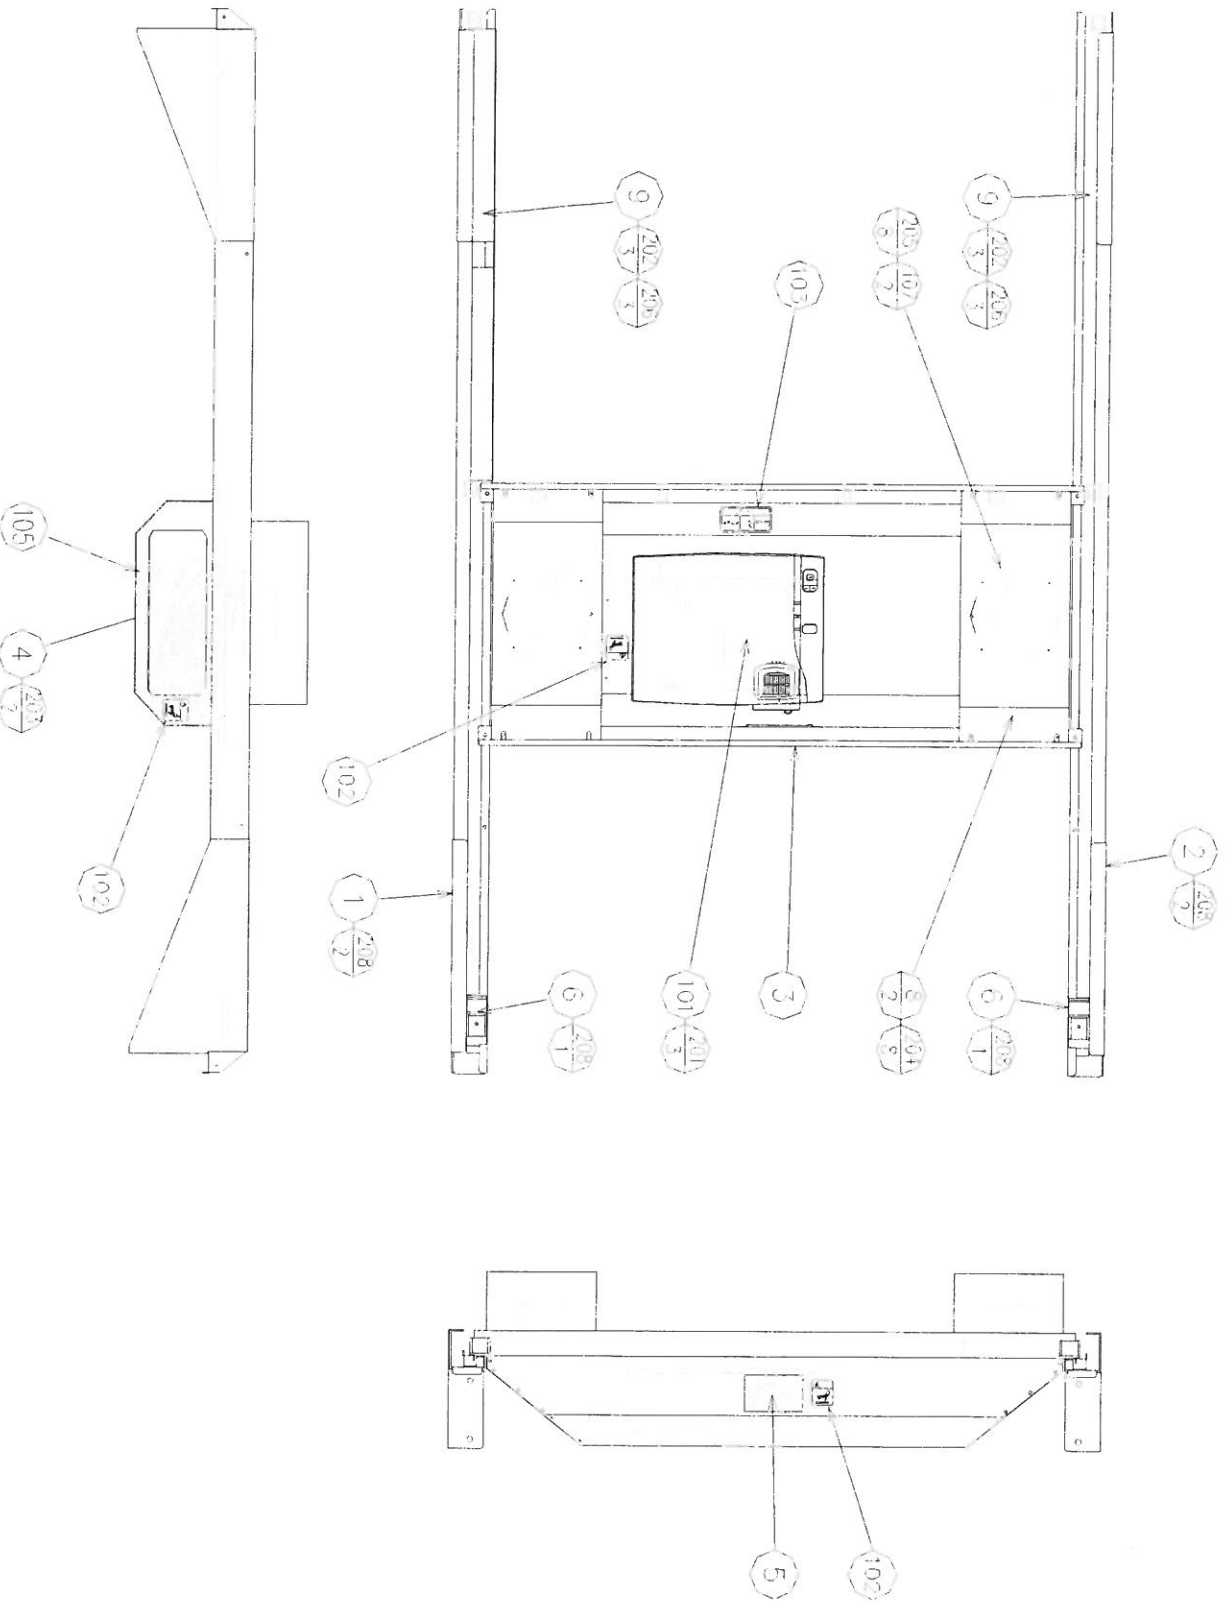

NOTE

ITEM No.	PART No.	DESCRIPTION
1	CH320101	TOP BRIDGE L
2	CH320102	TOP BRIDGE R
3	CH3202	PROJECTOR BRIDGE
4	CH3203	PROJECTOR BASE
5	CH3204	PROJECTOR GUARD
6	CH3205	PJ706B
7	CH3206	FAN BRKT
8	CH3207	SPEAKER BOARD
9	CH3208	LINE COVER
101	2000009	DLP PROJECTOR TAXAN KG-PH1004XS
102	421006402	STICKER CAUTION HIGH TEMP
103	4210015	STICKER CAUTION ELEC SHOCK
104	6000020VM5	HD 15PIN PLUG/PLUG 5M (KC-VM5)
105	601012303	LEG ADJUSTER SUGATSUNE MN-36M10
106	2805277	CORD CLAMP 18
107	1300007	SPEAKER TOPSTONE F160A139-4
201	000P00408W	M SCR PH 4X8 W/FS
202	000P00410W	M SCR PH 4X10 W/FS
203	000P00412WB	M SCR PH BLK 4X12 W/FS
204	050F00400	FLG NUT M4
205	011T03512	TAP SCR TH 3.5X12
206	068441616	FLT WSHR 4.4-16X1.6
207	068452016OB	FLT WSHR BLK 4.5-20X1.6
208	000P00510W	M SCR PH 5X10 W/FS
301	CH600320001	WH PROJECTOR SERIAL
302	CH600320002	WH SPEAKER
303	CH600320003	WH SPEAKER BOX


⑱ ASSY CENTER NET (CH3500)

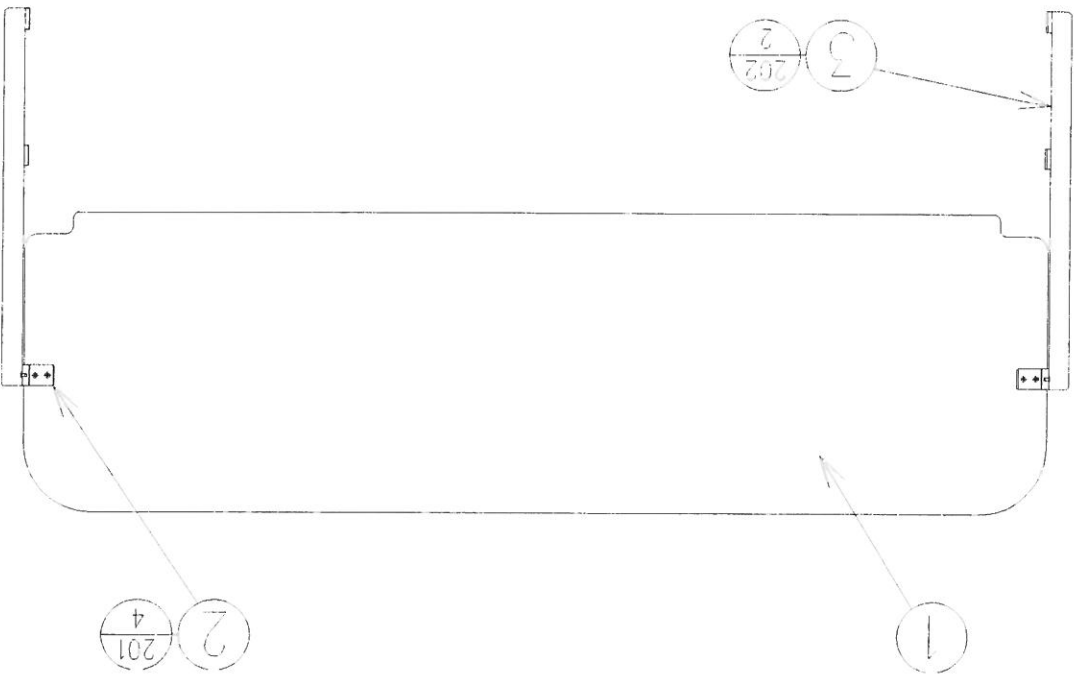

NOTE

ITEM No.	PART No.	DESCRIPTION
201	CH3501	CENTER_NET_PANEL
2	CH3502	CENTER NET HOLDER
3	CH3503	CENTER NET BRKT
201	000P00420	M SCR PH M4X20
202	000P00512W	M SCR PH W/FS M5X12

⑨ ASSY MAIN BASE (CH4000)

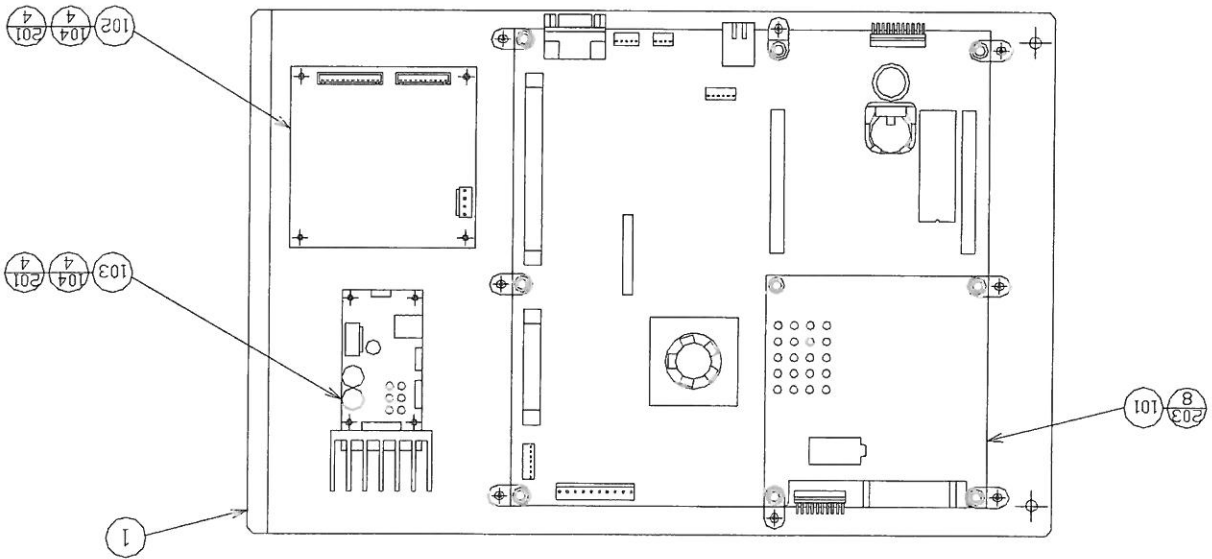


NOTE

ITEM No. PART No.	DESCRIPTION
-------------------	-------------

101	834000201	SP HUH IMAGE RD1
102	839003801	CONTROL BD HOCKEY
103	8370033	AMP BOARD
104	253002805	PLASTIC SPACER TKK PS-305
105	2805207	HARNES LUG CC-1005
201	011P00316	TAP SCR #1 PH 3X16
202	011T03512	TAP SCR TH 3.5X12
203	011T03516	TAP SCR TH 3.5X16
301	CH600400001	WH DGSV/12V EXT
302	CH600400002	WH AMP BD DC IN
303	CH600400003	WH SP BD RA CONN
304	CH600400004	WH SP BD SOUND OUT
305	CH600400005	WH AMP VOLUME
306	CH600400006	WH AMP SPEAKER OUT
307	CH600400007	WH SP BD SERIAL OUT1
308	CH600400008	WH SP BD SERIAL OUT2
309	CH600400009	WH CNTRL BD IN/OUT

②0 ASSY ELEC BASE (CH4100)

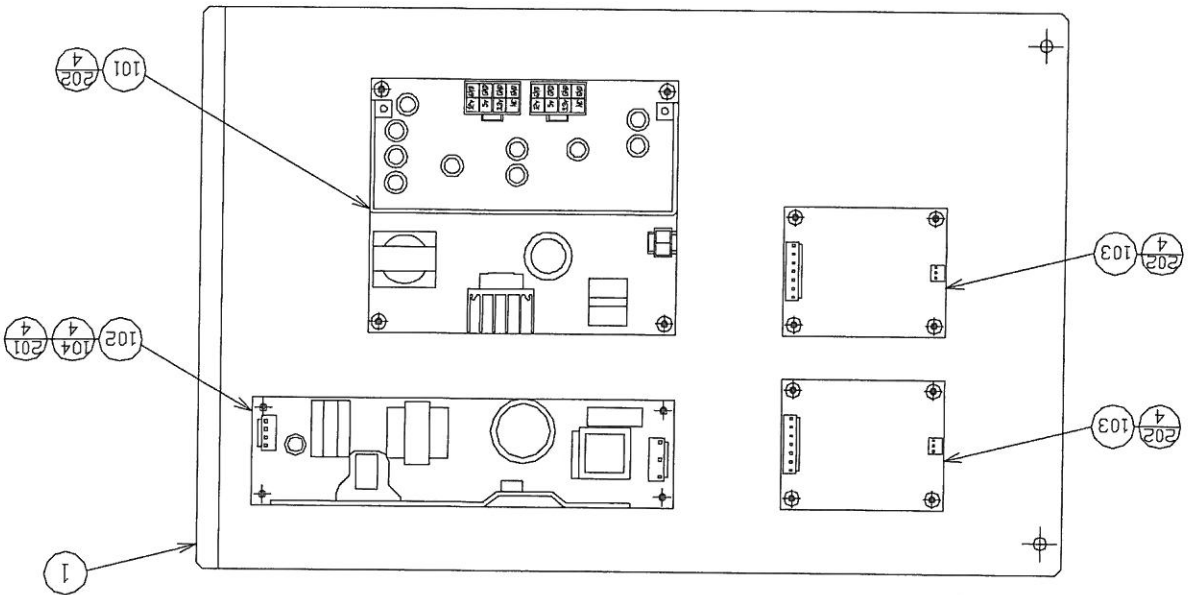

NOTE

ITEM No. PART No. DESCRIPTION

101	4005458	SW REGU 3.3V4.2A 5V4A 12V1.5A
102	400542105024	SW REGU LCA50S-24
103	837002591	SSR BOARD 3A
104	253002805	PLASTIC SPACER TTK PS-305
105	2805207	HARNES LUG CC-1005
201	011P00316	TAP SCR #1 PH 3X16
202	011P00325	TAP SCR PH 3X25
203	011T03512	TAP SCR TH 3.5X12
301	CH600410001	WH AC100V BRANCH
302	CH600410002	WH SW REGU AC IN
303	CH600410003	WH SW REGU DC OUT
304	CH600410004	WH SP BD DC IN
305	CH600410005	WH SSR BD SIGNAL IN

20. ワイヤーカラー対応表


次章の総合配線図に使用しているワイヤーカラーのコードは以下の通りです。

CODE WIRE COLOR

10	RED
20	BLUE
30	YELLOW
40	GREEN
50	WHITE
70	ORANGE
80	BLACK
90	GRAY
A	PINK
B	SKY BLUE
C	BROWN
D	PURPLE
E	LIGHT GREEN

注1. CODEの一の位が0でない場合は、十の位が地色、一の位がスパイラルの色となります。

<例> 51.....WHITE/RED

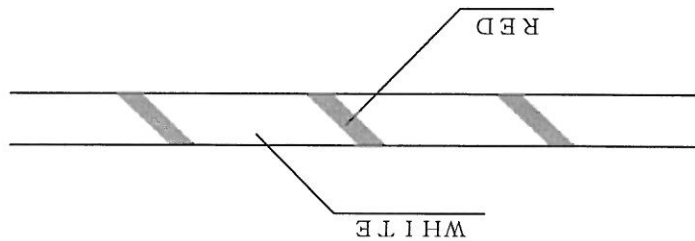

注2. WIRE COLOR CODEの後につく文字は、WIREの太さを表します。

U	:	AWG16	UL1015
K	:	AWG18	UL1015
L	:	AWG20	UL1007
なし	:	AWG22	UL1007

注3. 本製品の機器内電線の色は、JAMMA「業務用アミューズメント機器の機器内電線の色による識別ガイドライン」に適合しています。
DC5Vは赤色、DC12Vは黄色、GNDは黒色、AC100Vは白色。
・灰色を使用しております。